


<b>Title:</b>	DS-19A How to configure Alarm triggered Pop-out Image	<b>Version:</b>	v1.0	<b>Date:</b>	11/21/2018
<b>Product:</b>	DS-19A Series Network Security Control Panel			<b>Page:</b>	1 of 4

## Preparation

1. DS-19A series Network Security Control Panel or MBUS Security Control Panel
2. iVMS-4200 client


## How to configure Alarm triggered Pop-out Image

### 1. Open Event Management

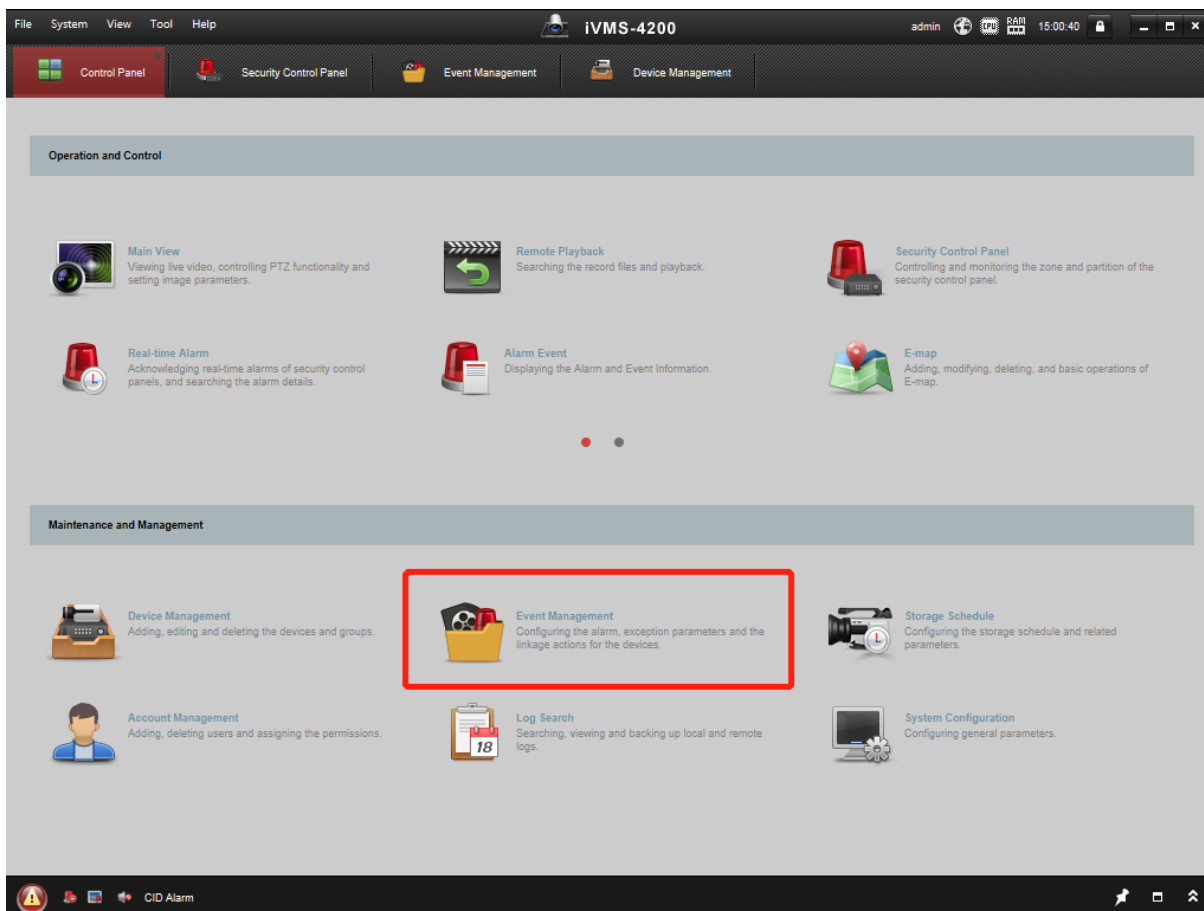

<b>Title:</b>	DS-19A How to configure Alarm triggered Pop-out Image	<b>Version:</b>	v1.0	<b>Date:</b>	11/21/2018
<b>Product:</b>	DS-19A Series Network Security Control Panel			<b>Page:</b>	2 of 4

## 2. Configure Event Management

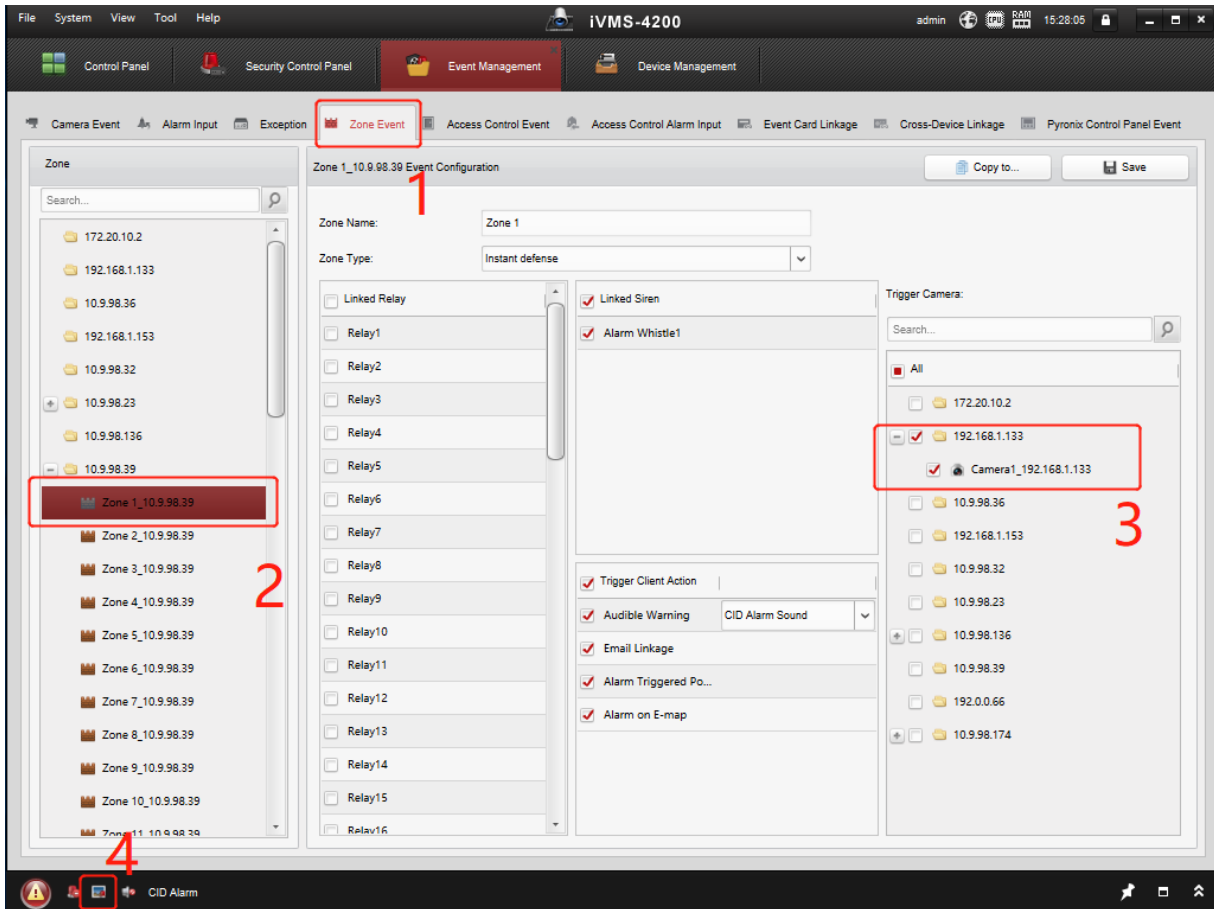


- 1) Select **Zone Event**.
- 2) Select Panel zone which you need link to camera.
- 3) Choose the camera.
- 4) Enable the Alarm Triggered Pop-out Image.
- 5) Click save.

## 3. Result test

- 1) Trigger the zone 1.
- 2) You can see the Pop-out Image---Alarm information, as below.

<b>Title:</b>	DS-19A How to configure Alarm triggered Pop-out Image	<b>Version:</b>	v1.0	<b>Date:</b>	11/21/2018
<b>Product:</b>	DS-19A Series Network Security Control Panel			<b>Page:</b>	3 of 4

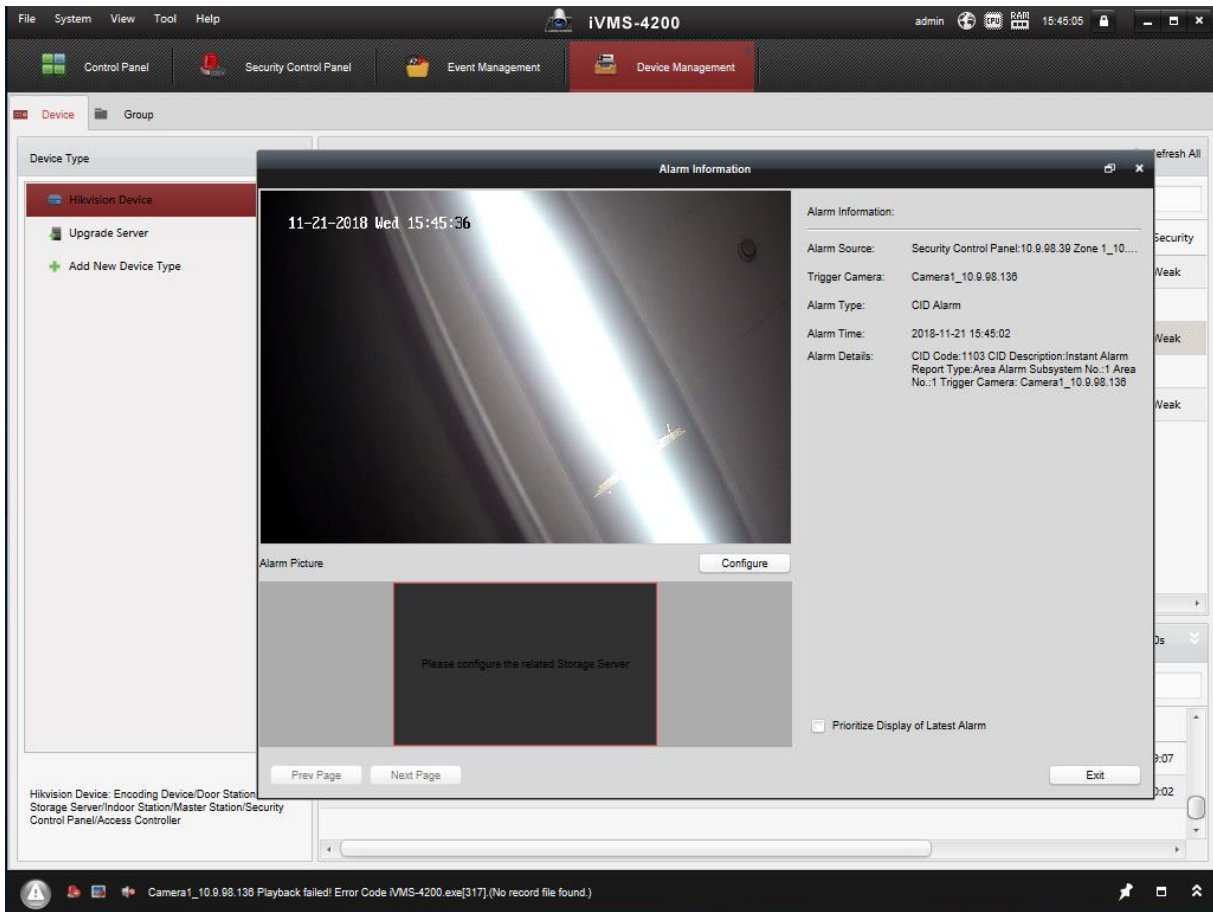



<b>Title:</b>	DS-19A How to configure Alarm triggered Pop-out Image	<b>Version:</b>	v1.0	<b>Date:</b>	11/21/2018
<b>Product:</b>	DS-19A Series Network Security Control Panel			<b>Page:</b>	4 of 4

**First Choice for Security Professionals**  
***HIKVISION* Technical Support**