


Title:	DS-19A How to configure One key Arm	Version:	v1.0	Date:	11/21/2018
Product:	DS-19A Series Network Security Control Panel			Page:	1 of 2

Preparation

1. DS-PK00M-LCD or DS-PK-L
2. DS-19A series Network Security Control Panel or MBUS Security Control Panel
3. iVMS-4200 client

How to configure one key Arm


1. Connect keypad to Security control panel.
2. Connect Security control panel to iVMS-4200.
3. Open remote configuration
 - 1) Partition---Basic Settings---Enable Duress Report.
 - 2) Save.

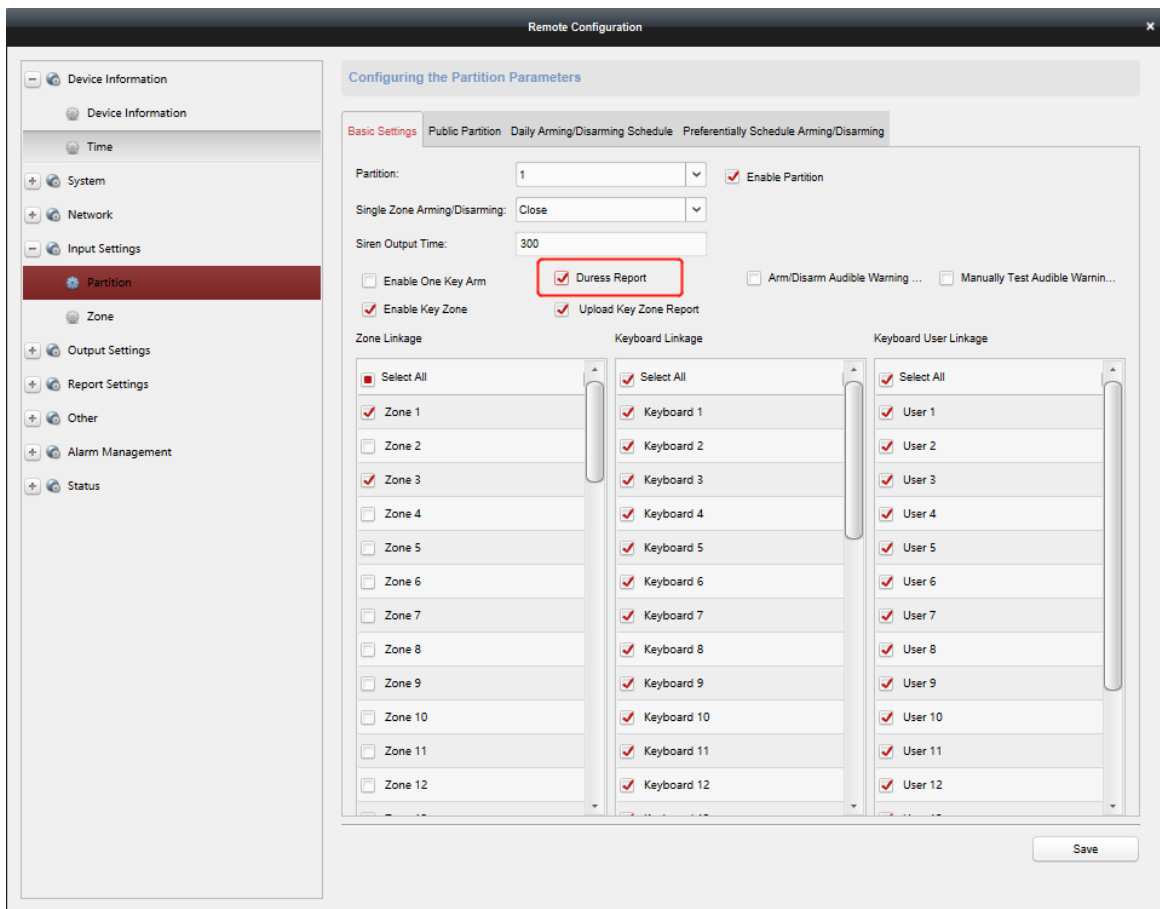

Title:	DS-19A How to configure One key Arm	Version:	v1.0	Date:	11/21/2018
Product:	DS-19A Series Network Security Control Panel			Page:	2 of 2

4. Keypad operate

- 1) For example, user password is 1234.
- 2) Duress password is **1235 or 1233** (Last number of user password ± 1)
- 3) **Disarm the panel** use Duress password, you will see the Duress Report as below.

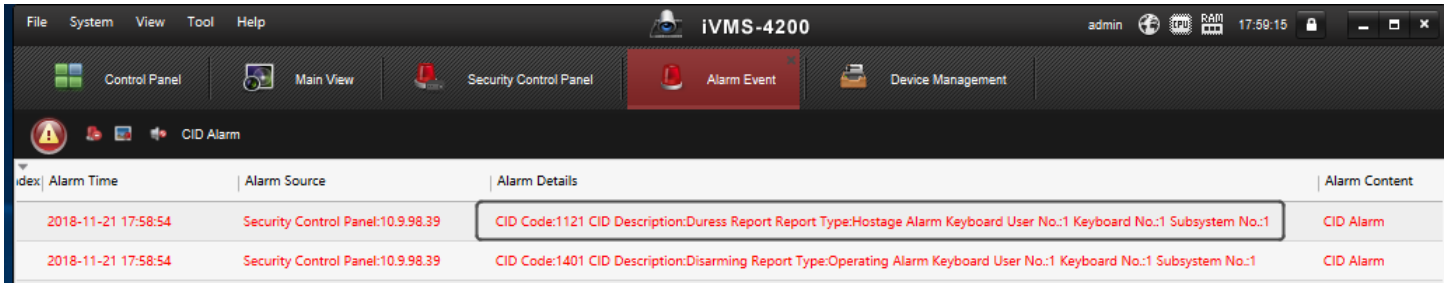

The screenshot shows the iVMS-4200 software interface. The top menu bar includes File, System, View, Tool, and Help. The main navigation bar has buttons for Control Panel, Main View, Security Control Panel, Alarm Event (highlighted), and Device Management. A 'CID Alarm' notification is visible in the top left. Below the navigation bar is a table with the following columns: Index, Alarm Time, Alarm Source, Alarm Details, and Alarm Content. Two rows of alarm events are listed.

Index	Alarm Time	Alarm Source	Alarm Details	Alarm Content
	2018-11-21 17:58:54	Security Control Panel:10.9.98.39	CID Code:1121 CID Description:Duress Report Report Type:Hostage Alarm Keyboard User No.:1 Keyboard No.:1 Subsystem No.:1	CID Alarm
	2018-11-21 17:58:54	Security Control Panel:10.9.98.39	CID Code:1401 CID Description:Disarming Report Type:Operating Alarm Keyboard User No.:1 Keyboard No.:1 Subsystem No.:1	CID Alarm

First Choice for Security Professionals
HIKVISION Technical Support