

<b>Title:</b>	How to Disable Analog Channels to Expand IP Channels	<b>Version:</b>	v1.0	<b>Date:</b>	12/13/2019
<b>Product:</b>	Cameras, DVR			<b>Page:</b>	1 of 5

## Preparation


To meet customers' requirement for connecting analog and IP cameras in different rate, Hikvision Turbo HD DVR provide the function of disabling analog channels to expand IP channels. This document is mainly to introduce how to achieve this function.

### Note:

1. Different series device have different abilities of expanding IP channels. You can refer to the file for more details.
2. Disabling one analog channel can expand one IP channels.

## How to Disable Analog Channels to Expand IP Channels

### 1. Here take DS-7332HQHI-K4 as example.

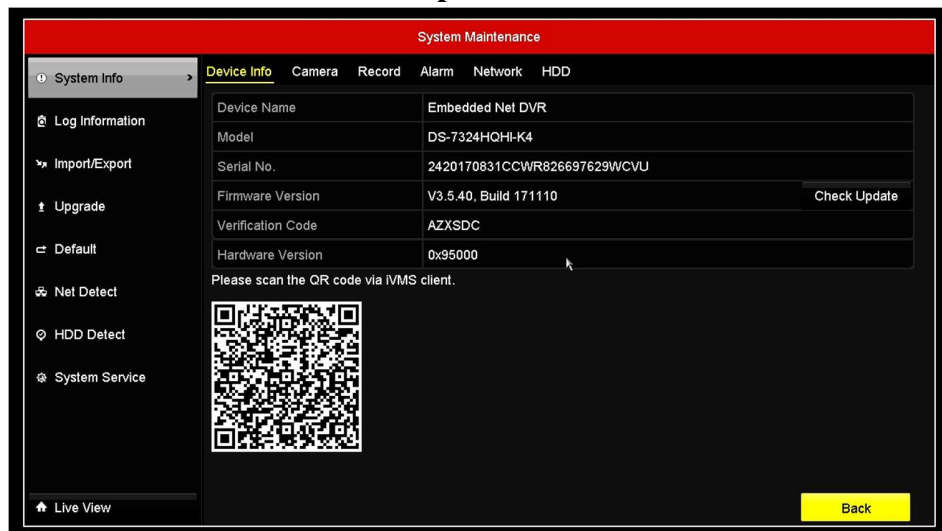


### 2. The default ability of connecting IP cameras is 8. Camera->Signal Input Status

<b>Title:</b>	How to Disable Analog Channels to Expand IP Channels	<b>Version:</b>	v1.0	<b>Date:</b>	12/13/2019
<b>Product:</b>	Cameras, DVR			<b>Page:</b>	2 of 5



3. Click the IP icons to disable analog channels(HD/CVBS) and expand IP channels, it needs reboot to take effect.

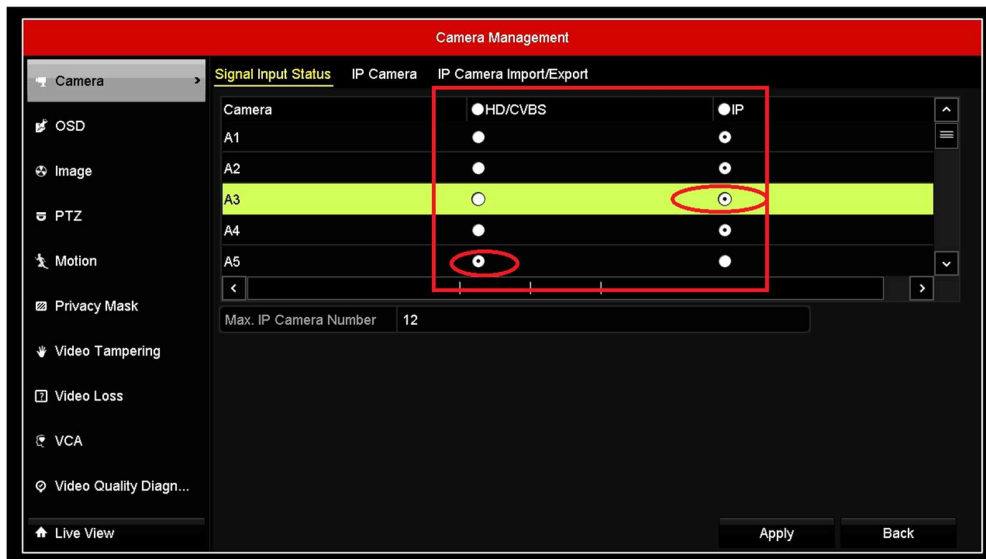

<b>Title:</b>	How to Disable Analog Channels to Expand IP Channels	<b>Version:</b>	v1.0	<b>Date:</b>	12/13/2019
<b>Product:</b>	Cameras, DVR			<b>Page:</b>	3 of 5



4. After rebooting, the max. IP camera is changed as 12, and first four channels can't connect analog any more.



## 5. How to Disable Analog Channels to Expand IP Channels on web

- 1) Log in the device on web. Configuration->System->Camera Management

<b>Title:</b>	How to Disable Analog Channels to Expand IP Channels	<b>Version:</b>	v1.0	<b>Date:</b>	12/13/2019	
<b>Product:</b>	Cameras, DVR				<b>Page:</b>	4 of 5

**HIKVISION** Live View Playback Picture **Configuration**

Local System System Settings Maintenance Security **Camera Management** User Management Network Video/Audio Image Event

**Analog Camera** IP Camera

<input type="checkbox"/> Enable	Camera Name
<input type="checkbox"/>	Camera 01
<input type="checkbox"/>	Camera 02
<input type="checkbox"/>	Camera 03
<input type="checkbox"/>	Camera 04
<input checked="" type="checkbox"/>	Camera 05
<input checked="" type="checkbox"/>	Camera 06
<input checked="" type="checkbox"/>	Camera 07
<input checked="" type="checkbox"/>	Camera 08

2) Tick and untick the corresponding channels to choose the usage of analog or IP.

**HIKVISION** Live View Playback Picture **Configuration**

Local System System Settings Maintenance Security **Camera Management** User Management Network Video/Audio Image Event Storage

**Analog Camera** IP Camera

<input type="checkbox"/> Enable	Camera Name
<input checked="" type="checkbox"/>	Camera 01
<input checked="" type="checkbox"/>	Camera 02
<input checked="" type="checkbox"/>	Camera 03
<input checked="" type="checkbox"/>	Camera 04
<input type="checkbox"/>	Camera 05
<input type="checkbox"/>	Camera 06
<input type="checkbox"/>	Camera 07
<input type="checkbox"/>	Camera 08
<input checked="" type="checkbox"/>	Camera 09



<b>Title:</b>	How to Disable Analog Channels to Expand IP Channels	<b>Version:</b>	v1.0	<b>Date:</b>	12/13/2019
<b>Product:</b>	Cameras, DVR			<b>Page:</b>	5 of 5

**See Far, Go Further**  
**HIKVISION Technical Support**