


DVR/NVR VGA&HDMI&BNC Output Comparison Chart V2.0

DVR/NVR Firmware Version	
DS-7604NI-SE/P, DS-7608NI-SE/8P	V2.3.7 Build 140122
DS-7200HWI-SH, DS-7300HWI-SH	V2.2.8 Build 130902
DS-9000/9600-ST/RT, DS-7716NI-SP/16	V3.0.2 Build 140126

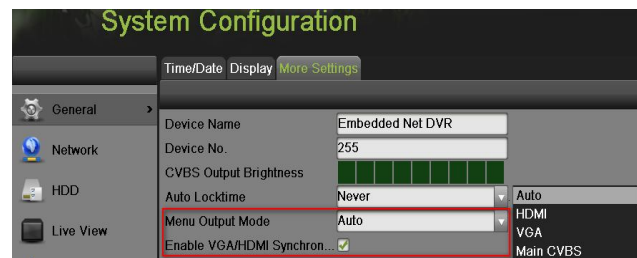

Menu->System Configuration->General----->

Model \ Output		Video Output Interfaces	Default Output Rules(When menu output is set to Auto)
DVR	DS-7200HWI-SH DS-7300HWI-SH	VGA, HDMI, Main BNC	<ol style="list-style-type: none"> VGA/HDMI are synchronous output. If VGA or HDMI is connected before DVR starts up, menu is output on VGA/HDMI. Otherwise, menu is output on BNC.
	DS-9000HFI-ST DS-9000HWI-ST	VGA, HDMI, Main BNC, 4 BNC spot outputs	<ol style="list-style-type: none"> DS-9000HFI-ST VGA/HDMI are configurable to either synchronous output or asynchronous output. DS-9000HWI-ST VGA/HDMI are synchronous output. VGA/HDMI are configured to synchronous: If VGA or HDMI is connected before DVR starts up, menu is output on VGA/HDMI. Otherwise, menu is output on main BNC. VGA/HDMI are configured to asynchronous(Uncheck synchronous) Menu output priority: HDMI > VGA > Main BNC BNC spot output supports 1-ch configurable analog video display only (IP video display is not supported on spot output).
NVR	DS-7604NI-SE/P DS-7608NI-SE/8P	VGA, HDMI	<ol style="list-style-type: none"> VGA/HDMI are synchronous output. Menu is output on VGA/HDMI.
	DS-7716NI-SP/16 DS-9600NI-ST/RT	VGA, HDMI, Main BNC	<ol style="list-style-type: none"> VGA and HDMI are configurable to either synchronous output or asynchronous output. VGA/HDMI are configured to synchronous: If VGA or HDMI is connected before DVR starts up, menu is output on VGA/HDMI. Otherwise, menu is output on BNC. VGA/HDMI are configured to asynchronous: Menu output priority: HDMI > VGA > BNC