

Title:	TB DS-2CExxDFT-F Configuration 092619NA	Version:	v1.0	Date:	092619
Product:	DS-2CExxDFT-F ColorVu Analog Cameras			Page:	1 of 4
Action Required:	None, Information Only				

Summary

The new DS-2CExxDFT-F Series cameras not only provide 7 x 24 full-color monitoring, but also can now activate a flashing light action when certain events are detected.

The connected DVR must be an –M Series device running firmware v4.20.200. If the camera is connected to a different DVR, Trigger Alarm Output will be enabled automatically and cannot not be changed.

Configuring a DS-2CExxDFT-F ColorVu Camera

■ Smart Light Configuration

1. Go to Main Menu > Smart Light to turn on/off the supplement light.



- 2. Set the following settings, as desired.
 - Light
 - Off (Default): Supplement light is off
 - **Auto:** Controls the light according to the environment's illumination.



Title:	TB DS-2CExxDFT-FConfiguration 070219NA	Version:	v1.0	Date:	092619
Product:	DS-2CExxDFT-F ColorVu Analog Cameras			Page:	2 of 4
Action Required:	None, Information Only				

SMART LIGHT				
LICHT	(OFF)			
THRESHOLD	₹2≯			
LEVEL	∢ 3 እ			
MODE	∢MODE1 ►			
ВАСК	<u>ل</u>			
EXIT	لـ,			
SAVE&EXIT				

l I CH T	(auto)
THRESHOLD	₹2 🕨
LEVEL	∢ 3 እ
MODE	(MODE1)
BACK	لے
EXIT	لے
SAVE&EXIT	لي

- Threshold (1 to 3): Sets device sensitivity. The higher the value, the easier the light will turn on.
- Level (1 to 5): Sets the maximum light intensity. If set to 5, it could reach the maximum intensity level, however the actual intensity is controlled by the camera according to the ambient illumination.

LIGHT	AUTO
THRESHOLD	120
LEVEL	∢ 3 ▶
MODE	∢MODE1 ►
ВАСК	لے
EXIT	لے
SAVE&EXIT	لے

© 2019 Hikvision USA Inc. All Rights Reserved.

18639 Railroad Street, City of Industry, CA 91748 • Phone: +1 909-895-0400 • Fax: +1 909-595-0788 E-Mail: <u>techsupport.usa@hikvision.com</u> • www.hikvision.com



Title:	TB DS-2CExxDFT-F Configuration 070219NA	Version:	v1.0	Date:	092619
Product:	DS-2CExxDFT-F ColorVu Analog Cameras			Page:	3 of 4
Action Required:	None, Information Only				

■ Linkage Action Configuration

1. In the DVR local configuration interface, **Configuration > Event > Smart Event**, there is a new flashing light alarm linkage action.



*Notice: please confirm the event output in "Live View" settings menu is the same with the real event output.

2. Click the setting icon to set the arming schedule.



TECHNICAL BULLETIN



Title:	TB DS-2CExxDFT-F Configuration 070219NA	Version:	v1.0	Date:	070219
Product:	DS-2CExxDFT-F ColorVu Analog Cameras			Page:	4 of 4
Action Required:	None, Information Only				



3. If you successfully configure the flashing light alarm, the next time an event is detected, it will flash for five seconds, then stop.