



Title:	Changing DVR/NVR Password				
Date:	01/05/2015	Version:	1.0	Pages	2
Product:	All current Hikvision DVR/NVR models				
Action Required:	Information only				

To successfully change the default password on a Hikvision DVR/NVR, please go to:

MENU→SYSTEM CONFIGURATION

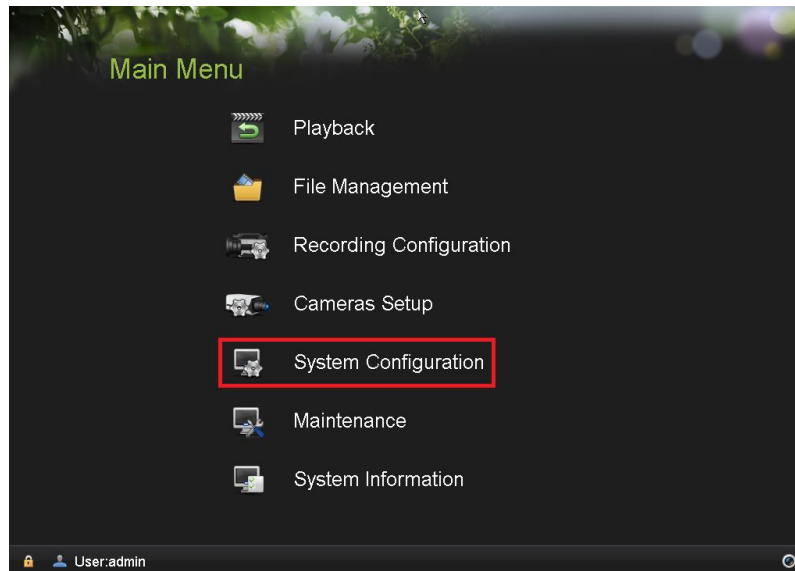

Then go to **USER** and highlight the desired user

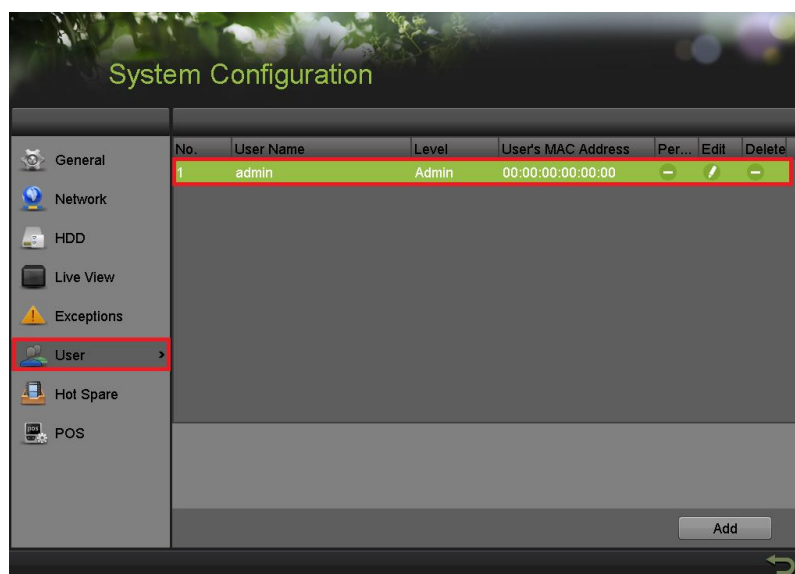

Title:	Changing DVR/NVR Password				
Date:	01/05/2015	Version:	1.0	Pages	2
Product:	All current Hikvision DVR/NVR models				
Action Required:	Information only				

Afterwards, press the **EDIT** button . The **“EDIT USER”** window will appear. Follow the following steps:

1. Enter the current password.
2. Check the **“CHANGE PASSWORD”** box.
3. Enter the new password.
4. Confirm the new password (to avoid typos).
5. Press **OK**.

