

Title:	How to use Redundancy Record in Group Mode	Version:	v1.0	Date:	1/8/2019
Product:	NVR			Page:	1 of 4

How to use Redundancy Record in Group Mode

Description

The customer may have the request to save the video record backup.

Note: This function need more than two hard disks and the redundancy must be used in group mode.

Preparation

 
NVR.

How to configure the group function in NVR:

Steps:

1. Enter **Storage** interface and select **Storage Mode** in the drop-down list on the top-left side.
2. Select **Group** mode in the right.
3. Click the channel which need to be record in redundancy and **Apply**.
4. Wait for the system rebooting.


Title:	How to use Redundancy Record in Group Mode	Version:	v1.0	Date:	1/8/2019
Product:	NVR			Page:	2 of 4

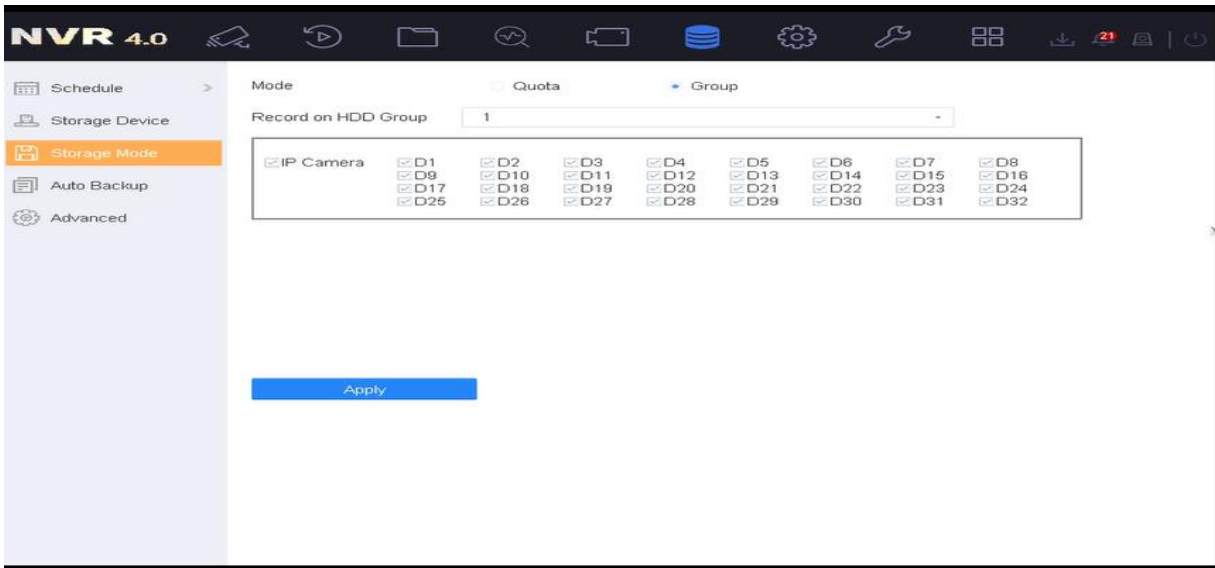

How to Start Redundancy Video Record in Group:


Steps:

 1. Enter **Storage** interface and select **Storage Device** in the drop-down list on the top-left side.
2. Select **Edit** in the following hard disks menu which need to be the redundancy disk.

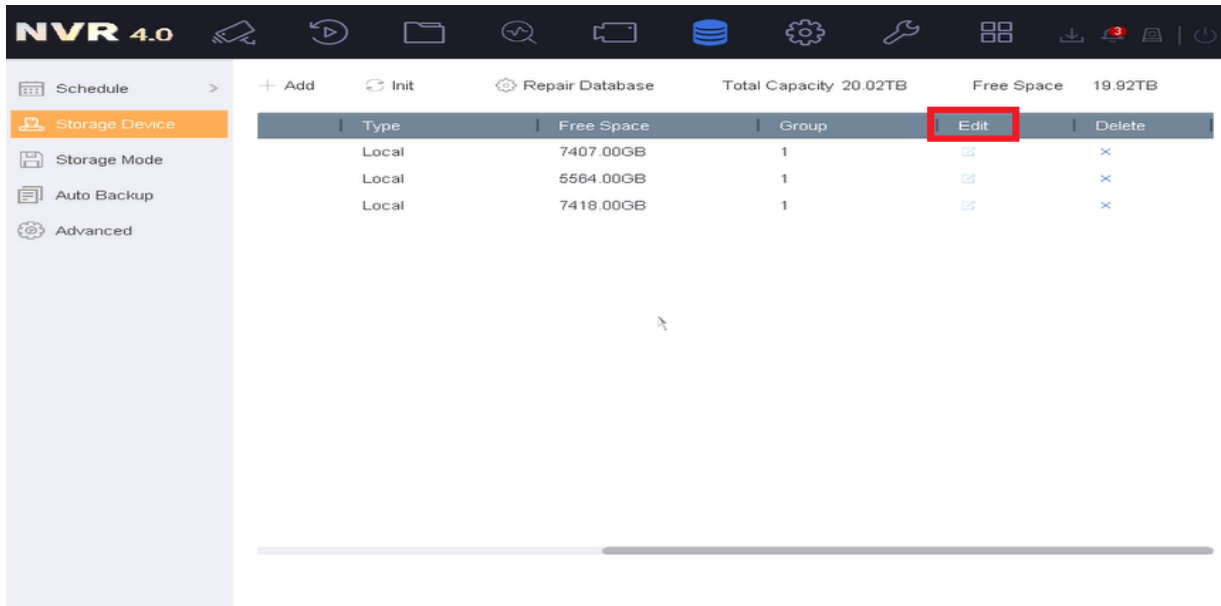


Title:	How to use Redundancy Record in Group Mode	Version:	v1.0	Date:	1/8/2019
Product:	NVR			Page:	3 of 4

 3. Select **Redundancy** button and choose OK.

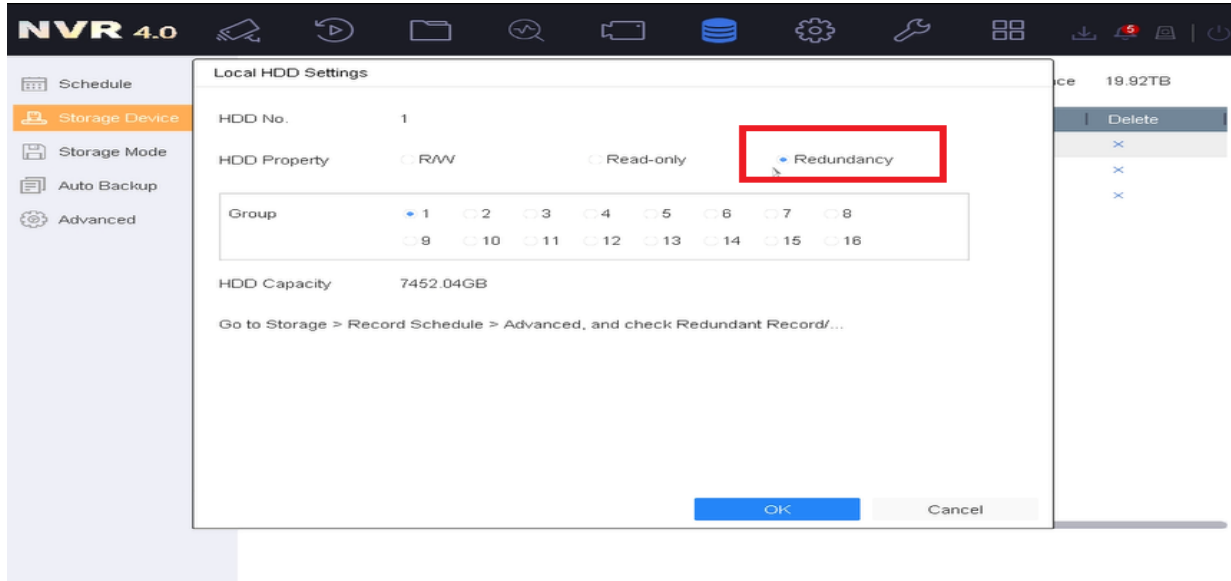

 4. Go to **Storage > Record Schedule > Advanced** and check **Redundant Record**.

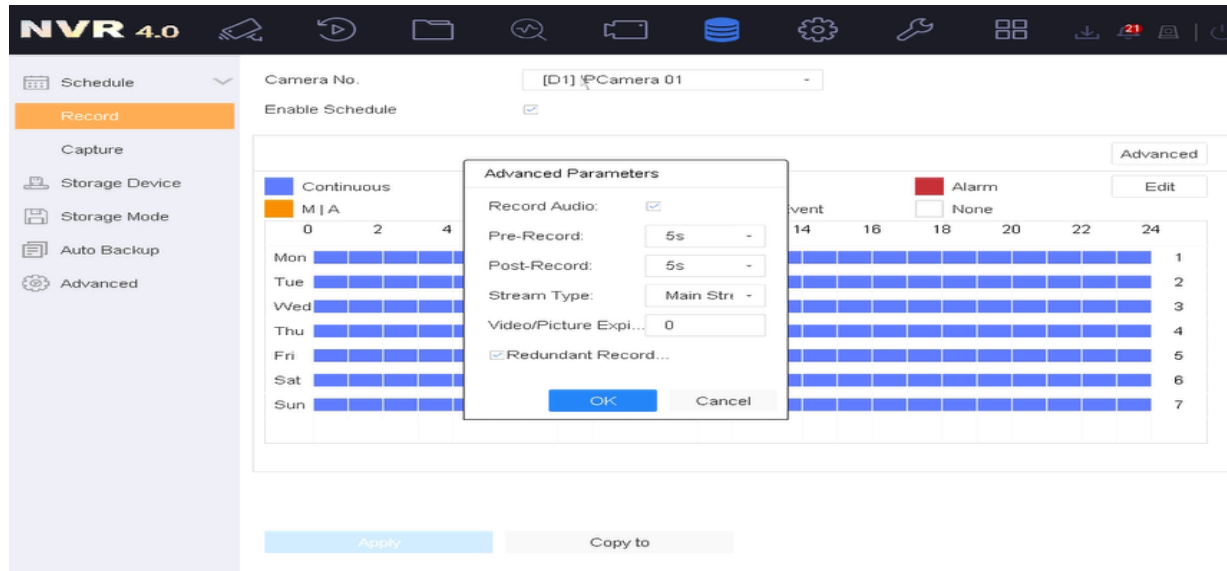



Title:	How to use Redundancy Record in Group Mode	Version:	v1.0	Date:	1/8/2019
Product:	NVR			Page:	4 of 4

First Choice for Security Professionals
***HIKVISION* Technical Support**