

Title:	DS-PWA32 How to Enable/Disable EN Standard	Version:	v1.0	Date:	04/19/2019
Product:	AX Series Wireless Security Control Panel			Page:	1 of 4

Preparation

1. AX Series Wireless Security Control Panel, V1.0.3 or above
2. iVMS-4200 or IE explorer

DS-PWA32 How to Enable/Disable EN Standard

In order to separate the EN standard area and other areas, the customer can choose EN Standard or General standard, **the choose interface need login Setter user.**

Step 1: Login admin user, enable Setter user at first

Step 2: Login Setter user, enable EN Standard.

1. Login admin user.

- 1) User Management---User---Setter---Enable setter user
- 2) Click save
- 3) Click Exit

No.	User Name	User Type	Enable User
1	admin	Administrator	<input type="checkbox"/>
2	setter	Installer	<input checked="" type="checkbox"/>
3	manufacturer	Manufacturer	<input type="checkbox"/>

2. Configure Setter user.


- 1) Login setter user

Account: **setter**

Default Password: **setter12345**

Title:	DS-PWA32 How to Enable/Disable EN Standard	Version:	v1.0	Date:	04/19/2019
Product:	AX Series Wireless Security Control Panel			Page:	2 of 4

2) Click Login

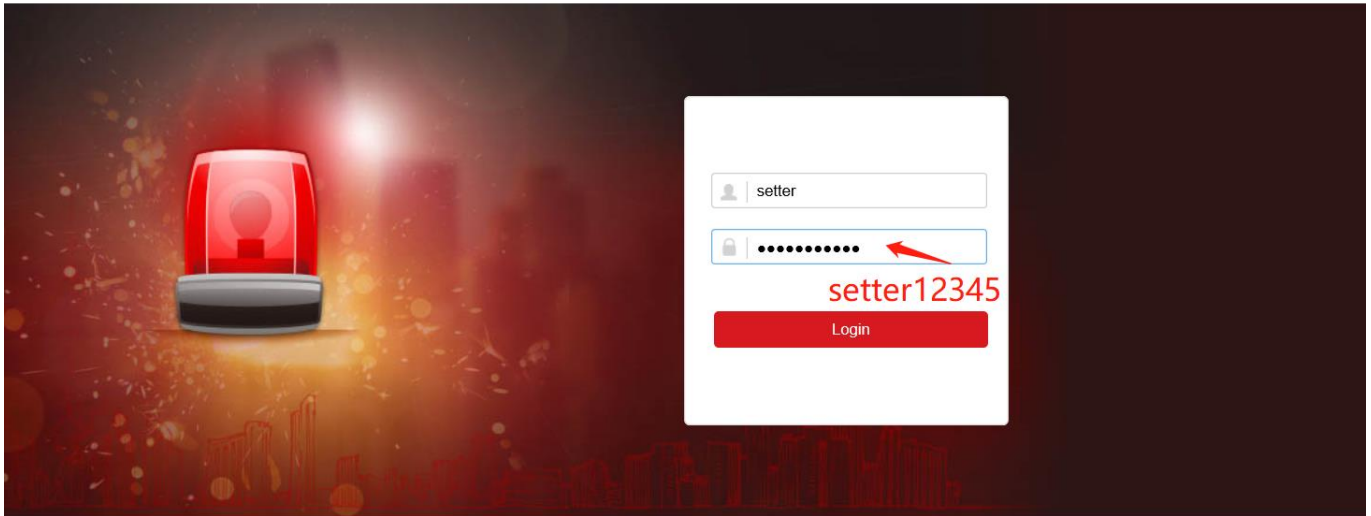

©2019 Hikvision Digital Technology Co., Ltd. All Rights Reserved.

3) Select **System---System Maintenance---Certificate Standard---EN Standard**


4) Click Save.

Title:	DS-PWA32 How to Enable/Disable EN Standard	Version:	v1.0	Date:	04/19/2019
Product:	AX Series Wireless Security Control Panel			Page:	3 of 4

The screenshot displays the Hikvision web interface. On the left is a sidebar menu with categories: User Management, System, and System Maintenance. The 'System Maintenance' category is expanded, showing options like Log, Date and Time, Schedule & Timer, Network Camera, Wireless Devices, Communication Parameters, Video & Audio, Maintenance, and Status. A red arrow labeled '1' points to the 'System Maintenance' section. The main content area has a top navigation bar with 'Upgrade and Maintenance' and 'Certificate Standard' (highlighted in red). A red arrow labeled '2' points to the 'Certificate Standard' tab. Below the navigation, the 'Standard' section shows a dropdown menu with 'EN Standard' selected and highlighted in red. A red arrow labeled '3' points to this selection. Below the dropdown is a 'Save' button, with a red arrow labeled '4' pointing to it.

5) The device will complete the certificate standard editing after reboot, click OK.

Title:	DS-PWA32 How to Enable/Disable EN Standard	Version:	v1.0	Date:	04/19/2019
Product:	AX Series Wireless Security Control Panel	Page:	4 of 4		

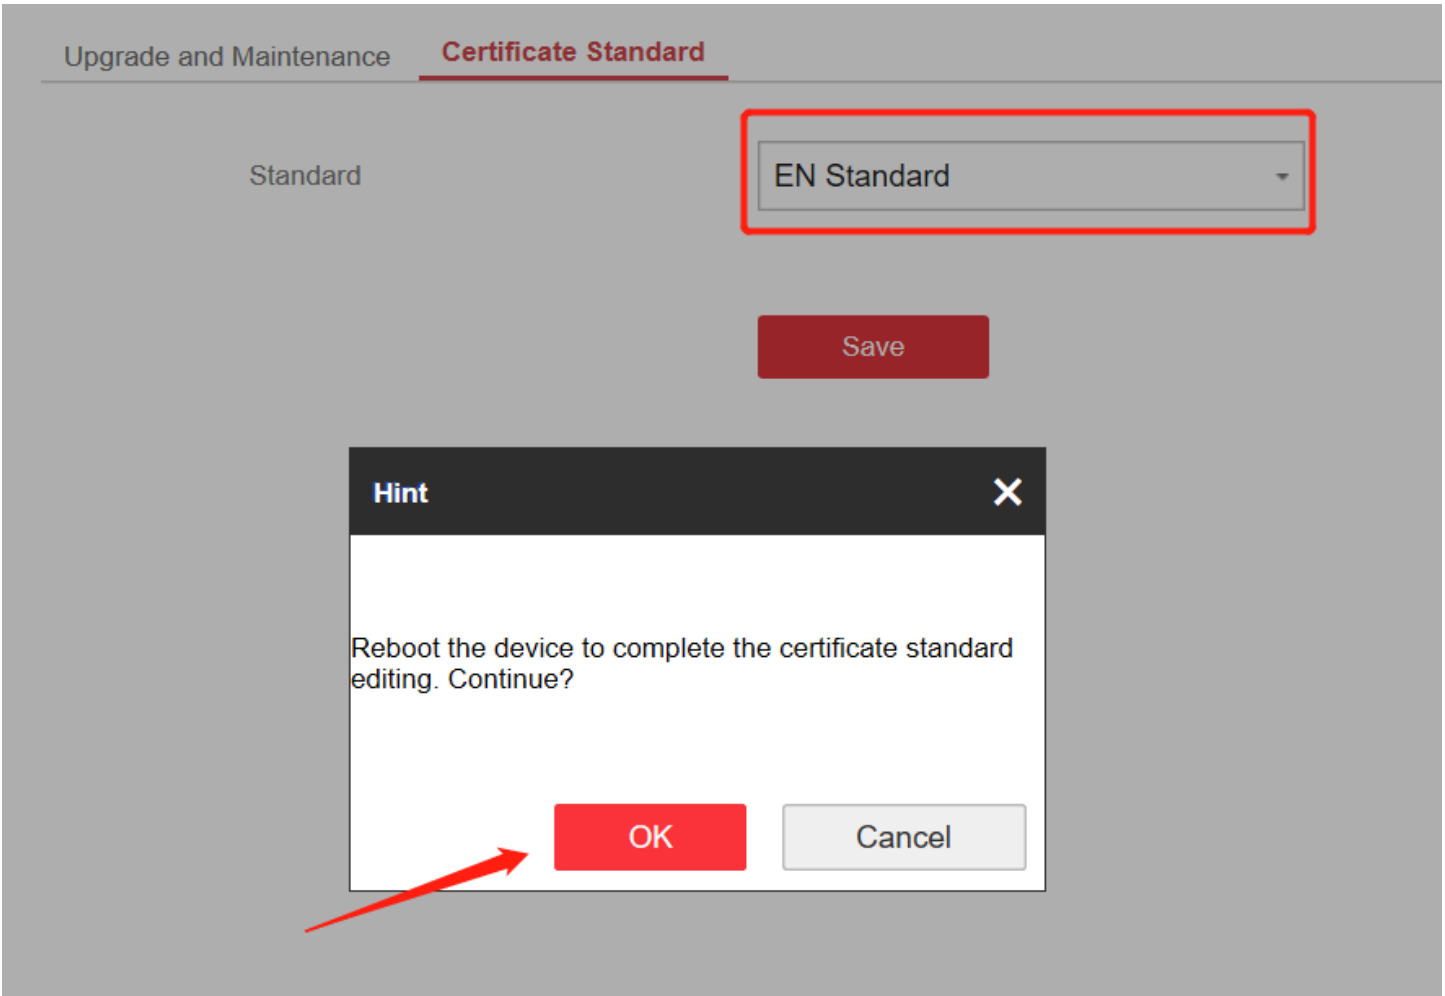

3. Change to General standard.

1) Login setter user

Account: **setter**

Default Password: **setter12345**


2) Click Login

3) Select **System---System Maintenance---Certificate Standard---General Standard**

4) Click Save.

5) The device will complete the certificate standard editing after reboot, click OK.

Title:	DS-PWA32 How to Enable/Disable EN Standard	Version:	v1.0	Date:	04/19/2019
Product:	AX Series Wireless Security Control Panel			Page:	5 of 4

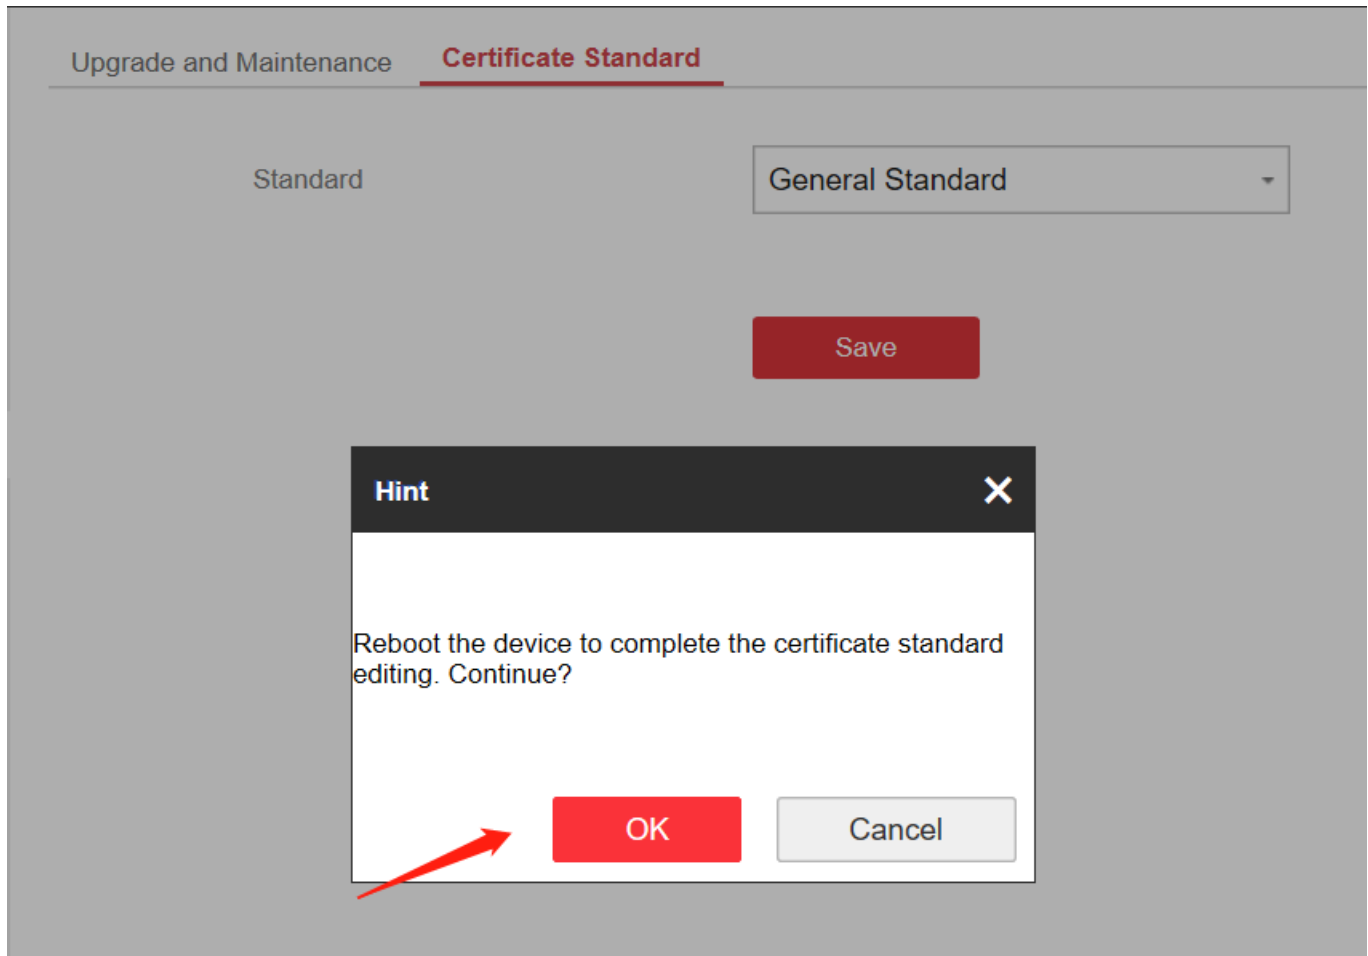

First Choice for Security Professionals
HIKVISION Technical Support