

How to Add Ultra HD Resolution IP Camera to NVR

| Title: | How to Add Ultra HD Resolution IP Camera to NVR | Version: | v1.0 | Date: | 8/13/2020 |
|----------|--|----------|------|-------|-----------|
| Product: | NVR | | | Page: | 1 of 2 |
| | | | | | |

How to Add Ultra HD Resolution IP Camera to NVR

1. Key Step 1---Enable the Ultra HD Resolution Mode



2. Key Step 2---Follow the normal way of adding cameras to add the Ultra HD Resolution multi-track streams IP Camera

| Title: | How to Add Ultra HD Resolution IP Camera to NVR | Version: | v1.0 | Date: | 8/13/2020 |
|----------|--|----------|------|-------|-----------|
| Product: | NVR | | | Page: | 2 of 2 |



Note:

1. Before adding the Ultra HD Resolution multi-track streams IP Camera, you need to enable the Ultra HD Resolution Mode. After the mode is turned on, the number of 32-channels NVR will be reduced by 8 channels, and the other channels NVR is unchanged.

2. POE NVR do not support adding Ultra HD Resolution multi-track streams IP Camera.

3. Currently, **only channel 1** on the NVR is supported to add Ultra HD Resolution IP Camera, only storage is supported, and picture capture is not supported.

4. Support single-screen live view and playback of multi-track streams UHD resolution IPC. The specific model of IPC is: panoramic series camera with up to 32MP resolution, DS-2CD6944G0 and DS-2CD6984G0.

5. Support the built-in alarms of high-resolution cameras, such as behavior analysis.

