

<b>Title:</b>	DS-PSG-WI-433 How to reset and connect	<b>Version:</b>	v1.0	<b>Date:</b>	19/12/2019
<b>Product:</b>	Alarm	<b>Page:</b>	1 of 4		



## DS-PSG-WI-433


### How to reset and connect

(2019-12-19)

#### Wireless indoor siren parameters

RF distance	800 m (open area)
Power	3 CR123A Batteries (Battery powering mode by default) or 12 VDC
Buzzer	Decibel: 110 dB
Operation temperature	-10 °C to +60 °C (14 °F to +140 °F)
Operation humidity	10% to 90% (no condensing)
Color	White
Material	PC+ABS
Dimension (W × H × D)	90.0 × 90.0 × 30.0 mm (35.4" × 35.4" × 11.8" )
Protection level	IP54
Installation	Wall mounting

#### Wireless indoor siren appearance

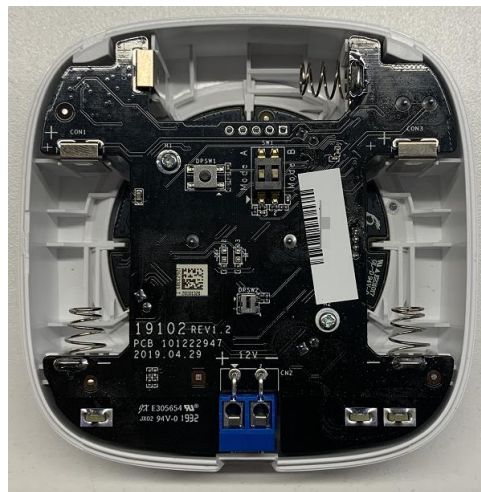

<b>Title:</b>	DS-PSG-WI-433 How to reset and connect	<b>Version:</b>	v1.0	<b>Date:</b>	19/12/2019
<b>Product:</b>	Alarm	<b>Page:</b>	2 of 4		



## How to power the wireless indoor siren

1. Powered by CR123A battery




2. Powered by 12v 1A wire




## How to add wireless indoor siren

1. Click the wireless security control panel function button

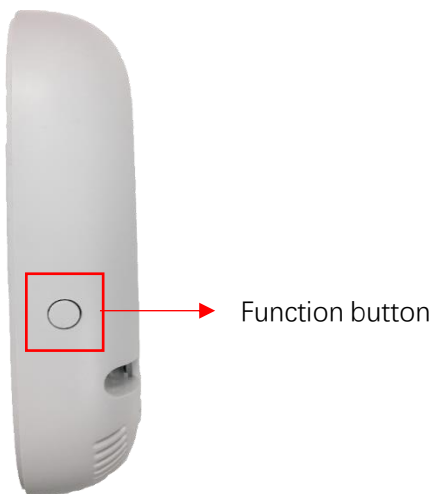

2. Power on the wireless indoor siren, then Click the learn button

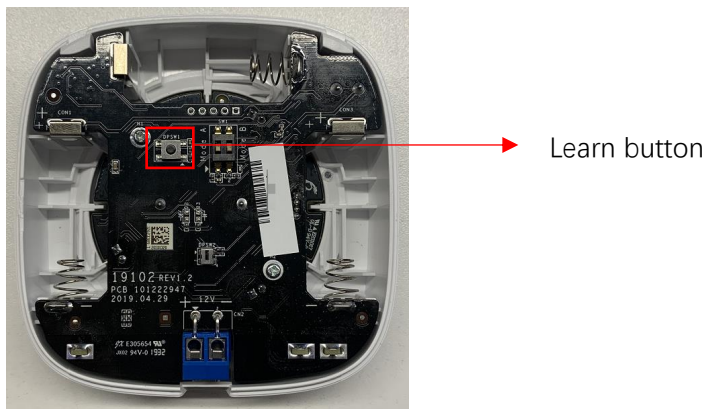


<b>Title:</b>	DS-PSG-WI-433 How to reset and connect	<b>Version:</b>	v1.0	<b>Date:</b>	19/12/2019
<b>Product:</b>	Alarm	<b>Page:</b>	3 of 4		



3. Wireless security control panel will say 'The Siren 1 is added', the addition is successful
4. Click wireless security control panel function button again to finish the adding mode

## How to reset the wireless indoor siren

1. Hold down learn button of wireless indoor siren, and then power on the device

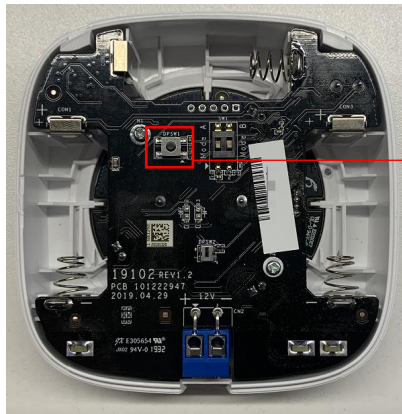

Learn button

2. Hold down the button, after red light flash 3 times, means reset successfully, as below



<b>Title:</b>	DS-PSG-WI-433 How to reset and connect	<b>Version:</b>	v1.0	<b>Date:</b>	19/12/2019
<b>Product:</b>	Alarm	<b>Page:</b>	4 of 4		



---

**First Choice for Security Professionals**

***HIK*VISION Technical Support**