

LED Display

Device Command

© 2020 Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

This Manual (hereinafter referred to be "the Manual") is the property of Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision"), and it cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise expressly stated herein, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual, any information contained herein.

About this Manual

Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to updates or other reasons. Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

LEGAL DISCLAIMER

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE MANUAL IS PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. IN NO EVENT WILL HIKVISION BE LIABLE FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), OR OTHERWISE, IN CONNECTION WITH THE USE OF THE MANUAL, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

Command Type (Optional)	Command Name	Command Function	Format	More Information	Usage Example (Optional)
	t1 mode	Enter production test program			
	[0] testAllExternalDevice	Test all external device			
		system,			
	[1] testSPI_FLASH	verify whether succeeds			
	[2] test+B24DDR[0x55555555]	Test emory chip read and write			
	[3] testPS_PLTransmission	ARM and FPGA communication verification			
	[4] enableFPGA	Load FPGA			
	[5] getLocalLANInfo	LAN IP			
	[6] testRawFlash	No file system read and write flash Test I2C			
	[7] testI2C [8] testRTCClock	Test RTC clock			
	[9] testSerialPort	Test serial port, none actually			
	[a] testTemperatureSensor	Test temperature sensor			
	[b] phytestNetworkChip	Test network chip phy			
	[c] testGPPortRegisterReadAndWrite	Test GP port register read and write			
	[d] test88E1543ReadAndWrite	Test 88E1543 read and write			
	[e] resetSPIFlash	Reset SPI Flash			
	[f] setSPIFlashAddressMode	Set SPI Flash address mode			
	[g] testButtonInterruption	Test button interruption			
Production/Test	[h] testGPIO	Test GPIO			
	[i] testEncryption	Test encryption			
	[j] testPS-PLInterruption	Test PS-PL interruption			
	[k] getSGMIIPHYChipLinkStatus	Get SGMII PHY chip link status			
	[I] setSGMIIChipComboPortMode	Set SGMII chip combo port mode			
	[m] getDebugPHYILinkStatus	Get debug PHY chip link status			
		Get SGMII PHY chip RJ45 combo port status			
	[o] testWatchdog	connected			
	[p] getPressAndHoldButtonStatus	Get press and hold button status			
	[r] testRTL8214Reset	Test RTL8214 reset Get SGMII and FPGA status			
	[s] getSGMIIandFPGAStatus [t] getSGMII PHYChipType	Get SGMII PHY chip type			
	[u] getSGMII 8218 PHY LinkStatus	Get SGMII 8218 PHY link status			
	[v] readRawPartition	Read from raw partition			
	[w] writeRawPartition	Write to raw partition			
	[x] cutdie	Cut die			
	[y] print8218ConfigurationRegisterValue	Print 8218 configuration register value			
	[z] getfbAddressInfo	Get fb address information			
	getLedDispCfg	Get display brightness and color temperature			
	getAttribute	card			
	getScreenModel	Screen type, and driver IC			
	getEdid	Get EDID configuration			
	getRunTime	Sending card running time			
	resourceusage	cpu, memory, network usage			
	fpga xx	Read FPGA xx register value			
	version	FPGA version information			
	recvcardversion	Receiving card version information			
	fdestsize	Zoom target parameter			
	ftest	FPGA read and write test register			
		FPGA parameter is successfully configurated			
		or not.			
	fvideowh	Video input source resolution information			
	fdisplayen	Enable display on video wall			
	fvoutfrm	View input and output framerate			
	fsourcetype	Source type			
	fdectcontrol	Lamp no-current detection			
	fsrcsize	Input source size			
	fmargin	Scaling parameter			
		axi_clk count value			
	frgball	View brightness status			
	frgb3ch	RGB brightness adjust coefficient			
I	falignhv	Pre-crop, aligned width and height			

fdelay	Initiate the second frame slice_done delay		
raciay	capture		
fvinde	View single/dual sample		
fvgaset	Enable VGA black edge function, view		
8	Base map RGB separate store memory start		
flogoaddr	address		
flogoaddr			
fvgacutlp	Mark number of cut lines after frame end		
fpackagedelay	Network interface package interval register		
fvgacutlimit	Network interface package interval register		
fvgacutlimit	VGA crop YC range		
fholdparam	Set parameters permanently		
flednum1	Seven-segment display No.1 code value		
flednum2	Seven-segment display No.2 code value		
frefreshtime	Refresh time		
fledtest	Test mode status		
fvgacutsize	Lines cropped by VGA		
fvldsize	Valid pixels of rows and columns by AD		
fvldallsize	Total pixels of rows and columns by AD		
	VGA output source: valid pixels of rows and		
fygasize	columns by AD		
fvgasize			
le	VGA output source: total pixels of rows and		
fvgaallsize	columns by AD		
ftpgcontrol	Get sending card test_pattern TPG enable		
ftpgactivesize	Rows and columns resolution		
ftpgpatternctrl	Read pattern mode value		
ftpgmotionspeed	Speed of frame change		
fdvifps	View dvi framerate		
fvgafps	View vga framerate		
fupscalingtest	View scaling swtich		
fupscalingmode	View scaling mode		
fopsubid	Get object of operated receiving sub card		
frevcardrst	View reset receiving card information		
fsdf	View guidance code		
fnetport18	View NIC information		
петропт в			
6 1	View FPGA and application interaction		
freadsubparam	register status		
	View FPGA and application interaction		
fsharectrl	register status		
fsharesaddr	area		
fsharelen	Share data valid length		
fphycfg	View phy chip		
fad9388rst	View 9388 reset		
fch7525rst	View 7525 reset		
ffpga7619rst	View 7619 reset		
fhpdctrl	View HPD_SINK level		
falgincount	Count aligned modules		
	Align module frame rate of starting frame and		
falginfps	ending frame		
falgininputcount	Input align module write data valid count		
falginoutputcount	Valid count on align module data		
	View contrast enhacement switch		
fcontrasten			
fblackstrenth	Black area extension parameter		
fwhitestrenth	White area extension		
fthreshold	Noise suppression threshold		
fcontrastclass	Contrast enhancement level		
fmatchscene	Switch scene match threshold		
fsmoothweight	Dynamic contrast change speed		
fsaturationen	Saturation enhancement switch		<u> </u>
fsaturationclass	Saturation enhancement strength		
ftemphumisensor	View temperature and humidity data register		
flightsensor	View light sensor data register		
firsensor	View IR command data register		
ftimesensor	Function card version		
	Pre-crop coordinate register in horizontal		
foreguth			
fprecuth	direction		
fprecutv	direction		
fsubhvsize	Receiving card load register		

Status Viewing

1	[s. s	<u> </u>	 T	1
	fdma2drdparam	Receiving card horizontal length		
	fdmawrmode	Memory read and write mode		
	mdio_read	SMI bus read PHY register tool		
	getColorInfo	Color temperature		
	uploadChip	Trigger ps176 upgrade		
	debugMenu	Operate OSD		
	unpack	Non-4K board updatek upgrade tool		
	unpack_4K	4K board updatek upgrade tool		
		Non-4K board BSP program separately		
	update_kernel_part	upgrade tool		
	update_kernel_part_4K	tool		
		Semi-finished test tool, basic external device		
	t1	test		
	psh	psh service program, dubug login serial port		
	dropbear	ssh service program, ssh login		
		Customize ping command, specify NIC, and		
Parameters Configuration	ping	force send arp package		
Parameters Configuration		Open telnet service, disable current service		
	open_telnet	connection, cannot be used		
	open_ssh	ssh service open tool		
	memdev	Physical address read and write test tool		
	mdio_write	SMI bus line write PHY register tool		
	iperf	Network code test tool		
	fb_test	fb loading read and write test tool		
	flash_erase	flash formatting tool for formatting upgrade		
	flash_monitor	System mirror production command		
	hostapd、hostapd_cli			
	iwconfig、iwlist、iwpriv	WIFI configuration and background service		
	wifi、wpa_cli、wpa_supplicant	program		
	'- '- '-	Γ΄ - ΄		