


Hikvision Hybrid Pro Input Expander Wiring and Web Configuration

Wiring

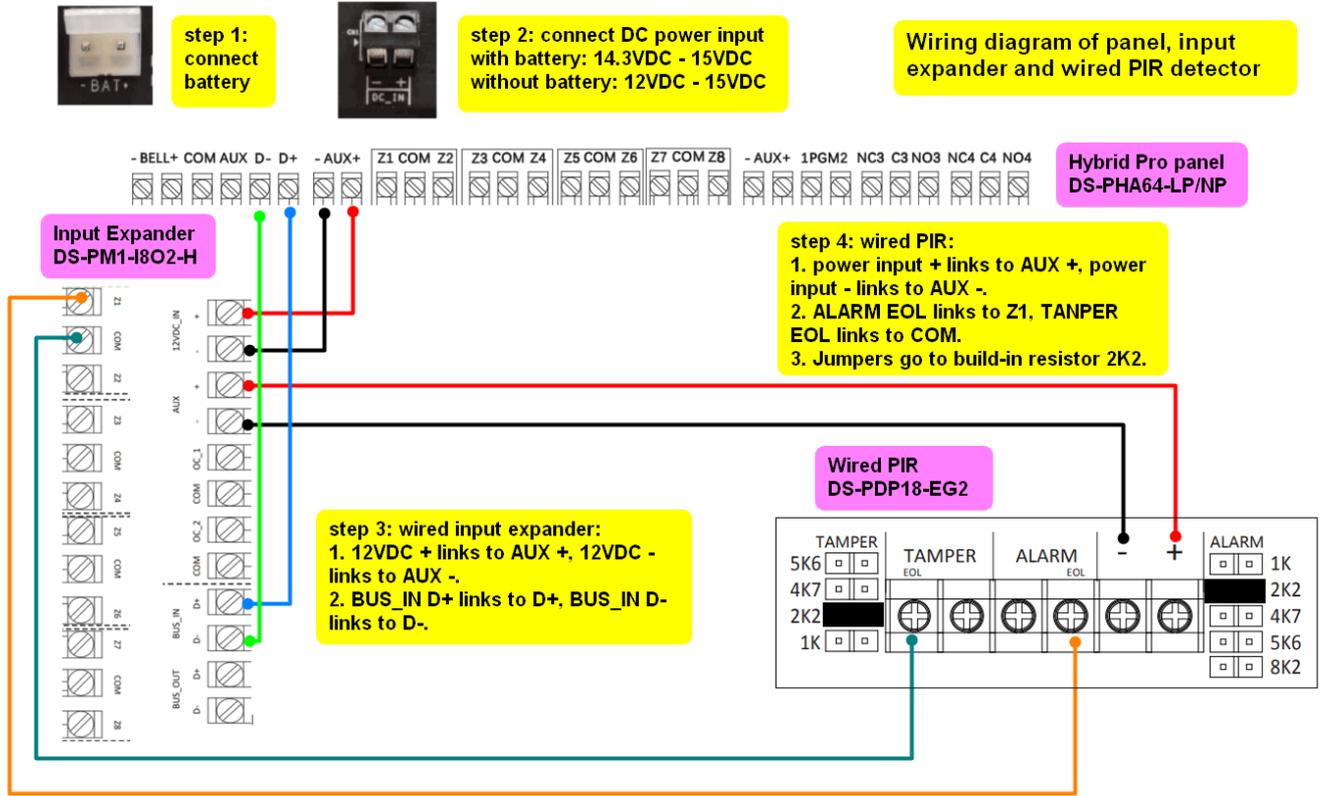

6-Step Web Configuration

Step 1: Connect Hybrid Pro panel to router and activate it in SADP software.

<input type="checkbox"/>	011	DS-2CD2386G2-IS...	Active	192.168.60.1...	8000	8443	V5.5.801bui...	192.168.6...	80
<input type="checkbox"/>	012	iDS-2CD7546G0-IZ...	Active	192.168.60.1...	8000	8443	V5.5.122bui...	192.168.6...	80
<input type="checkbox"/>	013	DS-KD8003-IIME1	Active	192.168.60.1...	8000	N/A	V2.2.56build ...	192.168.6...	80
<input type="checkbox"/>	014	DS-KH9510-WTE1...	Active	192.168.60.1...	8000	N/A	V2.1.48build ...	192.168.6...	80
<input type="checkbox"/>	015	DS-2CD2T47G2-LS...	Active	192.168.60.2...	8000	8443	V5.7.10build ...	192.168.6...	80
<input type="checkbox"/>	016	DS-2CD7A26G0/P-...	Active	192.168.60.1...	8000	8443	V5.6.10build ...	192.168.6...	80
<input type="checkbox"/>	017	DS-7608NI-I2/8P	Active	10.199.40.95	8000	N/A	V4.4.0.017bui...	10.19...	80
<input type="checkbox"/>	018	DS-KV8102-VP	Active	10.199.40.78	8000	N/A	V1.5.1build 1...	10.199.40.1	80
<input type="checkbox"/>	019	DS-2CD2T45G0P-I	Active	192.168.60.24	8000	8443	V5.6.2build 1...	192.168.6...	80
<input type="checkbox"/>	021	DS-PWA96-M-WB	Active	192.168.60.1...	8000	N/A	V1.2.7build 2...	192.168.6...	80
<input type="checkbox"/>	021	DS-PHA64-W4M	Active	192.168.60.72	8000	N/A	V1.3.53build ...	192.168.6...	80
<input checked="" type="checkbox"/>	022	DS-PHA64-LP/NP	Inactive	192.168.60.2...	8000	N/A	V1.0.2build 2...	192.168.6...	80

You can modify the network parameters after the device activation.

Activate Now


New Password:

Confirm Password:


Enable Hik-Connect

Activate

Step 2: web login Hybrid Pro and use admin account to enable the installer account, then click ok to save the change.

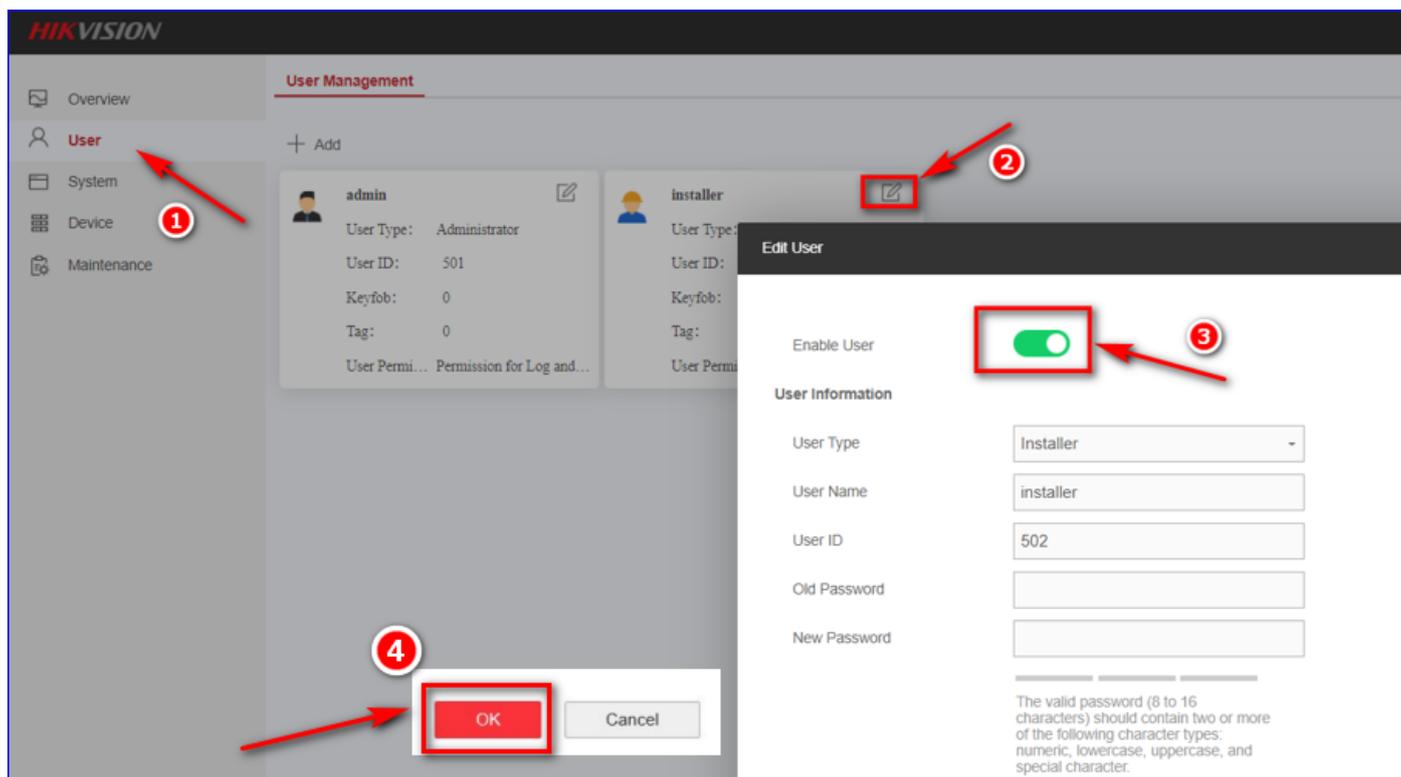

Step 3: Log out the webpage, then log in again using installer account, please be noted, the default password of the installer account is installer12345 and it will ask you to change the default password automatically.

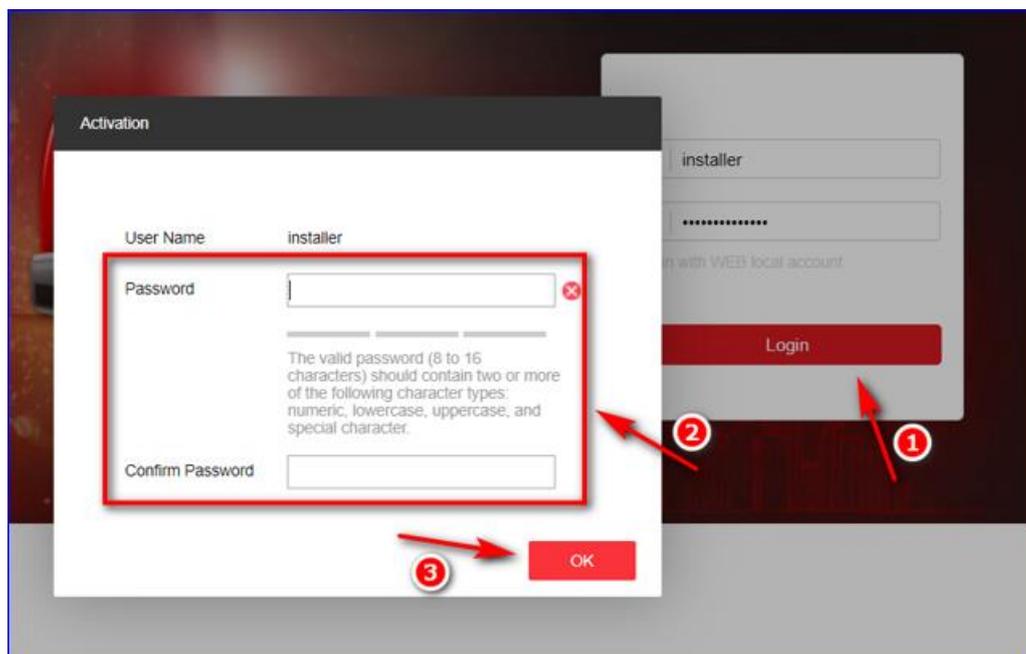

Step 4: Check input expander status to make sure it is enrolled.

Module Management

Module Type: All Type

No.	Device Number	Name	Module Type	Module Information	Module Version	Status	Operation
1	1	Input Expander 1	Wired Input Module	DS-PM1-I8O2-H	V1.0.4_build221102	Online	[Settings] [Delete]
2	3	Tri-X Receiver 1	Tri-X Receiver	DS-PM1-RT-HWB	V1.0.3_build221102	Online	[Settings] [Delete]

Step 5: Enroll wired PIR.

Basic Settings

+ Enroll [Delete]

Zone	Device Number	Name	Main Device	Channel No.	Device Types	Silent Alarm	Chime	Linked Camera
1	4	Zone 1	Zones Built-in	1	Instant	Disable	Disable	/
2	5	Zone 2	Input Expander 1	1	Instant	Disable	Disable	/
3	6	Zone 3	Tri-X Receiver 1	/	Instant	Disable	Disable	/

Enroll Device on Zone

Relate Mode: Wired

Main Device Type: Wired Input Module

Main Device Name: Input Expander 1

Channel: 2

[OK] [Cancel]

Step 6: Configure detector contact mode as DEOL, scan QR Code to add panel to Hik-Connect or Hik-Partner Pro APP

Basic Settings

+ Enroll [Delete]

Zone	Device Number	Name	Main Device	Channel No.	Device Types	Silent Alarm	Chime	Linked Camera	Operation
1	4	Zone 1	Zones Built-in	1	Instant	Disable	Disable	/	[Edit] [Settings] [Delete]
2	5	Zone 2	Input Expander 1	1	Instant	Disable	Disable	/	[Edit] [Settings] [Delete]
3	6	Zone 3	Tri-X Receiver 1	/	Instant	Disable	Disable	/	[Edit] [Settings] [Delete]

Zone Settings

Detector Type: Passive Infrared Detector

Zone Type: Instant

Detector Contact Mode: Normally Closed

Wiring Mode: DEOL

Pulse Sensitivity: 250ms

Resistance(Alarm): 2.2k

Resistance(Lid Open): 2.2k

[OK] [Cancel]

Refer to hard wirings to choose corresponding resistor value. if jumper is in 2.2K position choose 2.2k here

