


Keypad 3-Step Simple Programming

Step 1. Activate alarm Panel

Power the Alarm Panel and wait until the keypad auto-enrolled. You will see the keypad enrolled successfully as the picture 1;

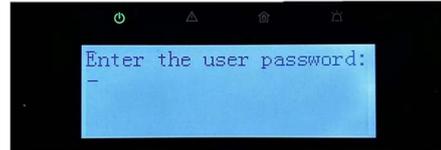

Press default admin code which is last 6 number of the alarm panel series number, and then press , you will enter activation mode, as picture 2;



Enter the admin password and re-enter the password for confirmation to activate the alarm system. Please note, this password should contain character and number, and is used for login to the webpage of alarm panel to do the advanced setting

Step 2. Changing/Adding User code

You can add Operator via Keypad:

1. Enter Setting Mode by pressing default admin code and then press ;
2. Choose User Management, then Press #(OK);
3. Choose Add User, then press #(OK);
4. Enter user name, then press #(OK);
5. Enter user code twice to confirm. Up to 46 Operator User can be added.

Step 3. Changing Time and Date

1. Enter Setting Mode;
2. Press   ninth to Choose Date & Time, then Press #(OK);
3. Choose Date, then press #(OK);
4. Enter the correct Date, then press #(OK) to confirm;
5. Choose Time, then press #(OK);
6. Enter the correct Time, then press #(OK) to confirm

Enroll Alarm Panel to Hik-Partner Pro

Step 1、 Download Hik-Partner Pro

Go to appstore.hikvision.com to download Hik-Partner Pro, or you can also download it from APP store.



Step 2、 Check Network Connection

You can check alarm panel's network connection via Keypad:

1. Enter Setting Mode by pressing admin code and then press  ;
2. Press  to Choose Network Management, then Press #(OK);
3. Press  to Choose Cloud, then Press #(OK);
4. Make sure Register to Hik-connect function is ON; Make sure Hik-Connect Connection Status is Online.

Step 3、 Add Alarm Panel to Hik-Partner Pro Account

1. Enter Setting Mode by pressing admin code and then press  ;
2. Press  to Choose Network Management, then Press #(OK);
3. Press  to Choose Cloud, then Press #(OK);
4. Press  to Choose QR Code, then Press #(OK); You will see a QR code as picture showing.



5. Use your Hik-partner Pro to scan the QR Code to enroll the panel to Hik-partner Pro.

DETAILS OF PRE-PROGRAMMED FIRMWARE

The Hilook Alarm Kit comes with a Pre-Programmed Firmware.

- 8 on-board zone has been programmed;

	ZONE1	ZONE2	ZONE3	ZONE4	ZONE5	ZONE6	ZONE7	ZONE8
EOL Type	DEOL	DEOL	DEOL	DEOL	DEOL	DEOL	DEOL	DEOL
Zone Type	Delay	Instant	Instant	Instant	Instant	Instant	Instant	Delay
Delay Time	60s	/	/	/	/	/	/	60s

- BELL and PGM interface has been programmed;

	Linkage Event	Activation Mode	Pulse Duration
BELL	ALARM	PULSE	300S
PGM1	ALARM	LATCH	/