


Keypad 3-Step Simple Programming

Step 1. Activate alarm Panel

Power the Alarm Panel and wait until the keypad auto-enrolled. You will see the keypad enrolled successfully as the picture 1;

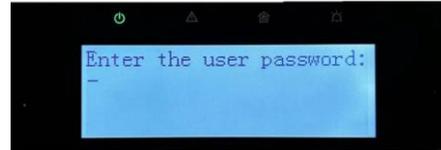

Press default admin code which is last 6 number of the alarm panel series number, and then press , you will enter activation mode, as picture 2;



Enter the admin password and re-enter the password for confirmation to activate the alarm system. Please note, this password should contain character and number, and is used for login to the webpage of alarm panel to do the advanced setting

Step 2. Changing/Adding User code

You can add Operator via Keypad:

1. Enter Setting Mode by pressing default admin code and then press ;
2. Choose User Management, then Press #(OK);
3. Choose Add User, then press #(OK);
4. Enter user name, then press #(OK);
5. Enter user code twice to confirm. Up to 46 Operator User can be added.

Step 3. Changing Time and Date

1. Enter Setting Mode;
2. Press   ninth to Choose Date & Time, then Press #(OK);
3. Choose Date, then press #(OK);
4. Enter the correct Date, then press #(OK) to confirm;
5. Choose Time, then press #(OK);
6. Enter the correct Time, then press #(OK) to confirm

Enroll Alarm Panel to Hik-Partner Pro

Step 1、 Download Hik-Partner Pro

Go to appstore.hikvision.com to download Hik-Partner Pro, or you can also download it from APP store.



Step 2、 Check Network Connection

You can check alarm panel's network connection via Keypad:

1. Enter Setting Mode by pressing admin code and then press  ;
2. Press  to Choose Network Management, then Press #(OK);
3. Press  to Choose Cloud, then Press #(OK);
4. Make sure Register to Hik-connect function is ON; Make sure Hik-Connect Connection Status is Online.

Step 3、 Add Alarm Panel to Hik-Partner Pro Account


1. Enter Setting Mode by pressing admin code and then press  ;
2. Press  to Choose Network Management, then Press #(OK);
3. Press  to Choose Cloud, then Press #(OK);
4. Press  to Choose QR Code, then Press #(OK); You will see a QR code as picture showing.




5. Use your Hik-partner Pro to scan the QR Code to enroll the panel to Hik-partner Pro.

Configuration Q&A

1. Add Local User and user code

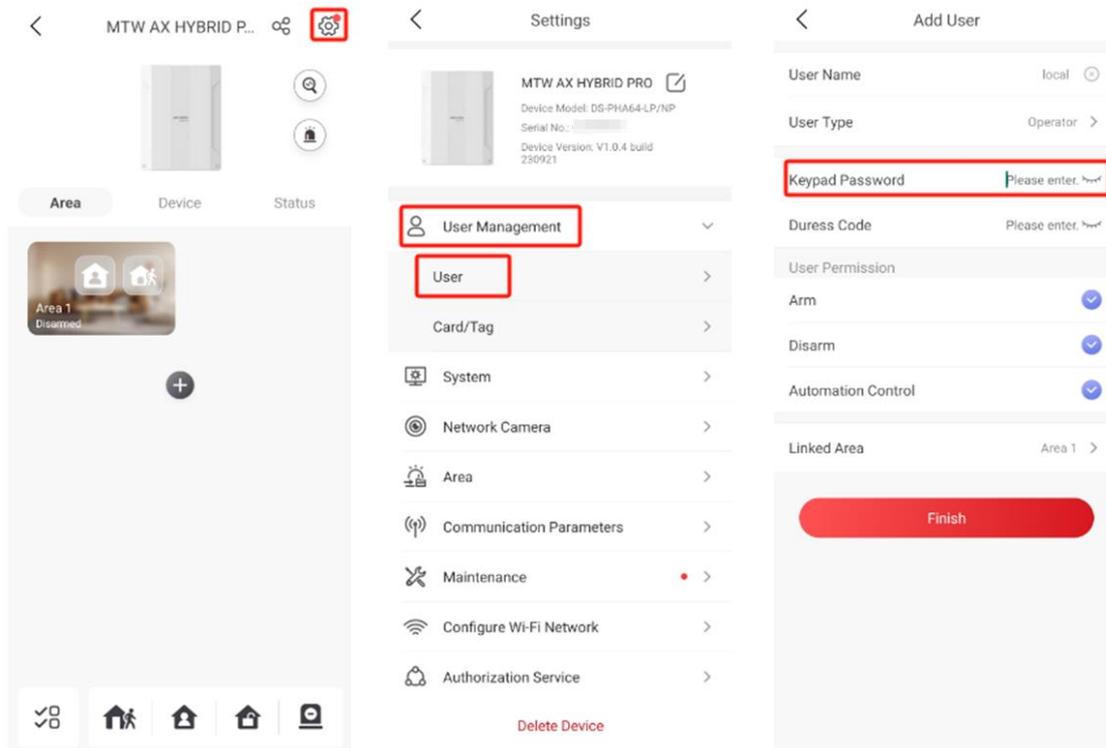

2. Enable Force Arming

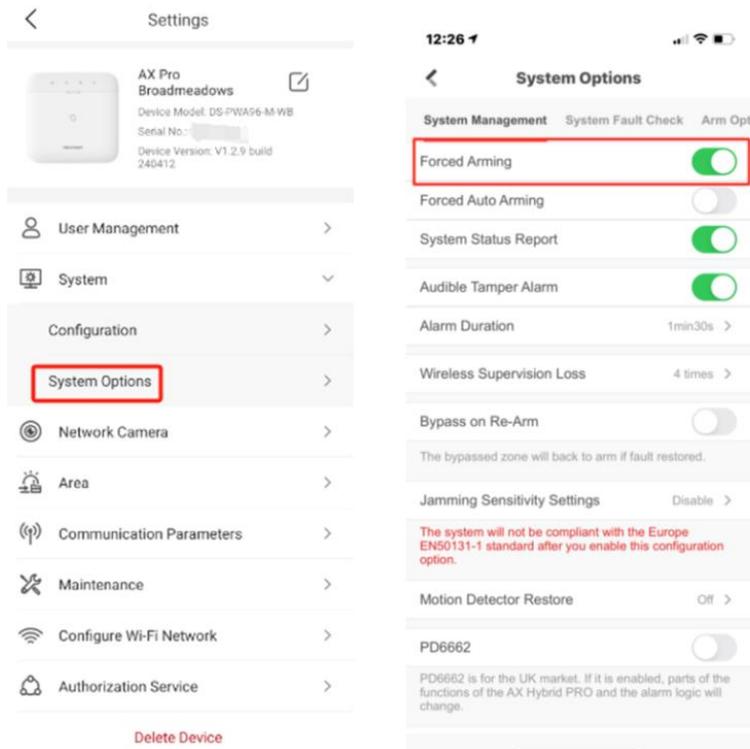

3. System Check

Fault Check

Press Admin Code, then press  to enter the fault check mode. You can check the system fault here. Arm and Disarm the system once to refresh the fault check.

Test User code

Type in the User code, then press the  to arm the system, or press  to disarm the system. Test all of the user code to make sure system work.

System Test

Arm the system, then trigger the sensor, make sure the sirens and strobe go off after the system triggered.

- Is the sensor sensitive? If note, check the wiring, the resistor and make sure it is correctly installed in good position;
- The indoor siren and outdoor Strobe should go off all the time until the system disarmed;
- The outdoor siren will go off for 5 minutes based on Australia regular requirement.

4. Details of Pre-Programmed Firmware

The Hillook Alarm Kit comes with a Pre-Programmed Firmware.


- 8 on-board zone has been programmed;

	ZONE1	ZONE2	ZONE3	ZONE4	ZONE5	ZONE6	ZONE7	ZONE8
EOL Type	DEOL	DEOL	DEOL	DEOL	DEOL	DEOL	DEOL	DEOL
Zone Type	Delay	Instant	Instant	Instant	Instant	Instant	Instant	Delay
Delay Time	60s	/	/	/	/	/	/	60s

- 2 PGM interface has been programmed;

	Linkage Event	Activation Mode	Pulse Duration
PGM1	ALARM	PULSE	300S
PGM2	ALARM	LATCH	/

5. Wiring of Bosch PIR Sensor

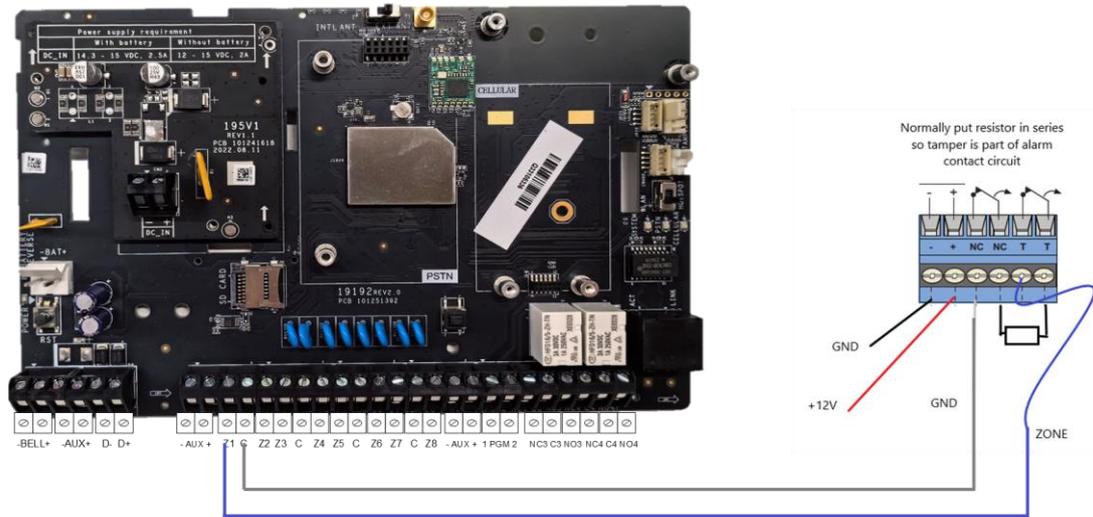


Wiring Bosch sensor as picture showing, the resistor value should be 2.2k;

Select Zone Type and choose SEOL for Wiring Mode if you use Bosch or Other 3rd-party PIRs

6. Add Wired PIRs

Select Zone Type and choose DEOL for Wiring Mode if you use Hilook or Hikvision PIRs

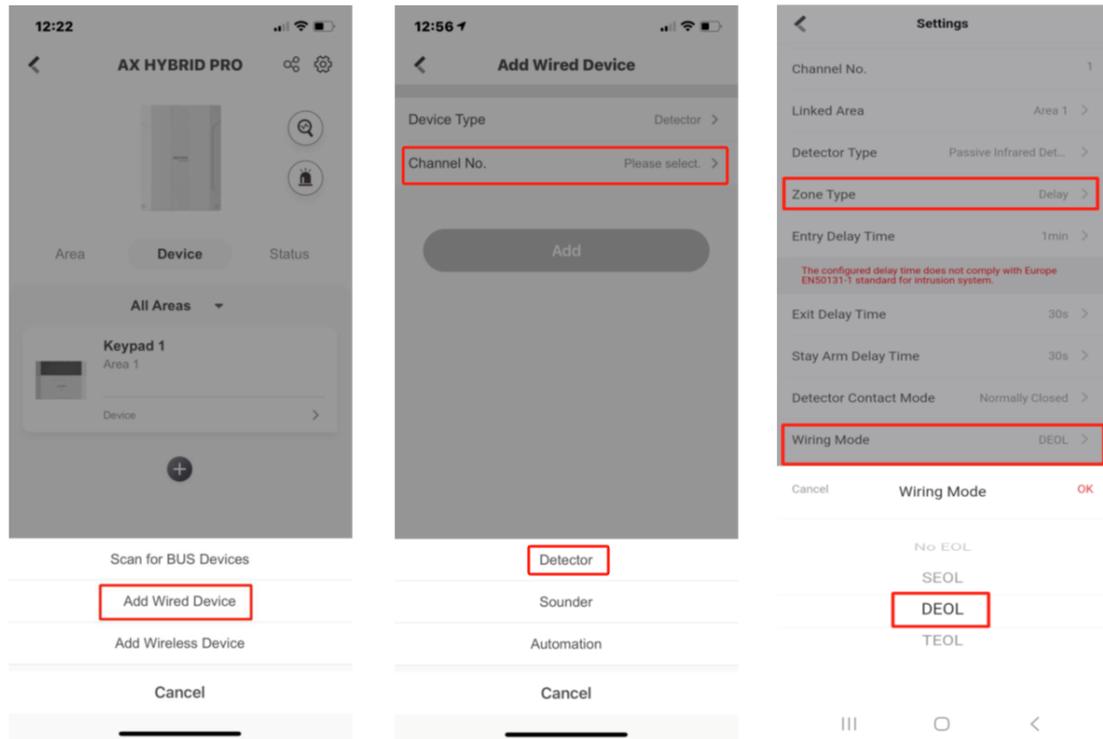

7. Add Key tag or Key fob for User

Key Tag or Key Fob can be enrolled to the alarm system via keypad for convenient system control.


You can enroll Key fob or Key tag via Keypad:

- ① Enter Setting Mode; ② Press ↓→ ninth to Choose Tag Management or Keyfob Management, then Press #(OK); ③ Choose Add Tag or Add Keyfob, then press #(OK); ④ Swipe the tag on the keypad or Press any key of Keyfob to enroll; ⑤ Enter the name of Keyfob/Tag, then press #(OK) to enroll the devices.

You can Link Key fob or Key tag via Keypad with specific user:


- ① Enter Setting Mode; ② Press ↓→ ninth to Choose Tag Management or Keyfob Management, then Press #(OK); ③ Choose specific Tag or Add Keyfob, then press #(OK); ④ Choose Linked User, then Press #(OK); ⑤

Choose specific user, then press #(OK) to Link the user with the Keyfob/Tag.

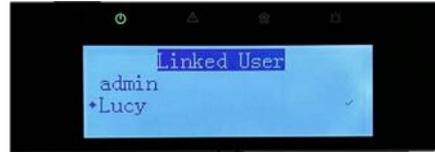


8. Setup Dual Zone


Enable the Dual Zone function on PIR setting page and wire two PIRs follow the below Diagram.

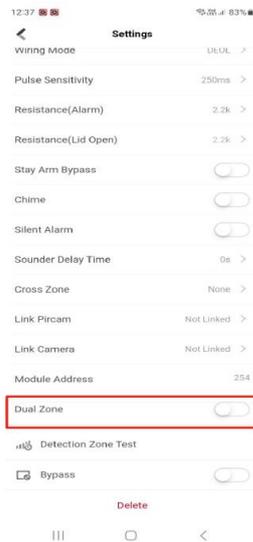

For the first PIR, the EOL must be single 2.2K, and the second one is single 8.2K. (Note. EOL can be wired into the circuit or use the on-board Alarm EOL)

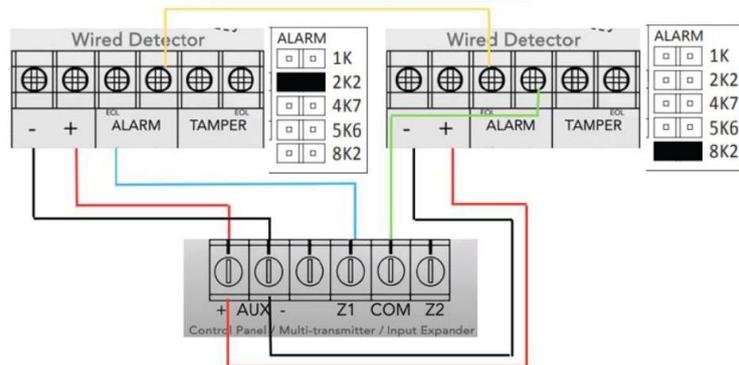

9. Share Panel to Hik-Connect (Hand Over by Transferring)

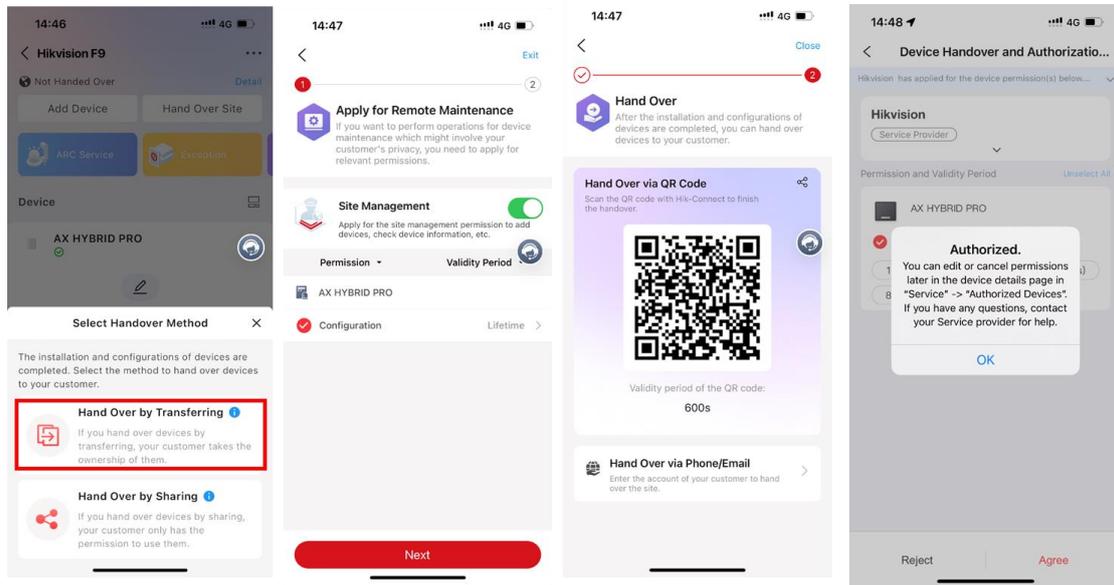

10. Share Panel to Hik-Connect (Hand Over by Sharing)

Hand Over by Sharing is share to Hik-Connect Operator Account.

