

# **CONTENTS**

02 Hilook Alarm Control Panel

O3 Alarm Panel \ Control Tools

 
04 Wired Detectors \ Accessories

O5 Compatible with Hikvision Alarm Products

06 Hilook Alarm Wiring Guide

07 3-Step Configuration \ APP Configuration \ How to Reset










HiLook products have reached a new milestone with the launch of the next-generation HiLook Alarm Family. The brand-new hybrid alarm system focuses on simplicity, reliability, and expanded flexibility, delivering outstanding performance.

HiLook Alarm is ideal for pre-installation markets, such as new housing developments. Its direct activation via a keypad simplifies project delivery, making the process exceptionally efficient.

# Hilook Alarm Control Panel

Designed with user habits in mind, the compact HiLook alarm panel offers an intuitive and user-friendly experience for everyone.

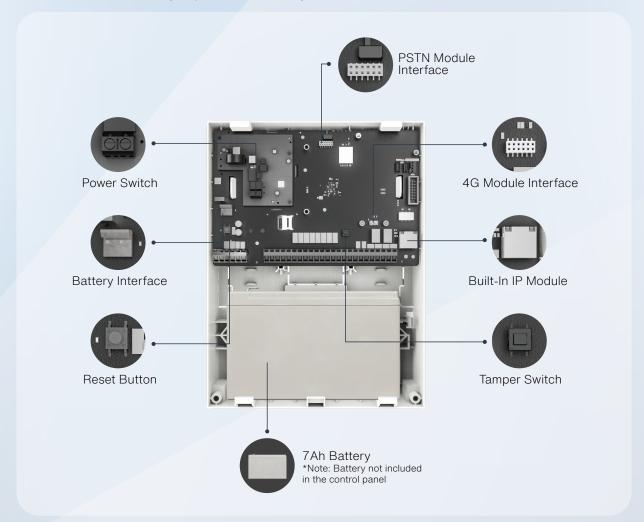



#### **User-Friendly Design**

Built-in jumpers for easy tamper alarm control and a physical reset button for quick resets.



#### **Simple Configuration**

Pre-programmed firmware allows the entire system to be configured in just three steps.



#### **One-App Solution**

Supports seamless control and management through a single app for ultimate convenience.



## **Alarm Panel**



HA-ALARM-P48

# 8 on-board zones 4 on-board (2 relay&2 I/O) outputs 16 areas Up to 4 wired keypads/48 tags/48 keyfobs/4 wired PIRCAM Built-in IP module, PSTN/GPRS/4G module optional Webserver/Hik-Connect/Hik-Partner Pro DC-09: ARC accessible (ADM-CID/SIA-DCS) Support 2-ch IPC for video verification

Speed-X BUS communication technology

## **Pre-Programmed Firmware**

The Hillook Alarm Panel comes with a Pre-Programmed Firmware.

- 8 on-board zones have been programmed;
- Bell and PGM1 interface have been programmed;

	ZONE1	ZONE2	ZONE3	ZONE4	ZONE5	ZONE6	ZONE7	ZONE8
EOL Type	DEOL	DEOL	DEOL	DEOL	DEOL	DEOL	DEOL	DEOL
Zone Type	Delay	Instant	Instant	Instant	Instant	Instant	Instant	Delay
Delay Time	60s	/	/	/	/	1	/	60s

	Linkage Event	Activation Mode	Pulse Duration	Other
BELL	ALARM	PULSE	300S	
PGM1	ALARM	LATCH	/	Flashing 5s when

 
# **Control Tools**

Users can easily set the desired security mode, arm/disarm the alarm system, and more, all via wired LCD keypad, wireless tag, and keyfob.














# **Wired Detectors**

Continuous protection at its best! Fully programmable via the app and equipped with IFT and digital temperature compensation technology, the wired motion detector keeps everything under control.



#### **PIR Detector**

 HA-ALARM-PIR1



On-board EOL resistor

Digital temperature compensation

Adjustable sensitivity



#### **PIR Dual-tech Detector**

HA-ALARM-PIR2

Up to 30kg pet immunity

Sealed optics

Non-interfering 24 GHz microwave technology

3D optics including creep-zone protection



 
Smart environmental control technology

Anti-masking

Anti-cloaking

Low power consumption

# Accessories



#### **Wired External Sounder**

HA-ALARM-SIREN2

Single frequency point 110 dB (Maximum value)

IP55 protective level



Sound and LED flash indicated separately



Three types of alarm sounds are available: fire alarm, panic alarm, and intrusion alarm.



#### **Wired Sounder**

HA-ALARM-SIREN1

) Up to 105 dB output

LED flashlight

IP54 waterproof protection

Easy installation



#### **Wired Sounder**

DS-PS104X



Sound Decibel: 110dB at 1m

Siren working current: 180mA AT 12VDC



#### Piezo

DS-PS103

Sound Decibel: 105dB at 1m

IP54 protective level

Support 12VDC power input monitoring



15V Power Supply

HA-ALARM-Power 2-year warranty



**PIR Bracket** HA-ALARM-BKT



# **Compatible with Hikvision Alarm Products**

## **Communication Modules and Expanders**



## **Wired Detectors**




## **Compatible Wireless Accessories**



<sup>\*</sup>For unlisted detectors or peripherals, contact local distributor or Hikvision support for compatibility confirmation.



# Hilook Alarm Wiring Guide

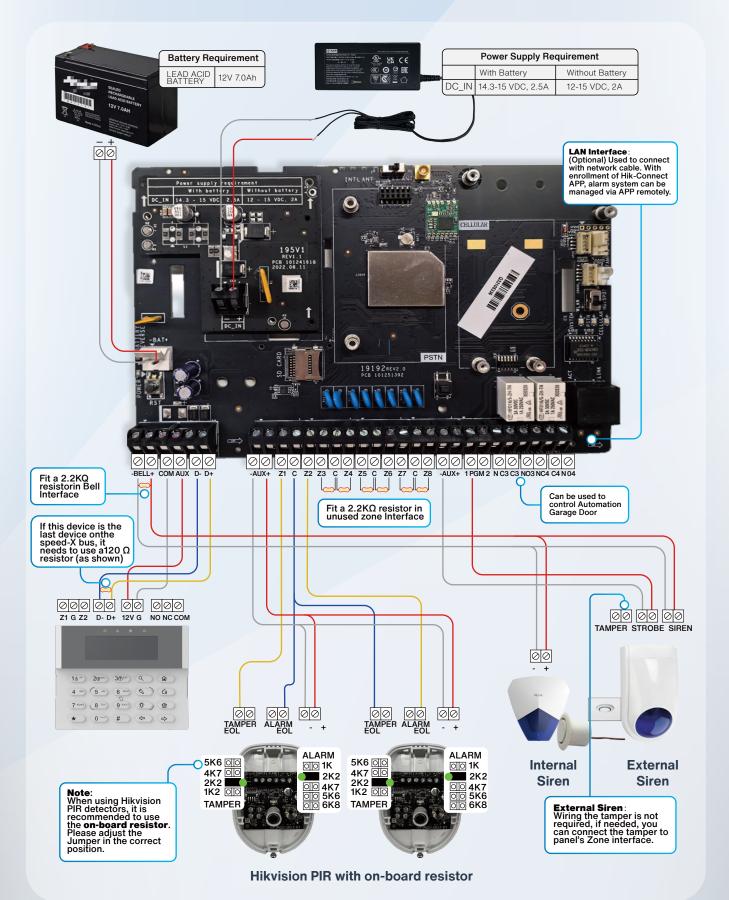



# 3-Step Configuration

# Step 1 Activate alarm Panel



- Power the Alarm Panel and wait until the keypad auto-enrolled. You will see the keypad enrolled successfully as in the picture.
- 2. Press the default admin code () (the default code is the last 6 number of the alarm panel series number) and then press you will enter activation mode
- 3. Enter the admin password (webpage password) and confirm it to activate the alarm system.
  - \* The default admin code will be changed to 258258 when second version of the Hilook Alarm is released.
- 2 \* Please note, the webpage password must contain both characters and numbers and is used to log in to the alarm panel webpage for advanced settings.

#### Step 2 Changing User Code



- Entering Settings Mode --Press default admin code and then press to enter Settings Mode, as in the picture
- 2. Choose User Management then press #(OK).
- 3. Choose Add User then press #(OK).
- 4. Enter user name then press #(OK).
- **5.** Enter user code twice to confirm.

  \*\* Up to 46 Operators can be added.

# Step 3 Changing Time



- 1. Enter Settings Mode.
- 2. Press → 9th to choose Date & Time then press #(OK).
- 3. Choose Date then press #(OK).
- **4.** Enter the correct Date then press **#**(OK) to confirm.
- 5. Choose Time then press #(OK).
- **6.** Enter the correct Time then press **#**(OK) to confirm.

# **APP Configuration**

# Step 1 Connect to Internet



Connect the device to the internet using an Ethernet cable.

# Step 2 Check Connection Status



Go to setting mode-Network-Cloud to check the *connection status*, make sure it is *online*.

# Step 3 Enroll to the APP



- Go to setting mode-Network-Cloud-QR code
- Using APP (Hik-Connect or Hik-Partner Pro) to scan the QR code to enroll the device.

## **How to Reset**

Step 1:

Open the main case.



Step 2:

Power on the panel.



#### Step 3:

Wait for this LED[sys] light to turn green.



### Step 4:

Long press and hold the reset button



#### Step 5:

When the red light flashes 5 times, release the button.



### Step 6:

The panel will automatically restart.

