


When the auto-tracking function is enabled on the Hilook PTZ-N3404LIU/SL, it supports four smart events: **Line Crossing, Intrusion, Region Entrance, and Region Exiting**.

Auto-tracking is enabled by default, but please ensure both the PTZ camera and NVR are running the latest firmware versions.

Scenario1: PTZ works standalone

Login camera's web page→VCA→Smart Event→Choose your event→Enable Tracking Linkage→Click Save

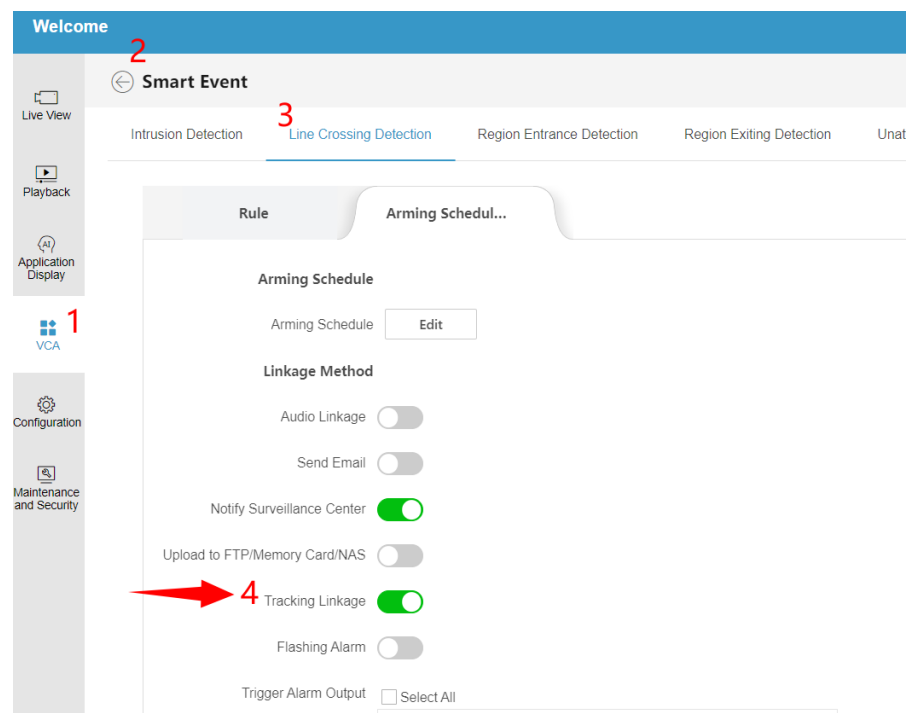

Scenario2: PTZ added into NVR

Login NVR's web page→SMD Events→ Choose your event→Enable Tracking Linkage→Click Save

