


## HiLook NVR 7 Steps Setup

### Hardware Setup

- 1: NVR, Camera, Monitor
- 2: Router, Ethernet Cable

### Local monitoring

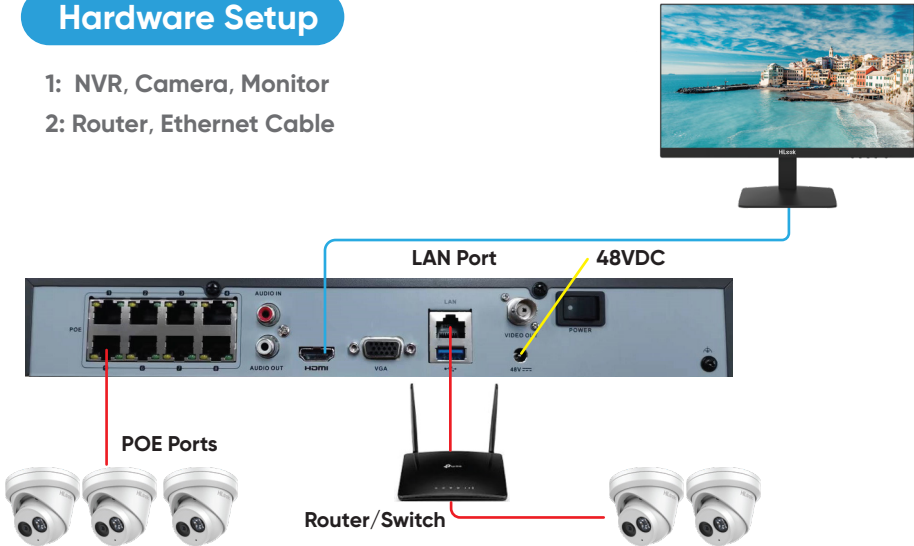

### 7-step Wizard

Step 1 of the 7-step wizard. The screen displays the following fields and options:

- \*User Name: admin
- \*Password: [masked] (Strong)
- \*Confirm Password: [masked]
- \*Camera Activation Password: [masked] (Use the Device Password checked)
- Reserved Email: [masked]@.com
- Activate button

Green arrows indicate the flow: from the Camera Activation Password field to the 'Activate' button, and from the Reserved Email field to the 'Activate' button.


#### Step 1

Activate NVR and reserve an email for password resetting


Step 2 of the 7-step wizard. The screen displays a user profile for 'admin' and a grid of circles for drawing an unlock pattern. A red box highlights the 'Do Not Use Unlock Pattern' option.

#### Step 2


Draw an unlock pattern or skip it

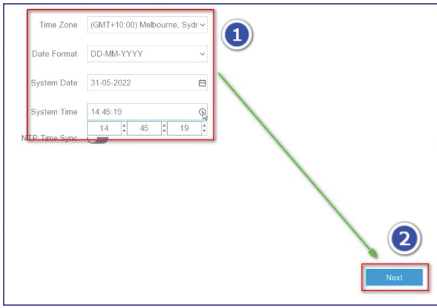


**Step 3** Configure **time** settings

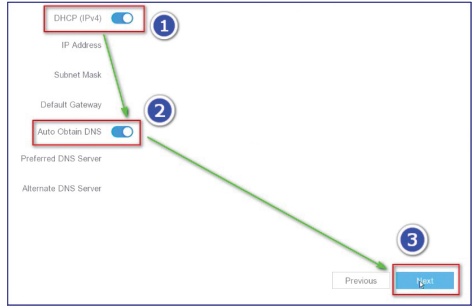


**Step 4** Enable **DHCP** to Configure IP settings

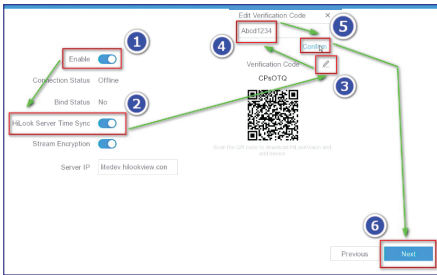

**Step 5** Configure **P2P** settings, change verification code if necessary

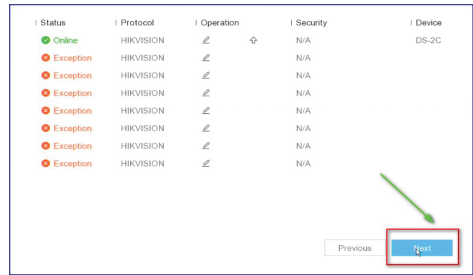


**Step 6** If camera is plug and play, click Next

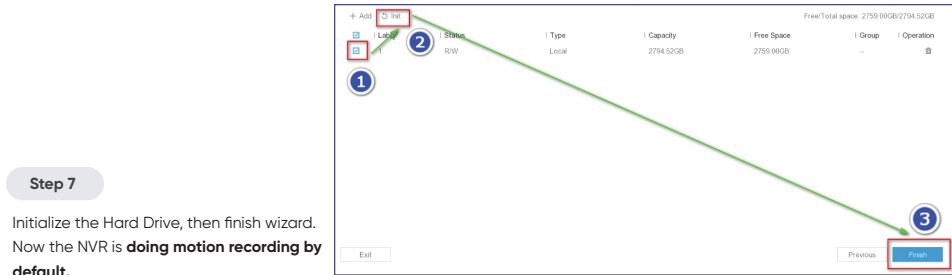

**Step 7**


Initialize the Hard Drive, then finish wizard. Now the NVR is **doing motion recording by default**.

## Add NVR to Hilook: Simple steps to greater security standards

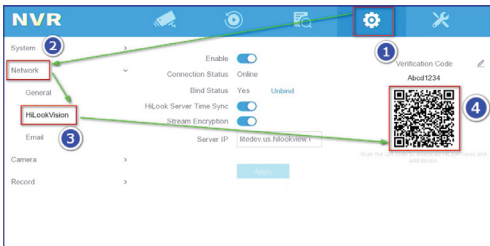

**Step 1**

Access the menu with QR Code page and make sure connection status (P2P status) is online.

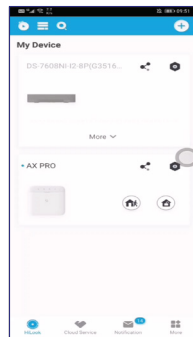

**Step 2**

Scan QR Code to download APP and add device.

