

Title:	How to set up Network Access				
Date:	9/13/2011	Version:	1.0	Pages	1
Product:	All Hikvision IP Products				
Action Required:	Information Only				

- 1) Add the Device to I-VMS 4000 and be sure that you can view your cameras on your local network
- 2) From the Setup tab, select the device
- 3) Enter the Remote Settings menu of the DVR/NVR
- 4) Select "Network Settings"
- 5) Input the Default Gateway of the network [This can be found by running "ipconfig" from the windows command prompt]
- 6) Configure your HTTP port and the Device port [By default the device port for Hikvision devices is 8000 and the default HTTP port for most networks is 80]
- 7) In your Router, be sure to forward ports 80 and 8000
- 8) Use the PUBLIC IP address of the router to access the DVR remotely

NOTE: Public IP address can be found by using a PC connected same network as the DVR to access www.whatismyip.com

