

MANAGING YOUR NVR IS NOW EASIER THAN EVER

Only three steps to get live view

Available models: non-PoE NVR, D Series, V3.4.104



Tips

- The NVR and cameras should be in the same network segment
- Cameras to be connected should be inactive
- The number of connected cameras should not exceed the NVR capacity

 
Visitor Mode

Available models: non-PoE NVR, D Series, V3.4.104

The Visitor Mode enables you to access and operate the NVR without registration or login, by scanning the QR code on the NVR with the HiLookVision app.



HiLookVision
V.3.5.1



Visitor Mode



Access
NVR QR Code

*Note: The version of the app should be V.3.5.1 or above.

Tips



HiLookVision

To download the HiLookVision app onto your phone, you may either scan the QR code on the left or search "HiLookVision" in App Store or Google Play.


Self-Service NVR Unbinding

Available models: non-PoE NVR, D Series, V3.4.104




1

Scan the NVR QR code with the HiLookVision app

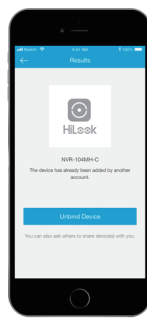

2

 Click the "Unbind Device" button

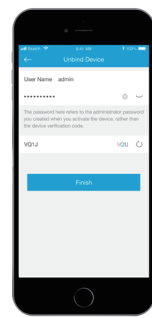

3

Enter the NVR password and verification code

*Note: Make sure the NVR and the phone are in the same LAN when you unbind the NVR and the version of the app is V.3.5.1 or above.

Tips

It is recommended to update the app to its latest version so that you can access all the handy functions inbuilt.