


DS-KB8113-IME1 Vandal-Resistant Doorbell

V2.2.1 Build 200526 Release Note

(2020-06-09)


Device Model	DS-KH9510-WTE1、DS-KH9310-WTE1
Firmware Version	Indoor Station: V2.1.8_200515
iVMS-4200 Version	
Hik-Connect APP	
Batch tools	

Web interface display

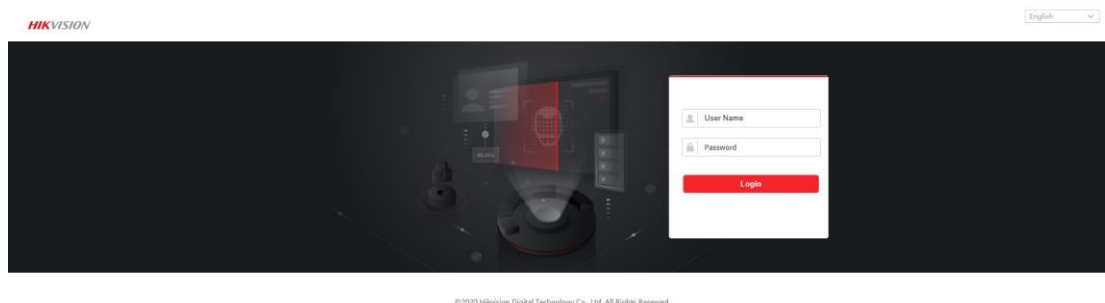

Function Description

1. Support RTSP port configuration

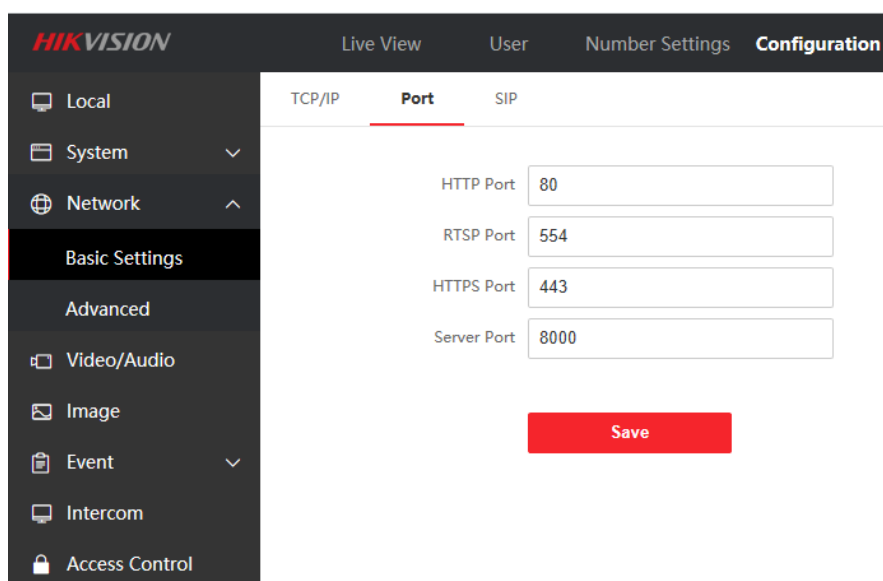

2. Support SIP call timeout time configuration

The screenshot shows the HIKVISION Configuration interface. The left sidebar contains a menu with categories: Local, System, Network, Basic Settings, Advanced, Video/Audio, Image, Event, Intercom, and Access Control. The main content area is titled 'Configuration' and has sub-tabs for TCP/IP, Port, and SIP. The SIP tab is active, showing the following settings:

- Enable VOIP Gateway
- Register User Name:
- Registration Password:
- Server Address:
- Server Port:
- Expiry Time: minute(s)
- Register Status: Not Registered
- Number:
- Display User Name:
- STUN Settings**
- STUN Server Domain N...:
- STUN Server Domain Port:

A red 'Save' button is located at the bottom center of the configuration area.

3. The standard SIP account length is extended to 32 bits

4. The relay can be configured as a mechanical doorbell or electric lock

The screenshot shows the HIKVISION Configuration interface. The left sidebar is the same as in the previous screenshot. The main content area is titled 'Configuration' and has sub-tabs for Device ID Settings, Session Settings, Time Parameters, Ringbacktone Settings, Press Button to Call, and I/O Settings. The I/O Settings tab is active, showing the following settings:

- I/O Input No.:
- Input:
- I/O Output No.:
- Input: (highlighted in blue)

A red 'Save' button is located at the bottom center of the configuration area.

5. Support Hik-Connect

- (1) Hik-Connect supports call record query
- (2) Support synchronized time
- (3) Support volume adjustment
- (4) Support Hik-Connect remote unlocking
- (5) Motion detection area and sensitivity configuration

6. Support multi-language in 19 countries

The screenshot shows the Hikvision Configuration interface. The top navigation bar includes 'Live View', 'User', 'Number Settings', and 'Configuration'. The left sidebar lists various system settings categories. The main content area is titled 'Basic Information' and contains several configuration fields:

- Device Name: OUTDOOR STATION
- Device No.: 88
- Language: A dropdown menu is open, showing a list of languages: Arabic, Bulgarian, Croatian, Czech, English, Dutch, French, German, Greek, Hungarian, Italian, Polish, Portuguese, Romanian, Russian, Serbian, Spanish, Turkish, and Vietnamese.
- System Type: (empty)
- Model: (empty)
- Serial No.: (empty)
- Firmware Version: (empty)
- Encoding Version: (empty)
- Web Version: (empty)
- Plugin Version: (empty)
- Number of Channels: 1
- Number of Alarm Input: 1
- Number of Alarm Output: 1

A red 'Save' button is located at the bottom of the configuration area.

8. Device can automatically activate/configure the indoor station (when the indoor station is inactive)