

Title:	How to Configure Panic Button for MVR	Version:	v1.0	Date:	12/13/2016
Product:	MVR and Panic Butto	Page:	1 of 5		

How to Configure Panic Button for MVR

1. Cable Connection



- 1) MVR(if there are two RS232 interfaces , the RS232-2 interface is usually used for Alarm Terminal connecting;
- 2) 6-pin serial port (MVR) to aviation convertor cable;
- 3) An eight-meter long extension cable;
- 4) The DS-1530HMI Mobile Panic button;

2. Configuration on the website

1) The RS232 should be configured like following picture:

		Live View	Playback	Picture	Configuration	
🖵 Local		Basic Information	Time Settings	R\$232 R\$485	Menu Output	
System		COM	COM 2	2	\checkmark	
System	Settings	R\$232				
Mainter	ance	Baud Rate	9600		~	
Security	r	Data Bit	8		~	
Camera	Management	Stop Bit	1		~	
User M	anagement	Parity	None		~	
Networ	k	Flow Ctrl	None		~	
Q. Video/A	ludio					
🔝 Image		🗎 Sa	ave			
Event						
🖺 Storage	3					
Gi Vehicle						

2) The panic button is the last one of Alarm Input, the "Normal linkage" "Trigger Alarm output" linkage &

© Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved. No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>

HIKVISION

Title:	How to Configure Panic Button for MVR	Version:	v1.0	Date:	12/13/2016
Product:	MVR and Panic Butt	Page:	2 of 5		



© Hangzhoù Hikvision Digital Fechnology Co.,Ltd. All Rights Reserved. No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>



Title:	How to Configure Panic Button for MVR	Version:	v1.0	Date:	12/13/2016
Product:	MVR and Panic Butto	Page:	3 of 5		

3. Configuration on the iVMS-5200 Mobile

1) In order to send the panic button alarm to the iVMS-5200 Mobile platform, follows steps should be configured with the Webpage.



Choose the Alarm Input for the Panic Button

← 💿	kttp://10.41.9.75/app/dist/index.h	ml#/eventAndAlarm/alarm	- C 皮友
😑 海南府	視力公案I统 🔮 Configurati	on 🙎 iVMS-5200 Mobile Survei × 🗶 Configuration	
🙎 ivm	IS-5200 Mobile Surveillance		
	Alarm Arming Schedule Template	Add Alarm Aldem Bindle	
	Email Template		
	Map Template of Driving Area	Additional Settings	
山 小 山		Related Cameras: These comeras will be higgered recording and vie Search	able as part of alerns.
⊕ ©		Trigger Pop-up Window 🛛 🗵	
		Actions	
		Trigger Audible Warning OFF	
		Link Alarm Output	
		Send Email OFF	
		Send to Mobile Client OFF	
		Add Add and Continue	Cancel

Configure the Alarm Linkage

2) To arm the alarm input and enable or disable the Pop-up and Voice notice as required on the control client of iVMS-5200 Mobile;



Title:	How to Co	How to Configure Panic Button for MVR Vers					v1.0	Date:	12/13/201	5
Product:		MVR and Panic Button						Page:	4 of 5	
	🛕 iVMS-5200 Mobile Surveillan	ce							🗘 🔶 🚺 admin	☺ᅀ_
	û Alarm center				前 Clear Alarm Info	🖏 Muted	💾 Pop-up Wind	ow Enabled	Arming Control	🗘 Alarm Out
	C Arming Control									1
	Area Resource	Resource Camera Alarm Alarm Input Alarm Exception Alarm								
	Search Q			Disarm Ari					Fil	ter
	🖃 崙 Control Center	Index	Arming Status	Alarm Name	Alarm Type	Alarm Priorit _. Dis	arming Start Time			
	🔳 🧮 TEST	1	Armed	OUT4_Alarm Input4_Se	Sensor Alarm	High				
	🕀 🔟 1									
	<u>∎</u> F9									
	🔟 h_test									

3) Alarm Center Display: When the all configurations have been done, if the panic button is triggered, it will generate an alarm signal and be displayed on the alarm center of iVMS-5200 platform:







First Choice for Security Professionals HIKVISION Technical Support