HIKVISION

How to display of decoded video on monitor by

DS-1100KI

Note: This manipulate documentation mainly focus on how to display of decoded video on monitor base on the different firmware version of decoder between V3.0.0 and V3.5.0. The keyboard firmware version is V3.0.0.

Steps (V3.0.0)

1. Press the **Num + Mon** keys to select the monitor. You can check the **Num** on the Output settings.

Wall/Scene Output Settings Output List					Output Group	
IP/Dor	main				Search	
No.	Туре	Device	IP Address	Port	Edit	Playb
1	VGA1	Embedded mult	i[172.6.22.190	8000	1	0
2	VGA2	Embedded mult	i[172.6.22.190	8000	2	0
3	VGA3	Embedded mult	il 172.6.22.190	8000	2	6 -
4	VGA4	Embedded mult	i[172.6.22.190	8000	2	© -
5	VGA5	Embedded mult	i[172.6.22.190	8000	2	0
6	VGA6	Embedded mult	i[172.6.22.190	8000	2	0
7	VGA7	Embedded mult	i[172.6.22.190	8000	2	0
R	VGAS	Embedded mult	if 170 & 22 100	2000		i 🚗 🔤 🔽
Total	20 items	Page 1/3	4 ● ▶	N TO	(1	▶P ⇒
Logout m				R	eturn	

 Press the Num + Mult keys to select the split screen display mode for the output channel. And Press the Num + Win keys or click the touch screen to select the display window on the monitor.



3. Press the **Num + CAM** keys to select the input camera.

	Shortcuts	
MON 1	🗵 🌾	
CAM		
x		
Â		
	CAM	
	2	
	- k	
	,	
		CAM
Attention:		

Example:

You can input the "1+MON, 2+WIN, 3+CAM" keys to decode the video signal from camera 3 and display it on



window 2 of monitor 1.

Steps (V3.5.0)

1. For the decoder with firmware version V3.5.0. the output channel will not be displayed on the output list. For example, the segment No. of 64HD-T is 2000, then the **Num** In step 1 should be 2000 plus window No.

Device List						
Encoder Controller Coder						
Device Type	Device Name	IP Address		Port	Status	Configu
DEC	2000_155	10.6.11.155		8000	Online	6
	Segment No.					
Total 1 items	Page 1	l/1 ⊮		► H	To <mark>∢</mark> 1	▶P ⇒
nn Logout m					mmF	Return

2. The decoder should cooperate with IVMS-4200 Video Wall Client Software when its firmware version is V3.5.0. For example, you can open two window in video wall, if you want to display the video on **Screen 2**, Press **2002 + MON** keys to select Screen 2 of the video wall.

File System View T	Tool Help		iVMS-4200 Video Wall Client	Software	
🖳 Video Wall	Screen Control	Bevice Management	Account Management	🗱 s	ystem Configuration
Signal Source	default video w	all The decod		/ideo Wall	Client Software
+ 0					
land decoder	d	ecoder:Screen1	VGA: decoder:Screen2		
					Open window
				* 4	

Press the Num + MULT keys to select the multi-division display mode for the output channel. And Press the Num + Win keys or click the touch screen to select the display window on the monitor. Press the Num + CAM keys to select the input camera.





Example:

You can press the "2002+MON,4+WIN, 2+CAM" keys to decode the video signal from camera 2 and display it on window 4 of output channel 1.



First Choice for Security Professionals

HIKVISION Technical Support