



How to use PTZ control on 1200&1006KI

Steps


Step1: Power the keyboard and connect it into network or connect to DVR or domes by 485 line. Then click **OK** and input password. After inputting password click **OK** again to login.

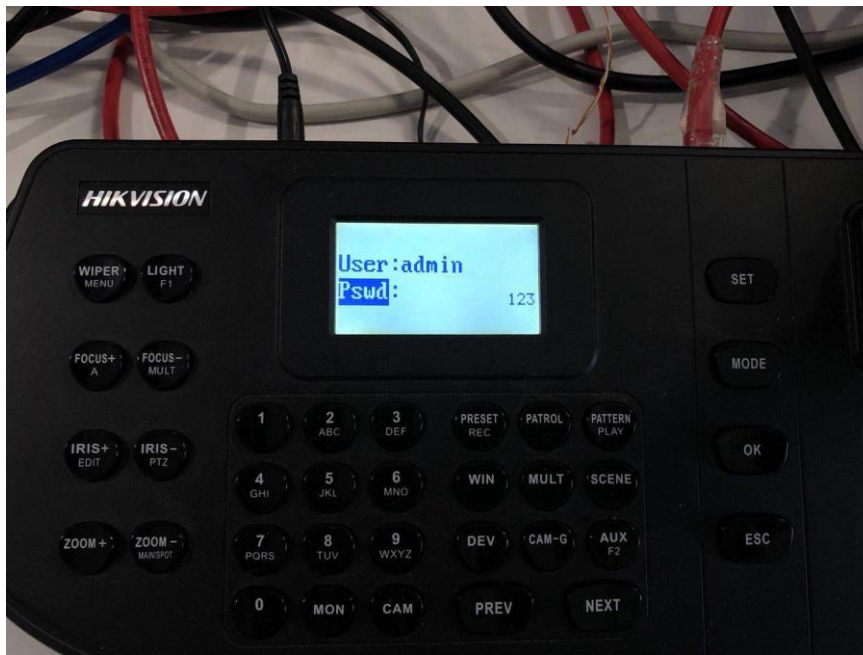

Step2: Choose the **Shortcut** option. And enter the function menu.

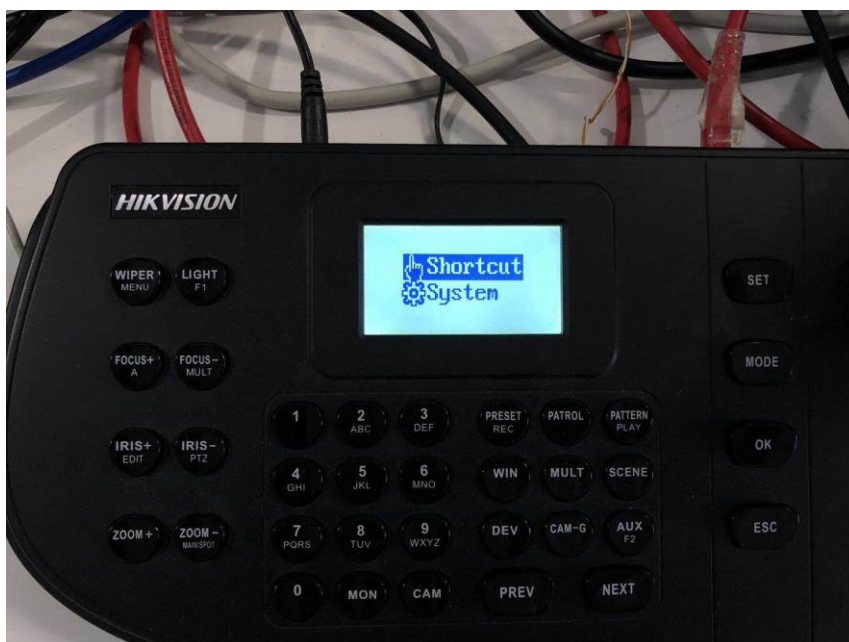

Step3: If the keyboard is 1200KI, you can choose **DVR by IP** or **DVR by 485**. If the keyboard is 1006KI, you can only choose the **DVR by 485**.

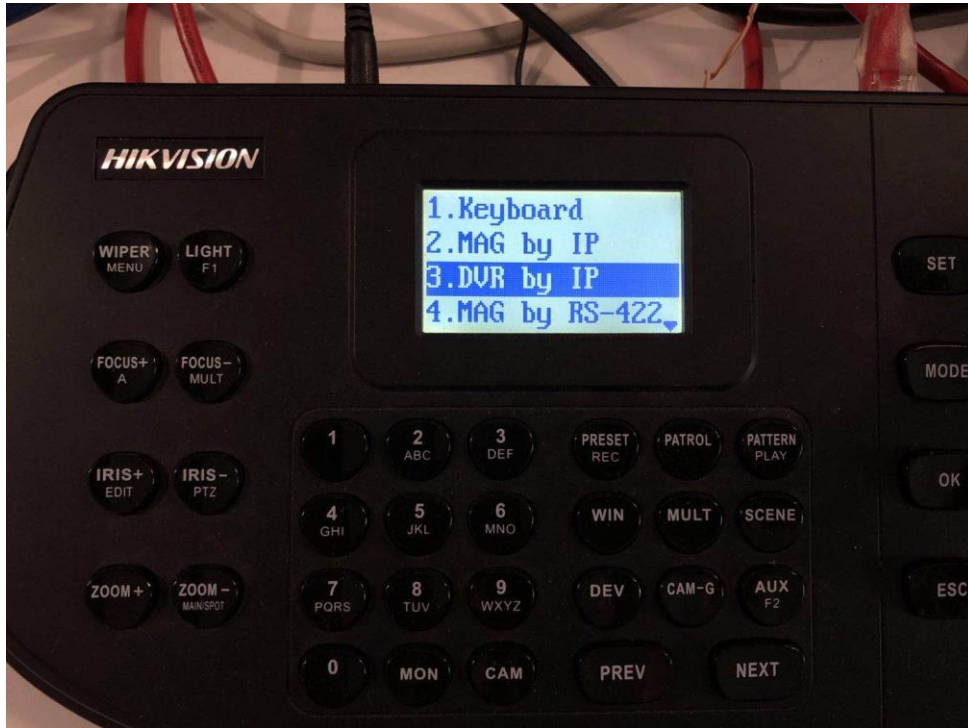

Step4: When you choose **DVR by IP**, you should login the 1200KI web client to add the DVR. When you use 1006KI choose the **DVR by 485**, you also need to find the Device ID and choose it. You need to login the DVR/NVR web client to find the **Device ID**.

IPC/IP Dome **DVR/NVR** Decoder

Device Management

- Device List
- Input Channel
- Output Channel
- System Management

Local

System

System Settings

Add Edit Delete Add SADP


Device ID	Device Model	IP Address	Port No.
<input type="checkbox"/> 1	DS-7216HUHI-K2	10.16.112.48	8000
<input type="checkbox"/> 2	DS-7316HUHI-K4	10.16.112.26	8000

Basic Information Time Settings RS-232 RS-485 Menu Output About


Device Name

Device No.

And you can see the **Device ID** on the 1200KI web client. When you choose the DVR by IP option, you need to input **Device ID**. After you did it, click **Dev** button. And input the camera number by number button 1-9 on the panel to choose the camera you want to PTZ control. Then click **OK** and **IRIS-PTZ**. Now you can PTZ control the camera.

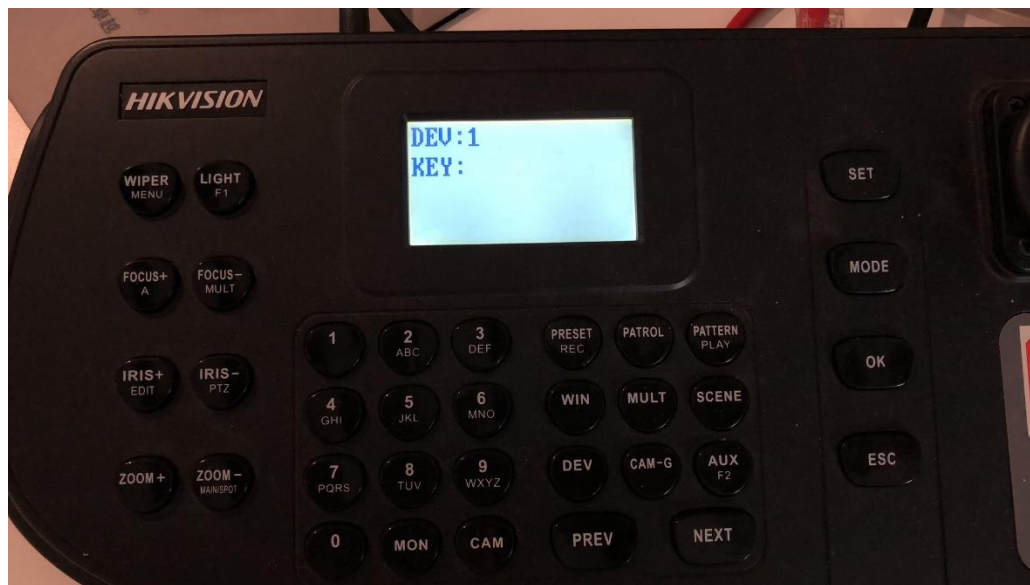

Step5: Actually expect this idea, we have another way to PTZ control the camera. When you enter the **Shortcut** menu, click **keyboard**. You input the **Device ID** as the first way and only input camera ID and click **CAM** button, you can PTZ control the camera.

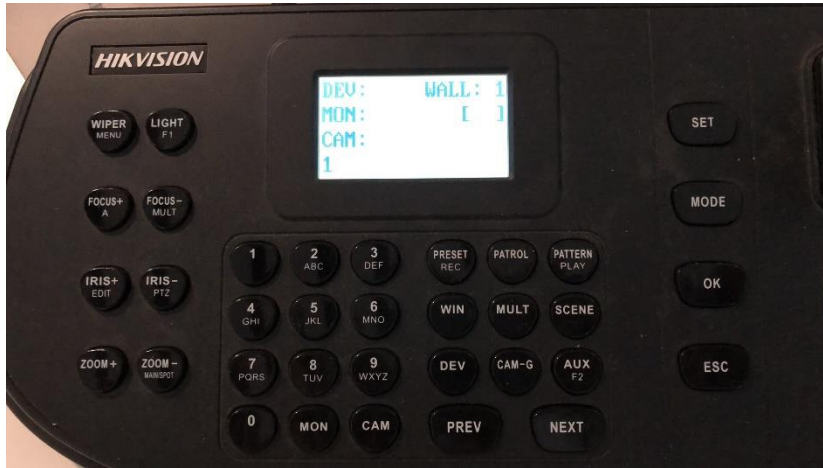

First Choice for Security Professionals
Hikvision Technical Support