

<b>Title:</b>	How to Upgrade Wi-Fi doorbell Firmware	<b>Version:</b>	v1.0	<b>Date:</b>	17/10/2018
<b>Product:</b>	Video Intercom	<b>Page:</b>	1 of 2		

# How to Upgrade Wi-Fi doorbell Firmware

## Instructions


There are 3 methods you can choose to upgrade Wi-Fi doorbell firmware:

- (1) Upgrade in Hik-connect app
- (2) Upgrade with SD card
- (3) Upgrade with iVMS-4200

## Upgrade Methods

### 1. Upgrade in Hik-connect App

Hik-connect will automatically detect new available firmware for Wi-Fi door bell, you can upgrade in: **device setting>> device version:**

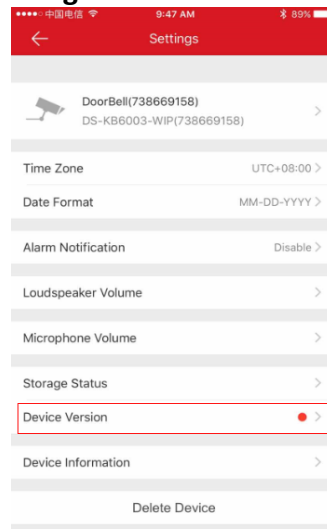


### 2. Upgrade with SD Card

Put the new firmware ('digi.cap' file) into SD card root directory, insert card to Wi-Fi door bell, restart device, device will automatically upgrade and reboot.

### 3. Upgrade with iVMS-4200

Make sure your computer and your Wi-Fi doorbell are in same network, using activate password to add device into iVMS-4200. If you haven't set activate password for Wi-Fi doorbell before, the default password is 'admin+Verification Code', format such as : 'adminHLPVTL'. Then you can upgrade in: **Remote Config >> System >> System Maintenance:**

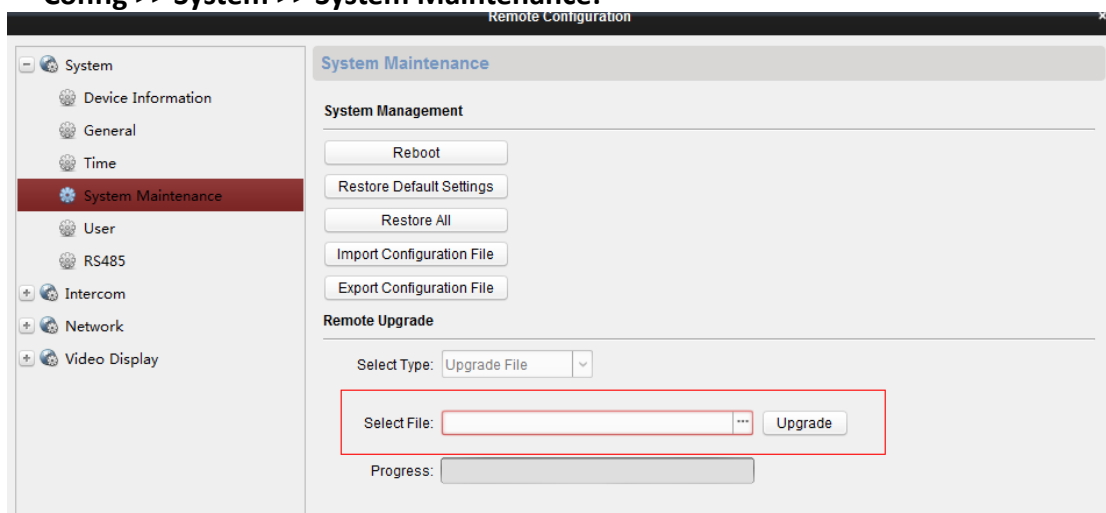

<b>Title:</b>	How to Upgrade Wi-Fi doorbell Firmware	<b>Version:</b>	v1.0	<b>Date:</b>	17/10/2018
<b>Product:</b>	Video Intercom	<b>Page:</b>	2 of 2		



**First Choice for Security Professionals**  
***HIK*VISION Technical Support**