

## How to add IPC with POE function to NVR

### Description

POE cameras could be added into NVR which supports POE function with both **Manual** mode and **Plug-and-Play** mode. When applying the Plug-and-Play mode, please kindly make sure the password of the camera is the same with the NVR, or you could set the password of the camera to 12345.

**Note:** Plug-and-Play mode could only be applied when the camera is added directly to the POE port of a NVR.


### Preparation

- 1, POE cameras
- 2, POE NVR
- 3, POE switch



### How to add POE cameras to NVR using Manual mode:

#### Steps:

- 1, Connect your camera to the POE port of the switch. Connect your NVR to the same switch.
- 2, Go to **Camera Management->Camera->IP Camera**, select any channel and click **Edit**.

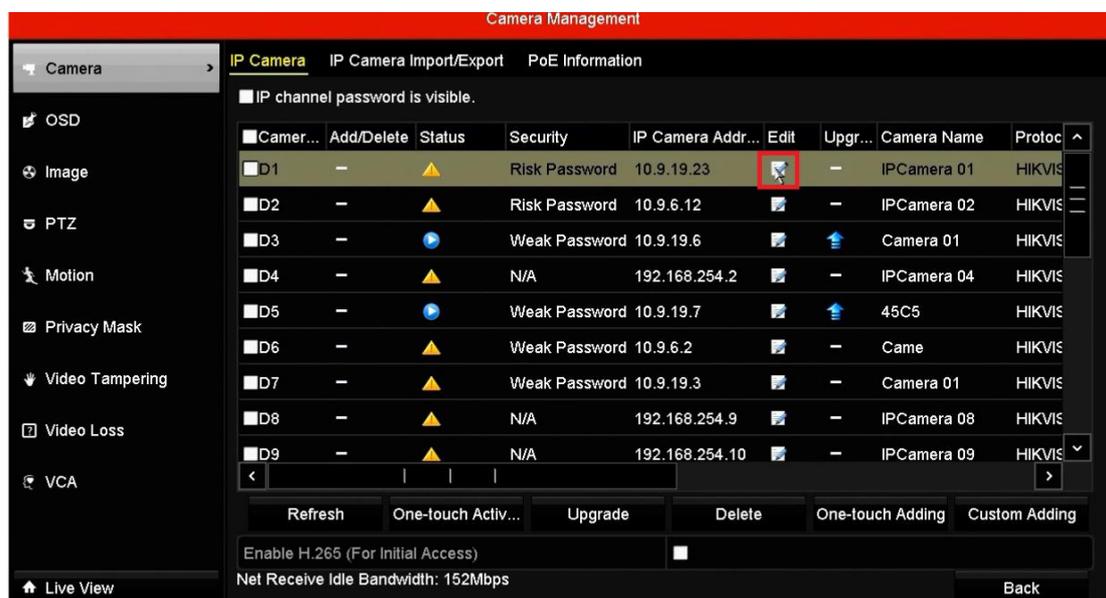

3, Select **Manual**, type in the **IP Camera Address & User Name & Admin Password**, click **OK**.

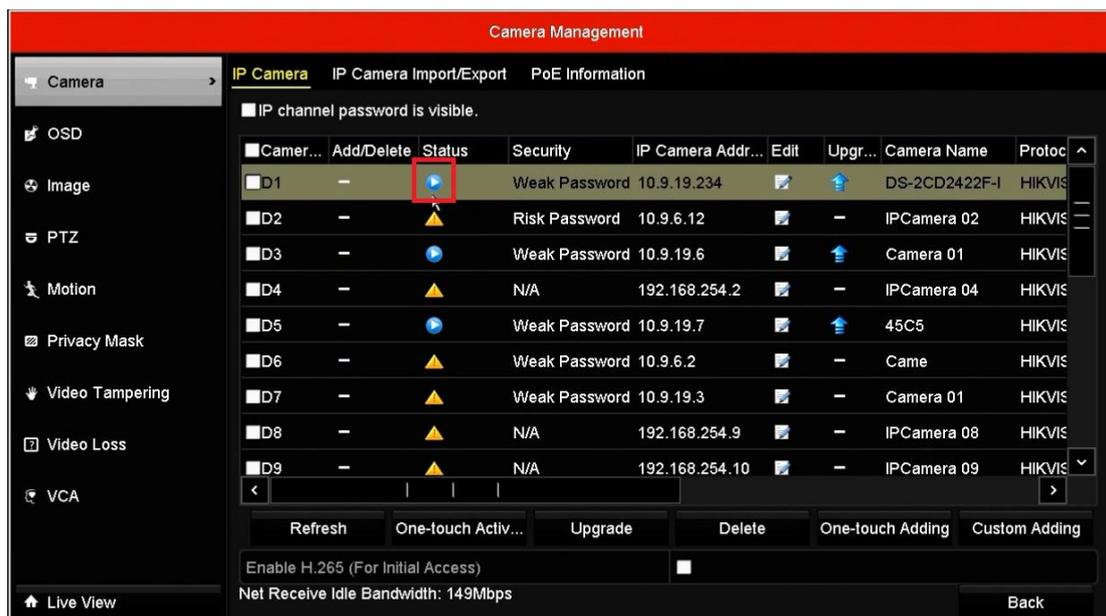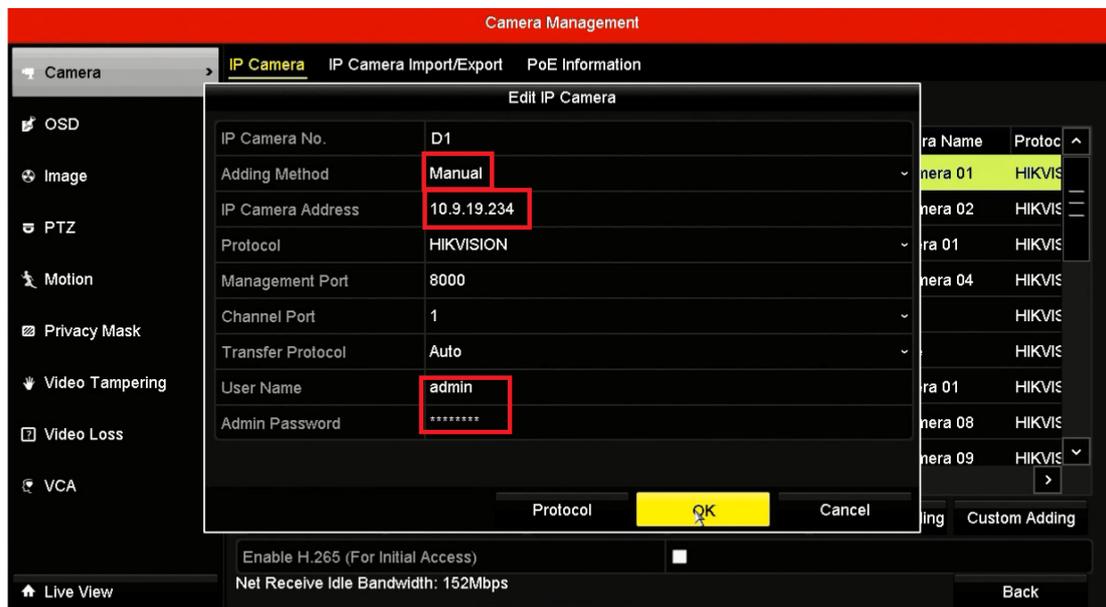

**Note:**

- 1, If you select the Manual mode to add the IPC with POE function, the password of the IPC could be different from NVR.
- 2, Do not press **One-touch Adding** unless the cameras' passwords are the same with the NVR password or the password of the camera is 12345.

## How to add IPC with POE function to NVR using Plug-and-Play mode:

### Steps:

- 1, Connect your camera to the POE port of the NVR. Assume you connect your camera to the POE port 2.
- 2, Go to **Camera Management->Camera->IP Camera**, highlight the second channel (D2) and click **Edit**.



- 3, Select **Adding Method** as **Plug-and-Play**, click **OK**.



Camera Management

Camera > IP Camera IP Camera Import/Export PoE Information

■ IP channel password is visible.

Cameras	Add/Delete	Status	Security	IP Camera Addr...	Edit	Upgr...	Camera Name	Protoc
■ D1	—	●	Weak Password	10.9.19.234	✎	⬆	DS-2CD2422F-I	HIKVIS
■ D2	—	●	N/A	192.168.254.5	✎	⬆	FISHEYE	HIKVIS
■ D3	—	●	Weak Password	10.9.19.6	✎	⬆	Camera 01	HIKVIS
■ D4	—	▲	N/A	192.168.254.2	✎	—	IPCamera 04	HIKVIS
■ D5	—	●	Weak Password	10.9.19.7	✎	⬆	45C5	HIKVIS
■ D6	—	▲	Weak Password	10.9.6.2	✎	—	Came	HIKVIS
■ D7	—	▲	Weak Password	10.9.19.3	✎	—	Camera 01	HIKVIS
■ D8	—	▲	N/A	192.168.254.9	✎	—	IPCamera 08	HIKVIS
■ D9	—	▲	N/A	192.168.254.10	✎	—	IPCamera 09	HIKVIS

< | | | >

Refresh One-touch Activ... Upgrade Delete One-touch Adding Custom Adding

Enable H.265 (For Initial Access)

Live View Back

**Note:**

- 1, Make sure your IPC camera has the same password with your NVR.
- 2, Do not press **One-touch Adding**.

**First Choice for Security Professionals**

***HIKVISION* Technical Support**