HIKVISION

How to make linkage on controller to output buzzer from card reader

Title:	How to make linkage on controller to output buzzer from card reader	Version:	v1.0	Date:	2025-6-10
Product:	Access Controller			Page:	1 of 2

How to make linkage on controller to output buzzer from card reader

1. The function application description


The card reader is connected to the access control. When the access control triggers an alarm, the buzzer on the card reader sounds.

In this case, the controller do not need add another siren to make the alarm, the card reader inner speaker can be used to trigger alarm.

2. Configuration on platform

1) Add device on platform like hcp


Open the gear button to open configure page.

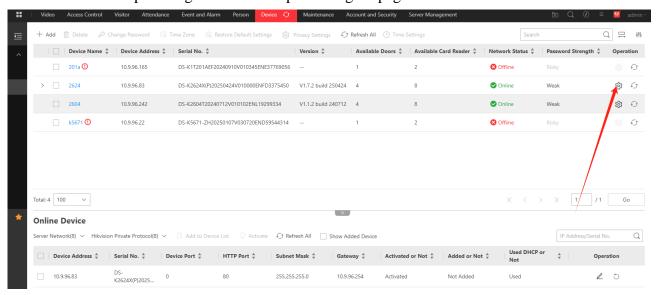

2) Select sound type.

Choose on linkage page to add a new linkage action

Title:	How to make linkage on controller to output buzzer from card reader	Version:	v1.0	Date:	2025-6-10
Product:	Access Controller			Page:	2 of 2

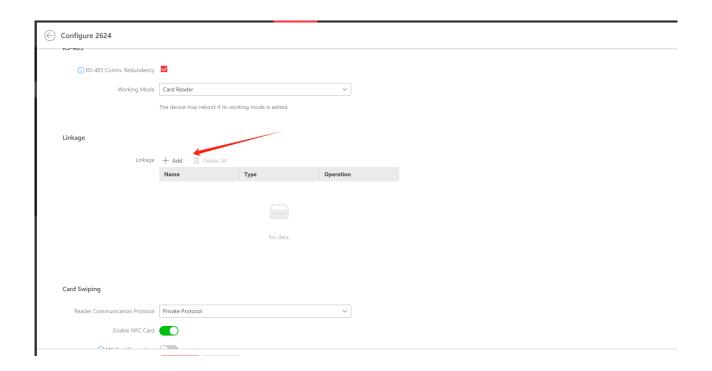

3) Configure the reader buzzer parameter.

Click event linkage and choose the event you want to trigger the alarm in your case, then for linkage target action, enable buzzer switch and choose the related card reader you want to perform the buzzer.

