



**How to set up a one-touch button to unlock an  
Android indoor station**

<b>Title:</b>	How to set up a one-touch button to unlock an Android indoor station	<b>Version:</b>	v1.0	<b>Date:</b>	05/06/2025
<b>Product:</b>	Video intercom	<b>Page:</b>	1 of 2		




## Preparation

---

1. Indoor station (Using DS-KH9310-WTE1(B) V2.2.86\_250325 or above as example).

Users can control the output of a single door without having an active call or viewing the picture in real time, with just one touch.

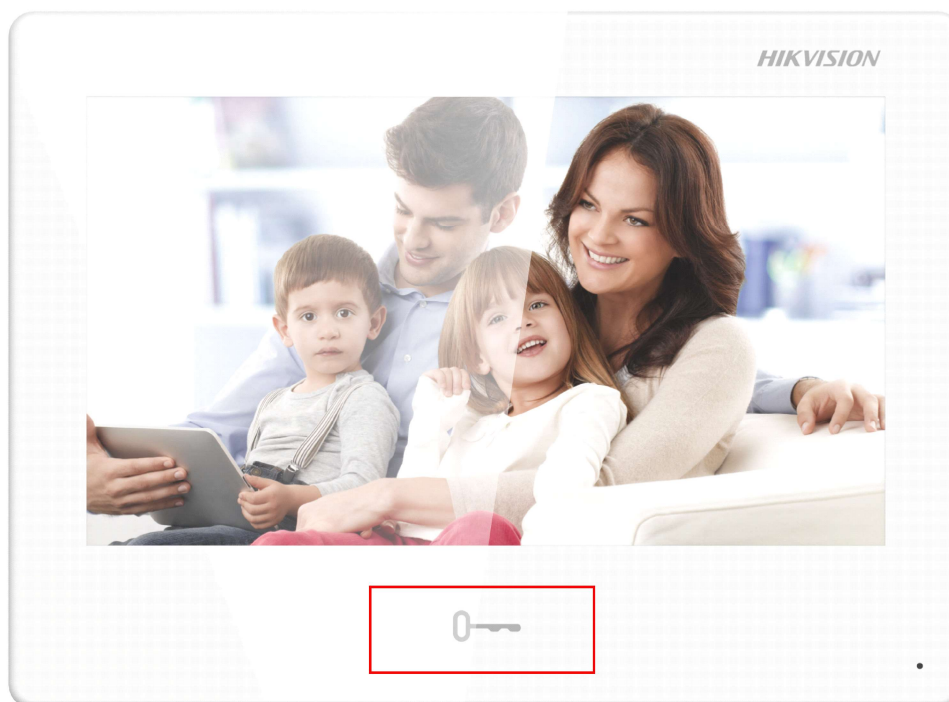

<b>Title:</b>	How to set up a one-touch button to unlock an Android indoor station	<b>Version:</b>	v1.0	<b>Date:</b>	05/06/2025
<b>Product:</b>	Video intercom	<b>Page:</b>	2 of 2		



## Settings:


- Enter **Settings** -> **Performance** -> **Press to Unlock** menu.



- Enable Press to Unlock option and select **Lock 1** or **Lock 2**.



**Note:** Only one lock can be selected.

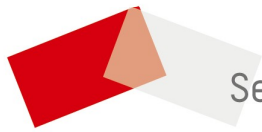

See Far, Go Further