

Title:	DS-19A Series white list configuration	Version:	v1.0	Date:	2018/08/07
Product:	Intrusion Alarm	Page:	1 of 4		

DS-19A Series white list configuration

Operating process (configuration process)

- 1) Confirm Security Control Panel model support GPRS
- 2) Configuration white list in 4200
- 3) Test the result

Operating Steps (configuration steps)

1. Confirm the Security Control Panel model is 19XXX-XXG, confirm the control panel have GPRS module. DS-19A08-01BNG for example, Put the mobile SIM card in the card slot shown below :



Figure 1:SIM card slot figure

2. In 4200 client remote configuration, network, white list, enable the white list, add the SIM card number, set the operate permissions and interval time, as the following figure.

Title:	DS-19A Series white list configuration	Version:	v1.0	Date:	2018/08/07
Product:	Intrusion Alarm	Page:	2 of 4		

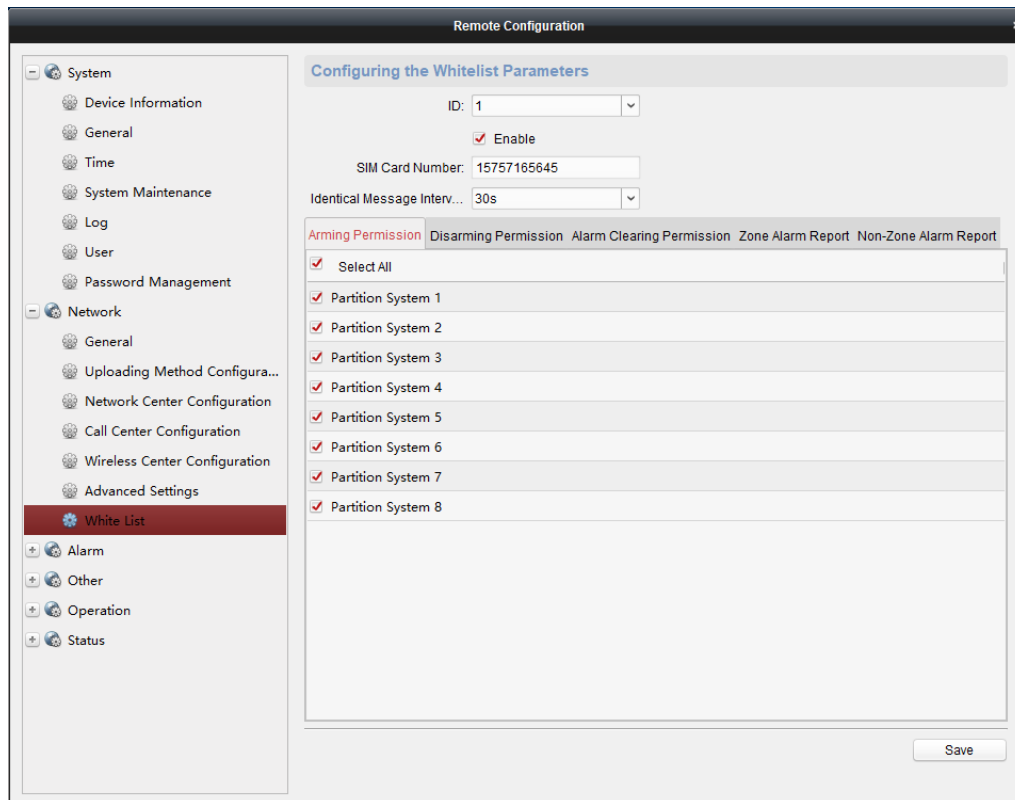


Figure 2:White list configuration

【ID】 : The drop-down menu has 6 ID, support 6 SMS contact, Each SMS contact only corresponding to one SIM card number ;

【SIM card number】 : SMS contact SIM card number ;

【Identical Message Interval time】 : Same content text messages sent to the corresponding contact interval time, interval time of 0-5999s;

【Arming/Disarming/Alarm Clearing Permission】 : Contacts permissions configuration ;

【Zone alarm Report/ Non-Zone alarm Report】 : Set the content of sending message.

Steps:

1) Enter the whitelist configuration interface.

Remote Configuration->Network->Configure Whitelist

2) Select the index of the whitelist.

3) Check the **Enable** checkbox to enable the configuration.

4) Enter the phone number of the whitelist into the SIM Card Number text box.

5) Select the identical message time interval that represents the interval of sending message triggered by the same event.

6) Select the permission of the whitelist on the permission panel.

7) Click **Save** to save the settings.

Title:	DS-19A Series white list configuration	Version:	v1.0	Date:	2018/08/07
Product:	Intrusion Alarm	Page:	3 of 4		



White list of SMS contacts through to send message to SIM card to remote control the panel, such as Arming, Disarming, Clearing.

Arming command : 121#Partition number (Three digits) #

Disarming command : 120#Partition number (Three digits) #

Clearing command : 100#Partition number (Three digits) #

Example : Partition 1 Arming:121#001#

3. Test results, using mobile phone to send arming/disarming command, then will receive message of Arm/Disarm success.

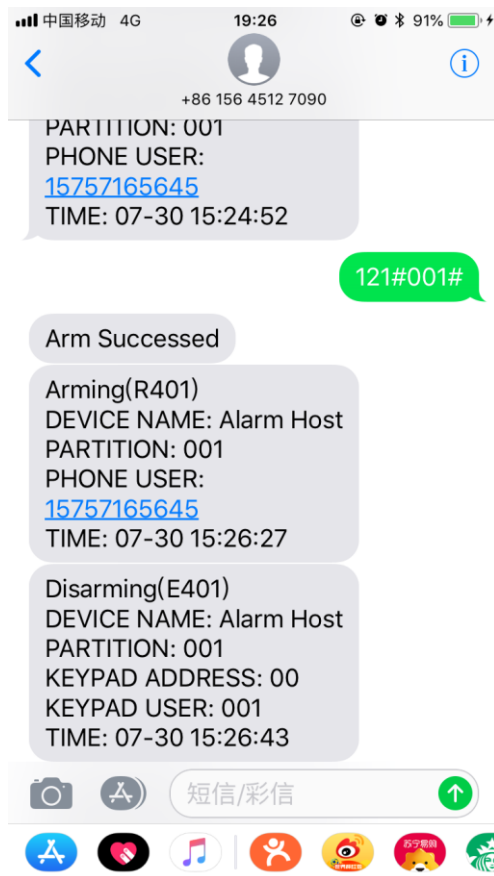


Figure 3: Mobile phone message

Table 1 : White list Suitable

Model	
DS-19A08-BN(G)	DS-19S08-04BN(G)
DS-19A16-BN(G)	DS-19S16-04BN(G)
DS-19A08-01BN(G)	DS-19A08-F/Kx(G)
DS-19S08-04F/Kx(Gx)	DS-19S08N-04F/Kx(Gx)

Title:	DS-19A Series white list configuration	Version:	v1.0	Date:	2018/08/07
Product:	Intrusion Alarm	Page:	4 of 4		



First Choice for Security Professionals

HIKVISION Technical Support