

| | | | | | |
|-----------------|--|-----------------|------|--------------|------------|
| Title: | How to configure Alarm Notifications to Mobile Phone (SMS or Voice call) | Version: | v1.1 | Date: | 07/18/2019 |
| Product: | AX Series Wireless Security Control Panel | | | Page: | 1 of 3 |

Preparation

1. AX Series Wireless Security Control Panel, V1.0.4 or above
2. Internet Explorer
3. One SIM card and one Mobile Phone

How to Configure Alarm Notifications to Mobile Phone (SMS or Voice call)

When an alarm is triggered, if you want to send the alarm notification to mobile phone (SMS or Voice call), you can set the notification push parameters.

1. Put sim card into the card slot

- 1) Please turn off power of Wireless Security Control Panel.
- 2) Put sim card into the card slot.
- 3) Turn on Power of the Wireless Security Control Panel.

Note

If you insert the SIM card when the power on, you need restart the wireless control panel.

2. Configure Message Notifications

- 1) Click **Communication Parameters** → **Message Notification**.
- 2) Enable the target notification.

Alarms and Tamper

The device will push notifications when the zone alarm is triggered or the device tamper alarm is triggered or restored.

Life Safety Alarms

The device will push notifications when fire alarm, gas alarm, or medical alarm is triggered.

Maintenance and Faults Notification

The device will push notifications when any status in the system is changed.

Panel Management Notification

The device will push notifications when the user operate the device.

- 3) Set Mobile Phone Index, SIM Card No. And enable **Notification Type** (SMS or Phone call).

| | | | | | |
|-----------------|--|-----------------|------|--------------|------------|
| Title: | How to configure Alarm Notifications to Mobile Phone (SMS or Voice call) | Version: | v1.1 | Date: | 07/18/2019 |
| Product: | AX Series Wireless Security Control Panel | | | Page: | 2 of 3 |

The screenshot displays the Hikvision web interface for configuring alarm notifications to a mobile phone. The left sidebar shows the navigation menu, with 'Event Communications' highlighted by a red arrow and the number 1. The main content area is titled 'Mobile Phone' (indicated by a red arrow and the number 2) and shows the following settings:

- Mobile Phone Index: 1
- Mobile Phone Number: 15757165645 (indicated by a red arrow and the number 3)
- Voice Call:
- Alarms and Tampers:
- Life Safety Alarms:
- Maintenance and Faults:
- Panel Management Not...:
- SMS:
- Alarms and Tampers:
- Life Safety Alarms:
- Maintenance and Faults:
- Panel Management Not...:

The 'Permission Settings' section at the bottom shows 'Active Functions' with 'Partition1' and 'Partition2' selected.

3. SMS Remote Control Command:

“Command + Operate type + Operate Object”

Command: 00—Disarm, 01—Away arming, 02—Stay arming, 03—Clear alarm


Operate type: 1—Partition operate

Operate Object: 0—All Partition, 1—Partition 1, 2—Partition 2, 3—Partition 3, 4—Partition 4

Example: 02+1+0 means All Partition Stay arming

| | | | | | |
|-----------------|--|-----------------|------|--------------|------------|
| Title: | How to configure Alarm Notifications to Mobile Phone (SMS or Voice call) | Version: | v1.1 | Date: | 07/18/2019 |
| Product: | AX Series Wireless Security Control Panel | | | Page: | 3 of 3 |

4. Result Show SMS:

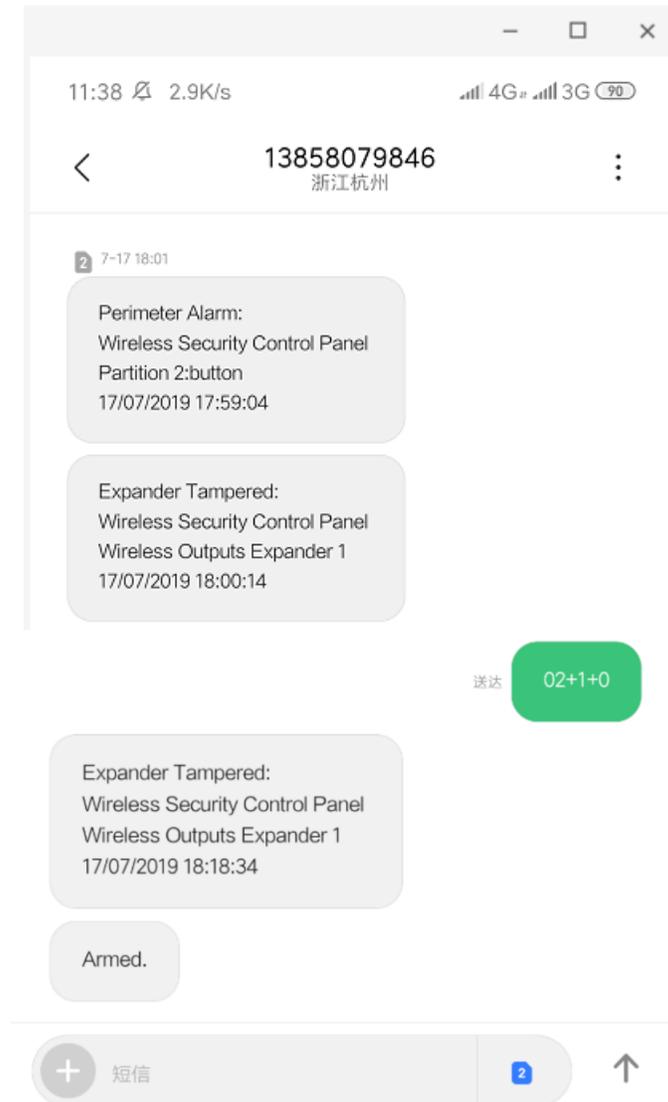



| | | | | | |
|-----------------|--|-----------------|------|--------------|------------|
| Title: | How to configure Alarm Notifications to Mobile Phone (SMS or Voice call) | Version: | v1.1 | Date: | 07/18/2019 |
| Product: | AX Series Wireless Security Control Panel | | | Page: | 4 of 3 |

First Choice for Security Professionals
HIKVISION Technical Support