

Title:	How to configure Alarm triggered E-map	Version:	v1.0	Date:	05/10/2019
Product:	AX Series Wireless Security Control Panel			Page:	1 of 7


### **Preparation**

- 1. AX Series Wireless Security Control Panel, V1.0.2 or above
- 2. iVMS-4200 client: 2.8.2.2

## How to configure Alarm triggered E-map

#### 1. Add the Hub to iVMS-4200


Use Port: 80

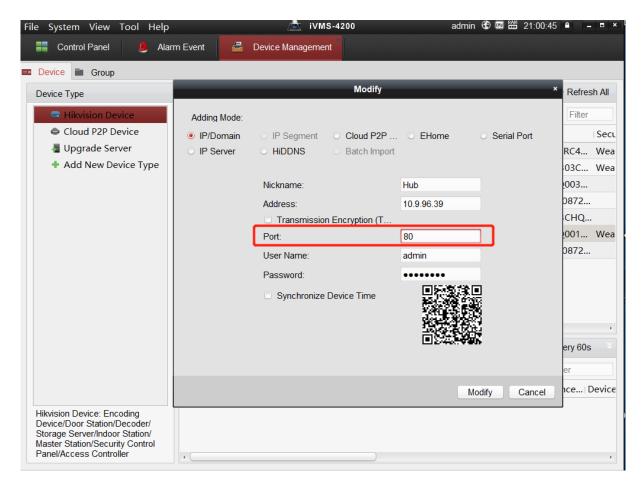



Title:	How to configure Alarm triggered E-map	Version:	v1.0	Date:	05/10/2019
Product:	AX Series Wireless Security Control Panel		Page:	2 of 7	

## 2. Open E-map

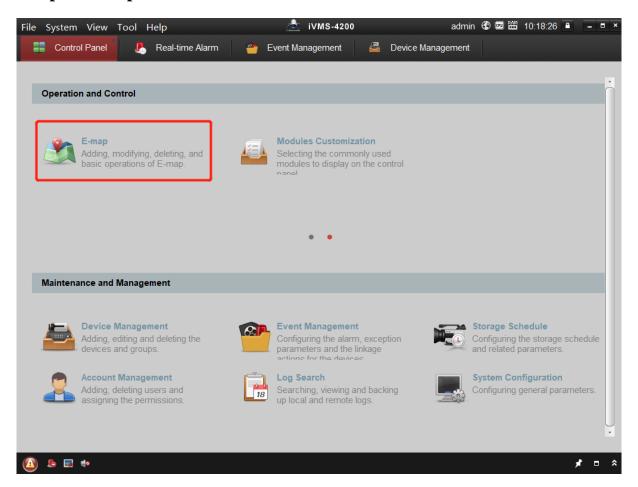


# 3. Configure E-map

- 1) Add Map.
- 2) Select Panel zone which you need show in the E-map.
- 3) Click Exit Editing Mode.



Title:	How to configure Alarm triggered E-map	Version:	v1.0	Date:	05/10/2019
Product:	AX Series Wireless Security Control Panel		Page:	3 of 7	

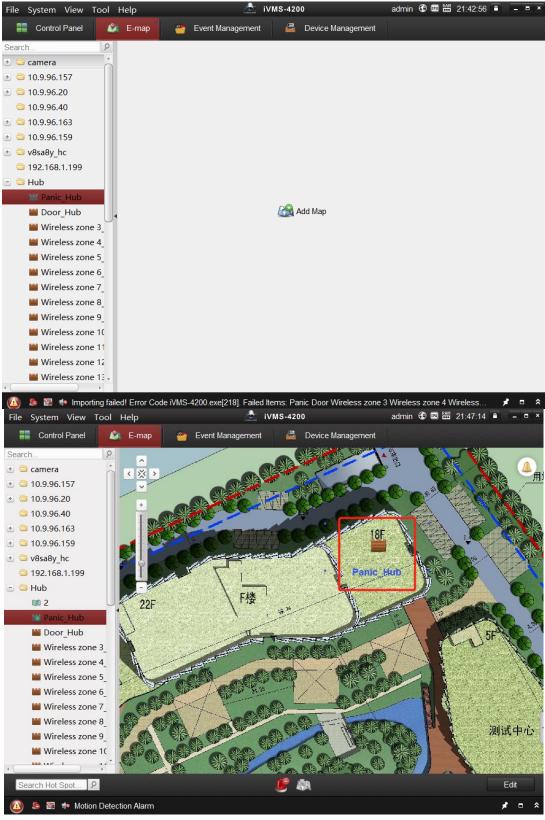

© Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved.

No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788


E-Mail: <a href="mailto:support@hikvision.com">support@hikvision.com</a> • <a href="https://www.hikvision.com">www.hikvision.com</a>



Title:	How to configure Alarm triggered E-map	Version:	v1.0	Date:	05/10/2019
Product:	AX Series Wireless Security Control Panel		Page:	4 of 7	


#### 4. Result test

- 1) Open Real-Time Alarm.
- 2) Click **Operation----Map**, skip to map interface, show where alarm happened.

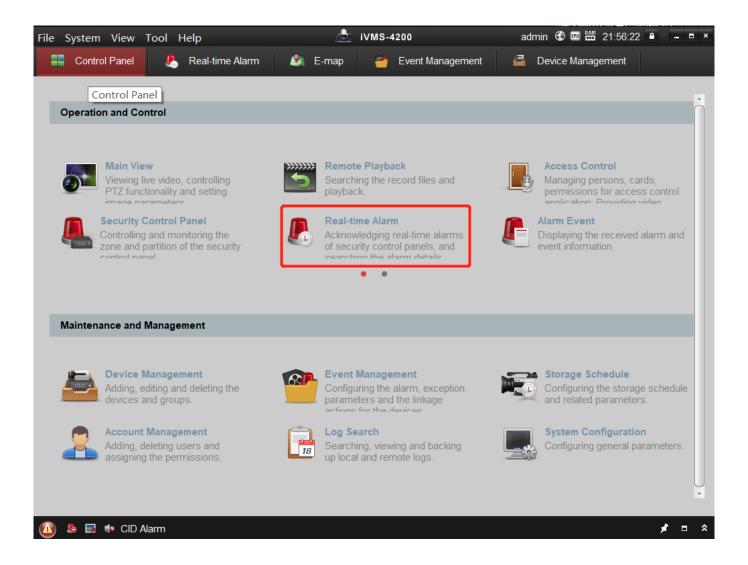




Title:	How to configure Alarm triggered E-map	Version:	v1.0	Date:	05/10/2019
Product:	AX Series Wireless Security Control Panel		Page:	5 of 7	

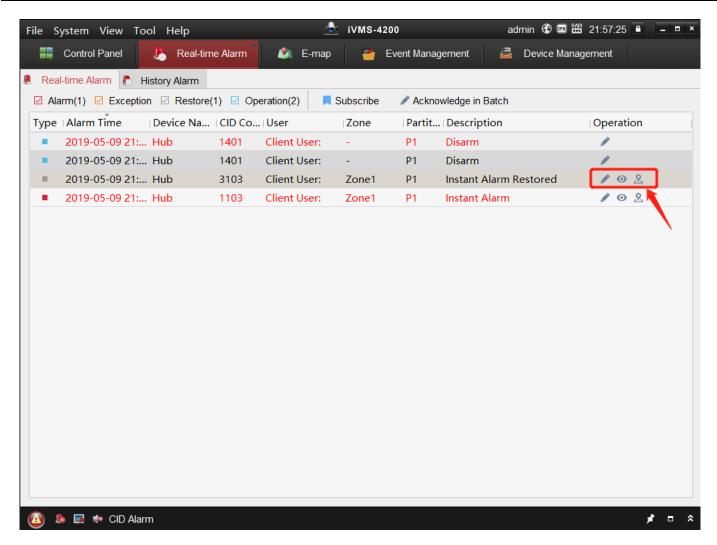



Title:	How to configure Alarm triggered E-map	Version:	v1.0	Date:	05/10/2019
Product:	AX Series Wireless Security Control Panel			Page:	6 of 7

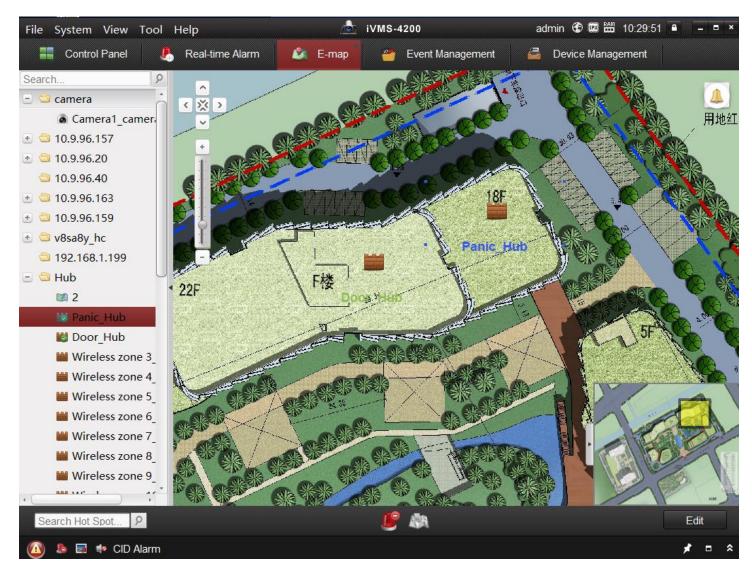



Title:	How to configure Alarm triggered E-map	Version:	v1.0	Date:	05/10/2019
Product:	AX Series Wireless Security Control Panel		Page:	7 of 7	

# First Choice for Security Professionals HIKVISION Technical Support