

Title:	DS-PWA32 How to Configure Wireless Keypad to Control Panel	Version:	v1.0	Date:	06/24/2019
Product:	AX Series Wireless Security Control Panel			Page:	1 of 7

Preparation

1. AX Series Wireless Security Control Panel, V1.0.4 or above
2. Wireless Keypad: DS-PKA-WLM

DS-PWA32 How to Configure Wireless Keypad to Control Panel

1. Add Keypad to Control Panel

1) Add by Hik-connect APP

You should add peripheral to the control panel before performing other operations such as arming or disarming.


Before You Start, Make sure the control panel is disarmed.

Note

Some control panel models do not support add detectors or wireless devices remotely. You should add them to the control panel directly. For details, see the user manual of the wireless device.

- 1) Tap  enter the Scan QR Code page.
- 2) Scan the peripheral's QR code to add the peripheral.
- 3) Select a peripheral type, and create a name for the peripheral.

The added peripheral will be listed in the Zone tab or the Wireless Device tab.

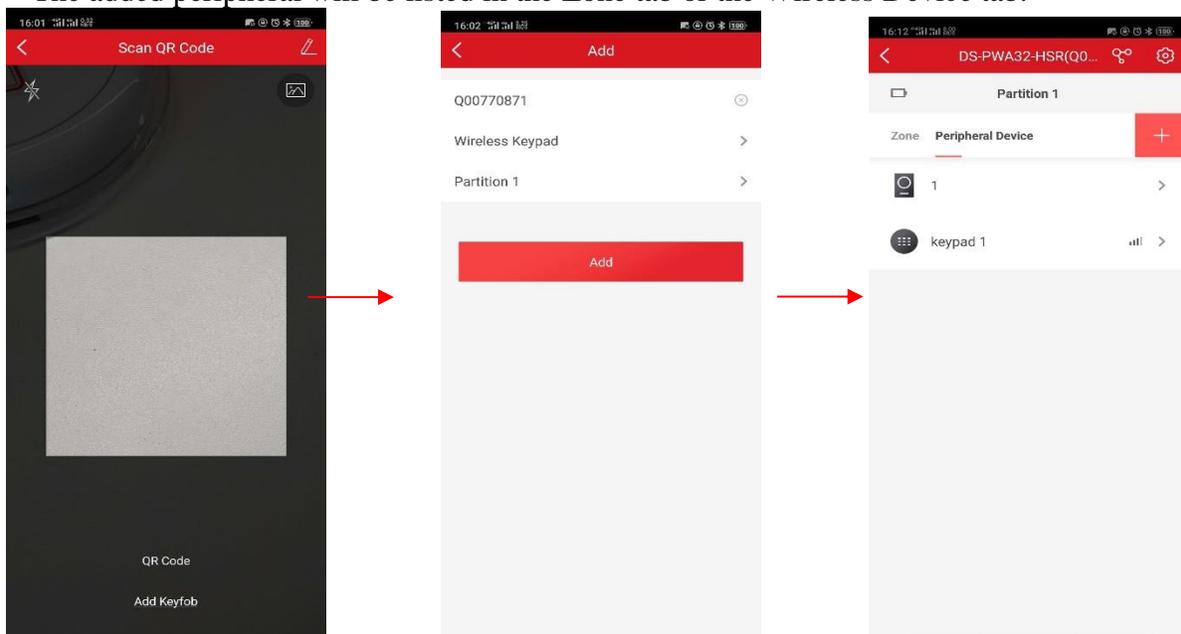

Title:	DS-PWA32 How to Configure Wireless Keypad to Control Panel	Version:	v1.0	Date:	06/24/2019
Product:	AX Series Wireless Security Control Panel			Page:	2 of 7

2) Add by Panel Function button



- 1) Click the Learn button of Panel, enter **Adding Detector Mode** .
- 2) Open the keypad Back plate, Trigger the Keypad Tamper.
- 3) Finish Adding. (Default link to Partition 1)

3) Add by Website

- 1) Login the website.
- 2) Select **Device Management---Keypad---setting**.
- 3) Select the linked Partition No and add the Serial No.
- 4) Click the OK.

Title:	DS-PWA32 How to Configure Wireless Keypad to Control Panel	Version:	v1.0	Date:	06/24/2019
Product:	AX Series Wireless Security Control Panel			Page:	3 of 7

HIKVISION

- User Management
- System
- Device Management
 - Zone
 - Relay
 - Siren
- Keypad**
- Card Reader
- Partition Management
- Communication Parameters
- Video & Audio
- Maintenance
- Status

Keypad Management

Keypad	Name	Linked Partition	Arming/Disarm...	Buzzer	Present Card	Link to Wire...	Settings
1	keypad 1	Partition1	Open	Open	Open	Enrolled	
2	keypad 2	Partition1	Open	Open	Open	Not enrolled	
3	keypad 3	Partition1	Open	Open	Open	Not enrolled	
4	keypad 4	Partition1	Open	Open	Open	Not enrolled	

Keypad Management

Configuration

Keypad:

Name:

Buzzer:

Present Card:

Arming/Disarming with...:

Back-light Off Time: to Enable

Linked Partition:

Disconnection Duration: h

Link to Wireless Keypad:

Serial No.:

OK



1

2

Title:	DS-PWA32 How to Configure Wireless Keypad to Control Panel	Version:	v1.0	Date:	06/24/2019
Product:	AX Series Wireless Security Control Panel			Page:	4 of 7

2. Configure Keypad password

- 1) Login the website.
- 2) Select **User Management---User**.
- 3) Click **Add**, create a new Operator (Including **Name, password, keypad password, User Permission**).
- 4) Click the OK.

The screenshot shows the Hikvision User Management interface. On the left, a sidebar contains various system management options. The 'User Management' section is active, and the 'User' sub-option is highlighted with a red arrow labeled '1'. The main content area displays a table of existing users. Above the table, there are '+ Add' and 'Delete' buttons. A red arrow labeled '2' points to the 'Add' button.


No.	User Name	User Type	Enable User	Operation
1	admin	Administrator	<input type="checkbox"/>	
2	setter	Installer	<input checked="" type="checkbox"/>	
3	manufacturer	Manufacturer	<input type="checkbox"/>	
4	operate1	Operator	<input checked="" type="checkbox"/>	

The 'Add User' dialog box is shown. It contains the following fields and options:

- User Information**
 - User Type: Operator
 - User Name: operate1 (with a green checkmark)
 - Password: [masked] (with a green checkmark)
 - Confirm Password: [masked] (with a green checkmark)
 - Keypad Password: [masked] (with a green checkmark)
- User Permission**
 - Select All
 - Permission for Log and Status Query
 - Messages and Notifications

A password strength indicator shows 'Weak' with a red bar. Below it, text states: 'The valid password (8 to 16 characters) should contain two or more of the following character types: numeric, lowercase, uppercase, and special character.'

Title:	DS-PWA32 How to Configure Wireless Keypad to Control Panel	Version:	v1.0	Date:	06/24/2019
Product:	AX Series Wireless Security Control Panel			Page:	5 of 7

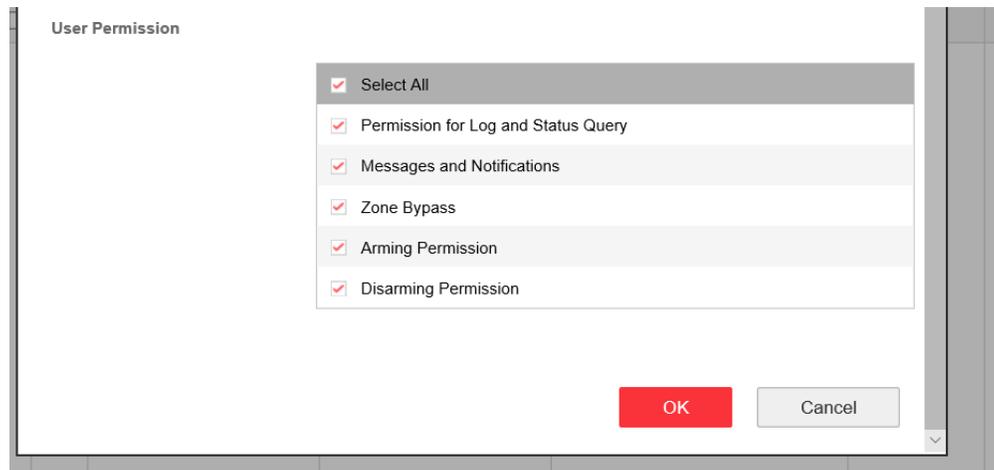

3. Keypad Operation

**Press and hold any key for 2s to wake up the wireless keypad.
When you see battery light on, then you can operate.**



Title:	DS-PWA32 How to Configure Wireless Keypad to Control Panel	Version:	v1.0	Date:	06/24/2019
Product:	AX Series Wireless Security Control Panel			Page:	6 of 7

Operation	Tasks	
Stay/Away Arming Disarming	Global Keypad	All Partition <ol style="list-style-type: none"> 1. Enter the user password. 2. Tap the stay/away/disarm key. 3. The buzzer indicates the operation status
		Specified Partition <ol style="list-style-type: none"> 1. Tap the user password. 2. Tap the √ key. 3. Enter the partition No.(1/2/3/4). 4. Tap the stay/away/disarm key. 5. The buzzer indicates the operation status
	Partition Keypad <ol style="list-style-type: none"> 1. Enter the user password. 2. Tap the stay/away/disarm key. 	
Fire Alarm	Hold the fire alarm key for 3 s. The buzzer indicates the operation status	
Panic Alarm	Hold the disarming key for 3 s. The buzzer indicates the operation status	
Confirm	Tap the √ key.	
Delete	Delete the latest key operation	



Title:	DS-PWA32 How to Configure Wireless Keypad to Control Panel	Version:	v1.0	Date:	06/24/2019
Product:	AX Series Wireless Security Control Panel			Page:	7 of 7

First Choice for Security Professionals
***HIKVISION* Technical Support**