

Title:	DS-PWA32 How to Add Wireless output Expander and Configure	Version:	v1.0	Date:	05/05/2019
Product:	AX Series Wireless Security Control Panel			Page:	1 of 5

Preparation

- 1. AX Series Wireless Security Control Panel, V1.0.2 or above
- 2. Wireless output Expander DS-PM-WO2 or DS-PM-WO8

DS-PWA32 How to Add Wireless output Expander and Configure

1. Add by Panel function button.

- 1) Click the function button of the Hub, enter Adding Detector Mode.
- 2) Press the registration key once and add the expander according to the voice prompt.



© Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved. No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>



Title:	DS-PWA32 How to Add Wireless output Expander and	Version:	v1.0	Date:	05/05/2019
Product:	AX Series Wireless Security Control Panel			Page:	2 of 5

2. Configure Wireless output Expander.

1) Open Hik-connect--- Device, Click Wireless Device



© Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved.

No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>



Title:	DS-PWA32 How to Add Wireless output Expander and	Version:	v1.0	Date:	05/05/2019
	Configure				
Product:	AX Series Wireless Security Control Panel			Page:	3 of 5

2) Select **Wireless Outputs Expander---Relay 1**, default Manual, you can open or close by manual.





Title:	DS-PWA32 How to Add Wireless output Expander and Configure	Version:	v1.0	Date:	05/05/2019
Product:	AX Series Wireless Security Control Panel			Page:	4 of 5

3) Link the relay to Alarm/Away Arming/Disarming/Manual Event, and you can configure output delay time from 5s~600s.



4) Connect Wire and route cables.



© Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved. No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>



Title:	DS-PWA32 How to Add Wireless output Expander and	Version:	v1.0	Date:	05/05/2019
	Configure				
Product:	AX Series Wireless Security Control Panel			Page:	5 of 5

First Choice for Security Professionals *HIKVISION* Technical Support