



**How to change PAL to NTSC for 3MP TVI camera**

<b>Title:</b>	How to change PAL to NTSC for 3MP TVI camera	<b>Version:</b>	v1.0	<b>Date:</b>	24/10/2018
<b>Product:</b>	DVR			<b>Page:</b>	1 of 3


## How to change PAL to NTSC for 3MP TVI camera

### Preparation:

Connect the 3MP camera to DVR of **HUHI** models and you can operate locally or remotely.

### Steps:

1. Right click to open the **PTZ Control** locally.

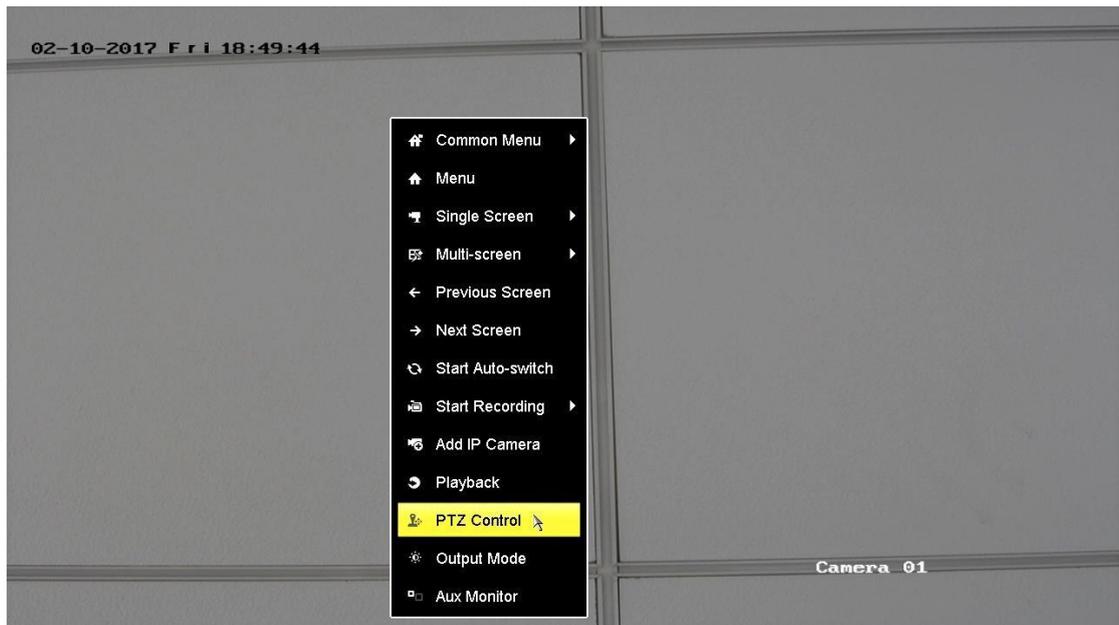

2. Click **General** to call preset.




<b>Title:</b>	How to change PAL to NTSC for 3MP TVI camera	<b>Version:</b>	v1.0	<b>Date:</b>	24/10/2018
<b>Product:</b>	DVR			<b>Page:</b>	2 of 3

- Input 158 in Call Preset.




- Click **Call Preset** to change the PAL to NTSC. Then the image will flash, which means the system has been changed successfully.

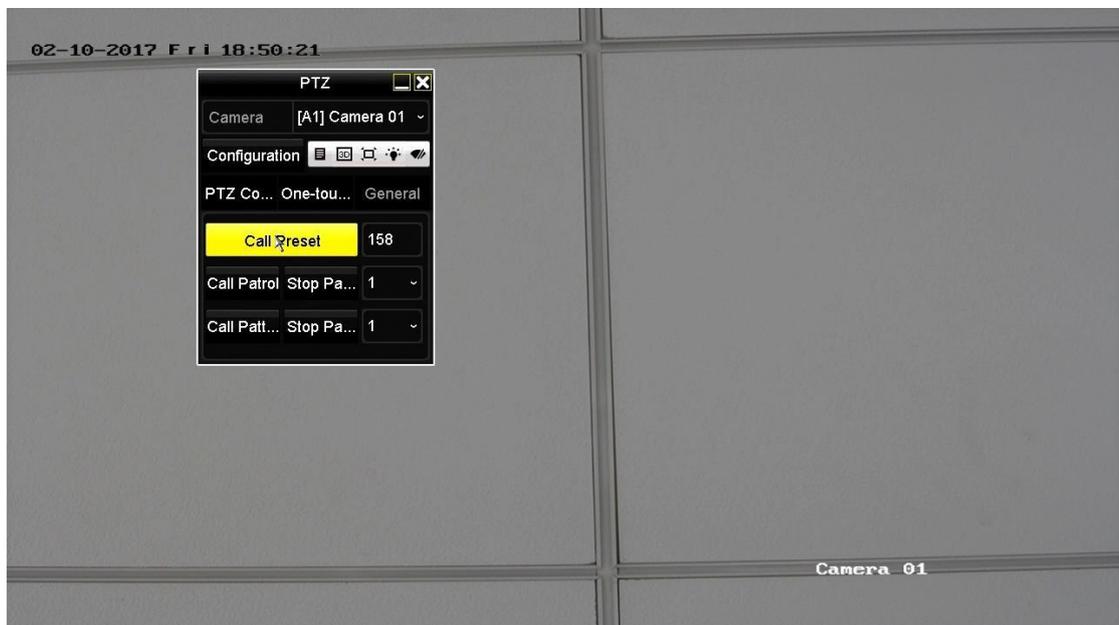

- You also can operate via web.

<b>Title:</b>	How to change PAL to NTSC for 3MP TVI camera	<b>Version:</b>	v1.0	<b>Date:</b>	24/10/2018
<b>Product:</b>	DVR			<b>Page:</b>	3 of 3

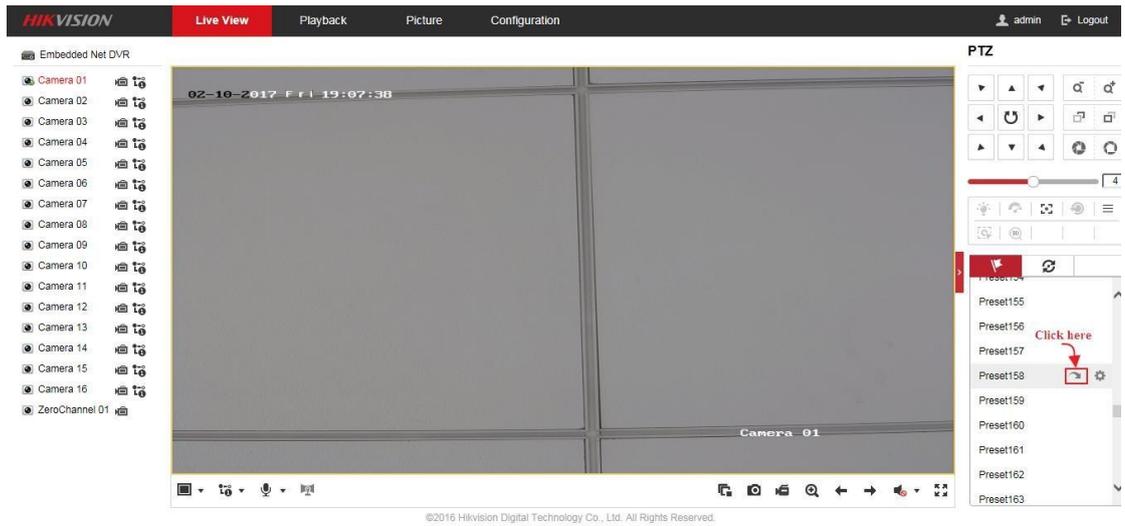



See Far, Go Further