	Title:	How to Switch P/N format for Analog Cameras	Version:	v1.0	Date:	02/26/2020
Product: Cameras, DVR Page: 1 c	Product:	Cameras, DVR			Page:	1 of 6

Preparation

- 1. In this case, camera model is DS-2CE10DF0T-PF
- 2. DVR model is DS-7208HTHI-K2 4.21.000 build190722 ; DS-7108HGHI-F1 3.4.891build190121

How to switch P/N Format for Analog Cameras

1. Operation on DVR web

1) Press 90 preset to change PAL(25fps) to NTSL(30fps) After this operation, you will see 1080P30 on the screen.



2) Press 91 preset to change NTSL to PAL After this operation, you will see 1080P25 on the screen.



© Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved.

No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>

Title:	How to Switch P/N format for Analog Cameras	Version:	v1.0	Date:	02/26/2020
Product:	Cameras, DVR			Page:	2 of 6

3) Operation on Camera OSD menu

You can call out camera OSD menu through pressing "Menu" or "Iris+",



Secondly, press "Left" or "Right" to change from 2M30(NTSL) to 2M25(PAL), after that, "SAVE&EXIT" and press "Iris+" for confirm.

			PTZ
02-26-2020 Wed 1	6:41:15		
			× · · 0 0
	MAIN ME	NU	
	VIDEO FORMAT	3 2M30	*101×101=
	EXPOSURE		
	VIDEO SETTINGS		1. ar 1. a 1. 1.
	SMART LIGHT	<u>ل</u> ے	Presetter
	FUNCTIONS	c_	Preset89
	FACTORY DEFAULT	<u>حا</u>	Preset90
	ΕΧΙΤ	<u>م</u>	Preset01
	S A V E & E X I T	لے م	Dreset(2)
			Preset93
			Preset94
			Preset95
			Preset96
			Preset97
			Preset98
		DFOT-PF	Preset99
			Preset100
			Preset101
■ • • • • • • •		C D E Q	

4) Besides TVI signal, you should switch the format through Camera OSD menu in AHD CVI and CVBS rather than call presets.

No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>

[©] Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved.

Title:	How to Switch P/N format for Analog Cameras	Version:	v1.0	Date:	02/26/2020
Product:	Cameras, DVR			Page:	3 of 6

2. Operation on DVR local GUI

1) Press 90 preset to change PAL to NTSL, and call 91 preset to change NTSL to PAL.



© Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved. No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>





2) Operation on Camera OSD menu

Just like opreation on DVR web. You can call out camera OSD menu through pressing "Menu" or "Iris+".

Secondly, press "Left" or "Right" to change from 2M30(NTSL) to 2M25(PAL), after that, "SAVE&EXIT" and press "Iris+" for confirm.



© Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved. No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>

How to Switch P/N Ior mat ic	r Analog Lameras Version:	v1.0	Date:	02/26/2020
Product: Cameras, DVR			Page:	5 of 6

3) In GUI3.0 menu, call out PTZ Control and select Configuration, as show bellow. Then call 90 preset to change PAL to NTSL, or call 91 preset to change NTSL to PAL.



[©] Hangzhou Hikvision Digital Technology Co.,Ltd. All Rights Reserved. No.555 Qianmo Road, Binjiang District, Hangzhou 310052, China • Tel: +86-571-8807-5998 • Fax: +1 909-595-0788 E-Mail: <u>support@hikvision.com</u> • <u>www.hikvision.com</u>



Title:	How to Switch P/N format for Analog Cameras	Version:	v1.0	Date:	02/26/2020
Product:	Cameras, DVR			Page:	6 of 6

4) Besides TVI signal, you should switch the format through Camera OSD menu in AHD、 CVI and CVBS rather than call presets.

First Choice for Security Professionals HIKVISION Technical Support