



How to disable live view output of NVR auxiliary port

Title:	How to Change Analog Camera Resolution	Version:	v1.0	Date:	09/8/2020
Product:	Analog Camera			Page:	1 of 5

Preparation


Turbo HD Cameras which belong to HxT series or UxT series can change the resolution of live view in camera OSD menu.

1. Camera: DS-2CE16H0T-ITFS
2. DVR: DS-7216HUHI-K2(S)


How to Change Analog Camera Resolution

1. Operation on DVR Web

(1) Click IRIS+ or MENU to call out camera OSD menu.

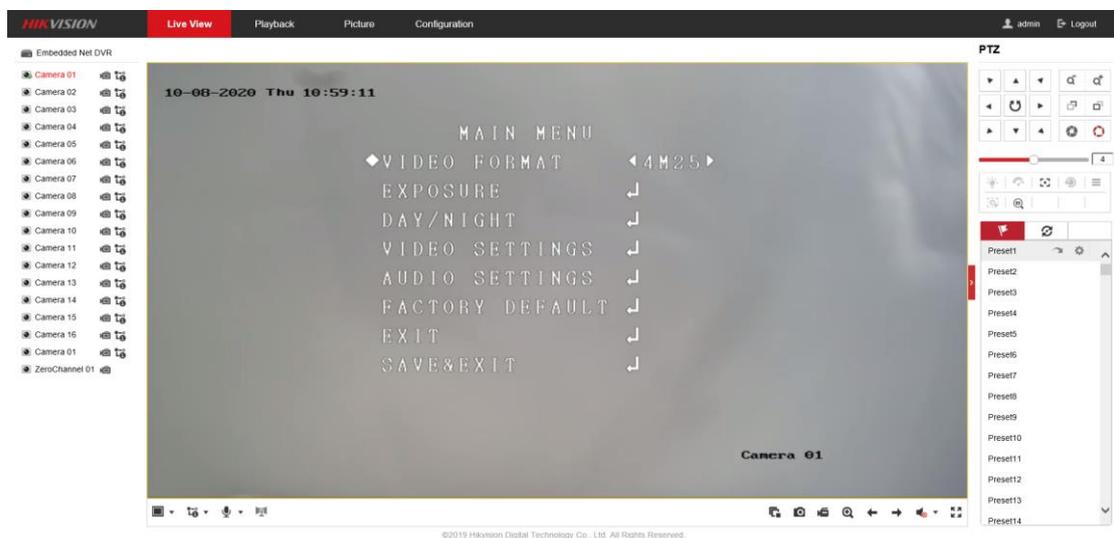

(2) In MAIN MENU – VIDEO FORMAT, you can change the camera resolution by clicking RIGHT or LEFT icon.

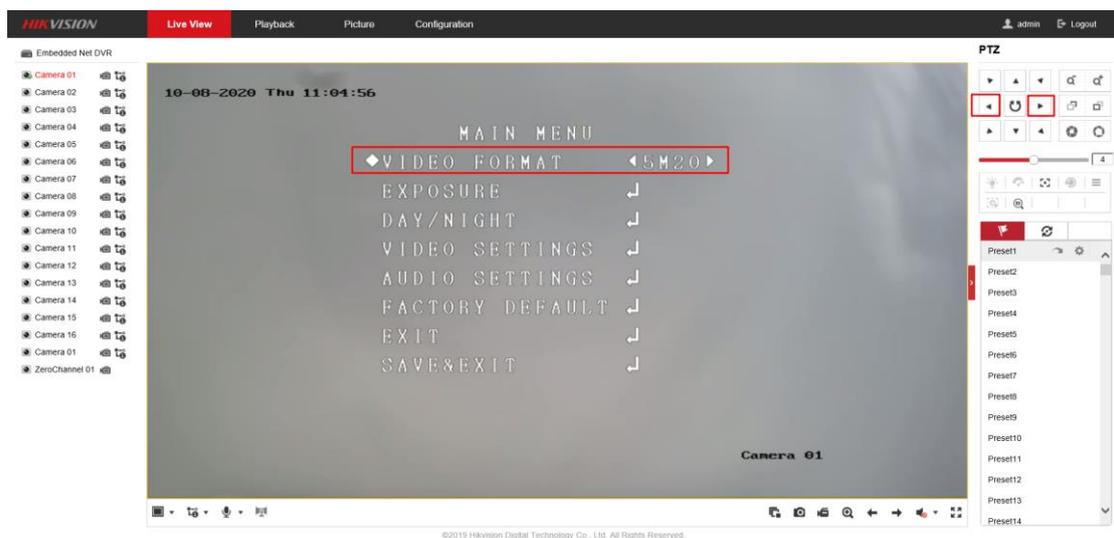

(3) After that, click UP or DOWN icon to SAVE&EXIT, click IRIS+ to save the

Title:	How to Change Analog Camera Resolution	Version:	v1.0	Date:	09/8/2020
Product:	Analog Camera			Page:	2 of 5

configuration and exist OSD menu.

(4) Then camera will reboot, and you will see camera OSD information on the screen.




2. Operation on DVR GUI

(1) Enter PTZ Control interface




(2) Click IRIS+ or MENU to call out camera OSD menu.

Title:	How to Change Analog Camera Resolution	Version:	v1.0	Date:	09/8/2020
Product:	Analog Camera			Page:	3 of 5

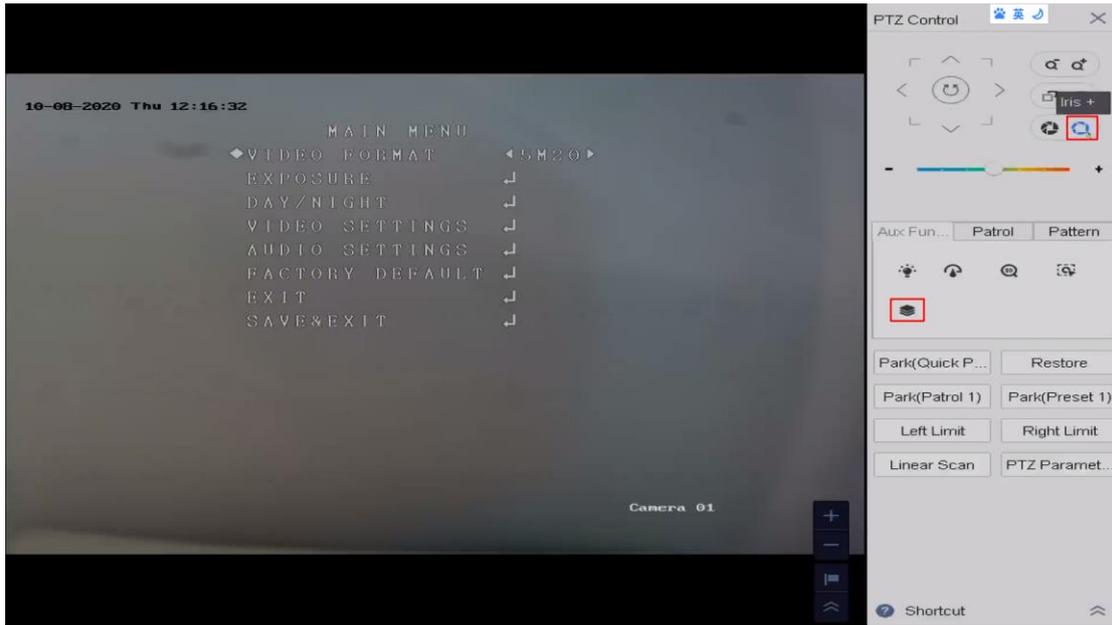


(3) In MAIN MENU – VIDEO FORMAT, you can change the camera resolution by clicking RIGHT or LEFT icon.

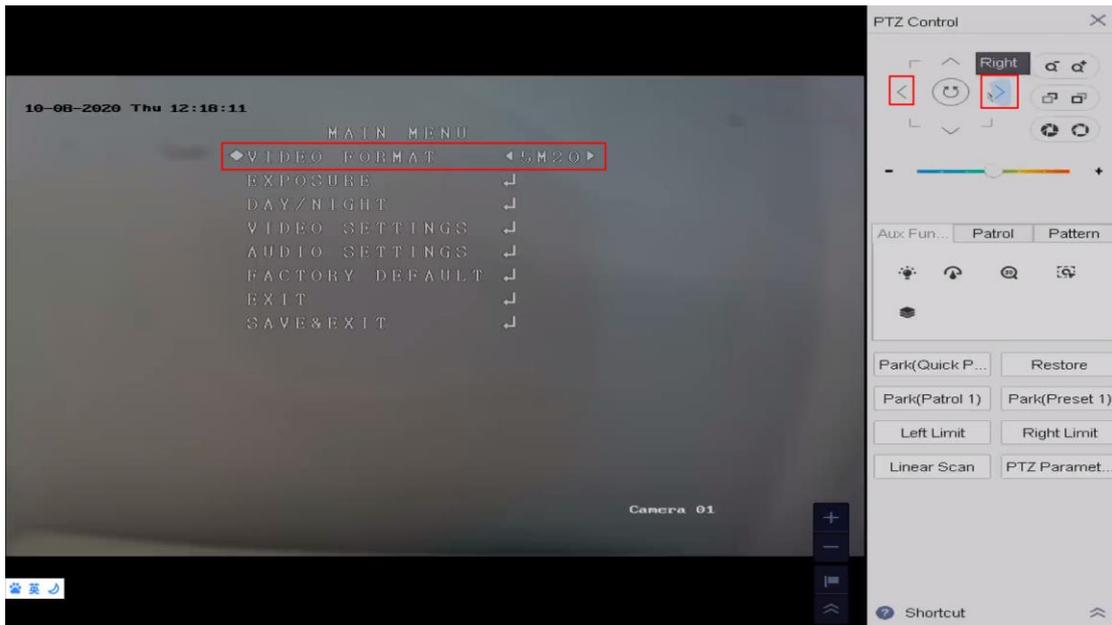


(5) After that, click UP or DOWN icon to SAVE&EXIT, click IRIS+ to save the configuration and exist OSD menu.

Title:	How to Change Analog Camera Resolution	Version:	v1.0	Date:	09/8/2020
Product:	Analog Camera			Page:	4 of 5

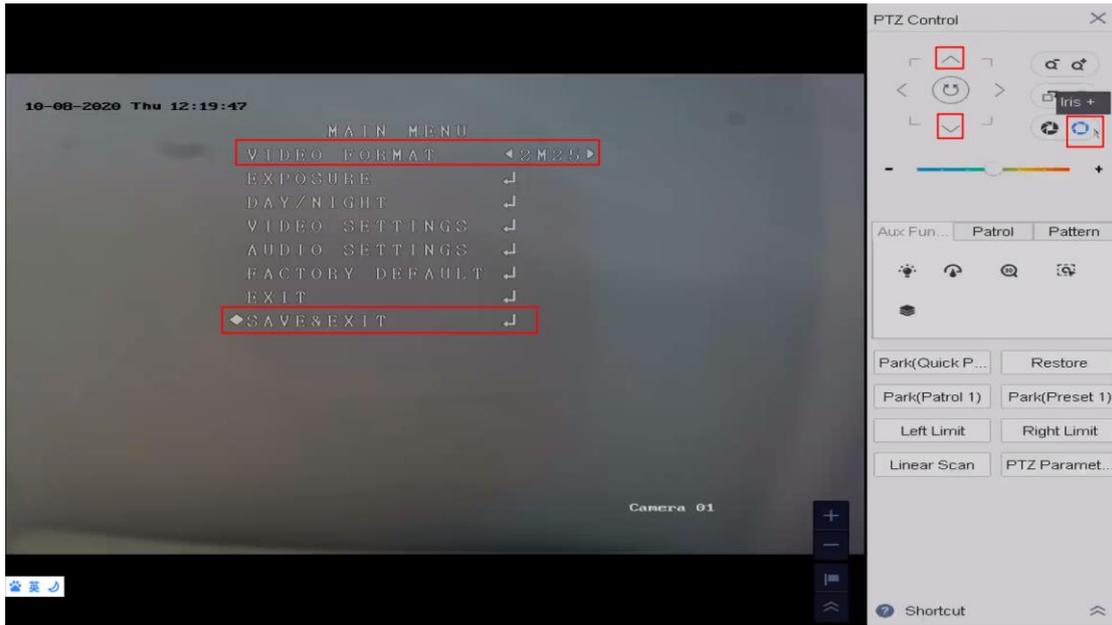

(6) Then camera will reboot, and you will see camera OSD information on the screen.

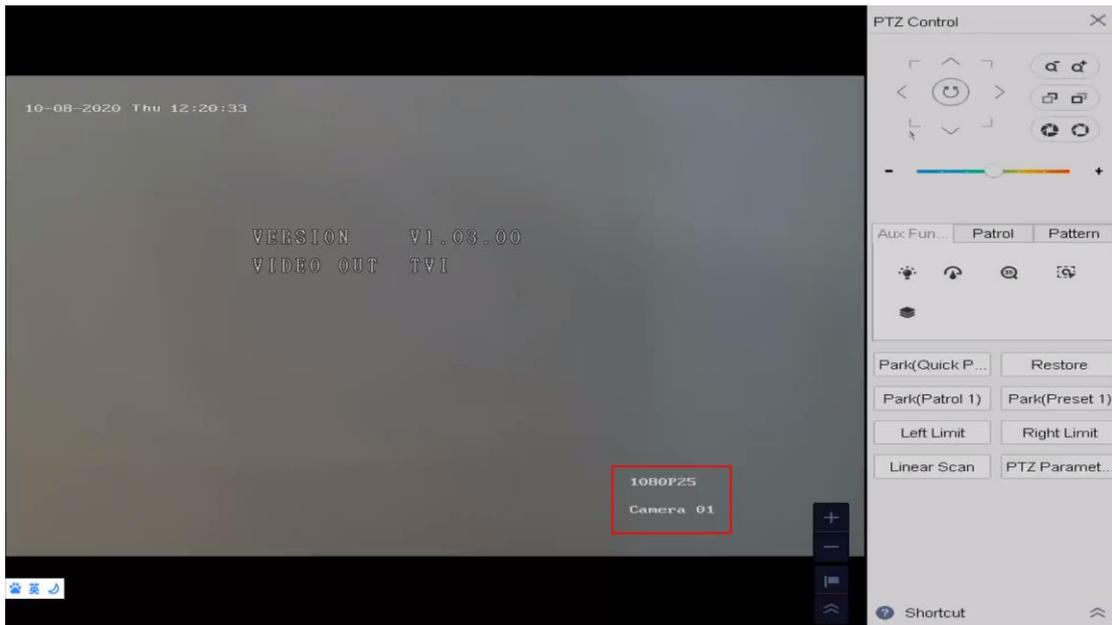

Note: Usually, HxT camera support 5MP, 4MP and 1080P resolution, UxT camera support 8MP, 5MP, 4MP and 1080P resolution.

Title:	How to Change Analog Camera Resolution	Version:	v1.0	Date:	09/8/2020
Product:	Analog Camera			Page:	5 of 5

