1. Dans la page Web de la caméra, sous VCA>Avanced>Clear Storage, cliquez « Clear ».

HIK	VISION®	Live View Playl	oack Picture Ap	plication Configuration	VCA	
	VCA Resource People Counting	People CountingVersion Depth MapVersion	V2.0.0build190815 V0.0.15build190822			
	Rule Shield Region	Enable Height Filter Height	[120]	cm		
	Data Uploading Overlay & Capture Advanced	Height Target Detection Type	Detect based on depth map m V	cm		
1		Algorithm Validity 🗹 Enable False Alarm F	iltering			
		Filtering Threshold Judge Times	15 3	Time		
		Enable Pattern Count Motion Displacement Dwell Time	0.4	cm s		
		Counting Status Clear Storage Data	Counting(2021-02-04 17:06:18) Clear Note: This action clear	Refresh rs all counting data stored in the ca	mera.	
		One-touch Export Maintenance Mode	Export Export the device hard Enable Certain video settings	dware settings, installation settings has already been changed. To rest	, people counting settings, ore the settings, disable Ma	rule settings and advanced settings. sintenance Mode.
		🗄 Save				

2. Allez à la page Overlay & Capture. Cliquez « Manual Reset » et configuez « le Daily Reset Time » selon votre besoin.

НІК	VISION®	Live View	Playback	Picture	Application	Configuration	VCA			
	VCA Resource People Counting Rule Shield Region Data Uptoading Overlay & Capture Advanced	Live View Playback Picture Application Configuration Display on Stream Image: Stream Display on Picture Display Target Info. on Alarm Picture Image: Display Rule Info. on Alarm Picture Snapshot Settings Image: Display Rule Info.								
		Picture Qua Picture Res	lity Low logo	P(1920*1080)	× ×					
		Flow Over1	ay 1 17:12:39			Flow Overlay Counting Type Daily Reset Time Reset OSD	Enter/Leave All 00:00:00 Manual Reset	v v v		
		Enters Leaves Stays: Availa	:53 :49 4 ble:6	DS-20068251	sə-C-TUS(1225915957)					
		E	Save							

3. Allez à la page « Data Uploading ». Changez le Data Statistics Cycle à 60 minute(s).

HIKVISIO N®	Live View Play	oack Pict	ure Application	Configuration	VCA
VCA Resource	Data Type				
Rule Shield Region	Real-Time Upload Data Data Statistics Cycle	ON (On () OFF		
Data Uploading	Email Report	Daily Report	U Weekly Benet	Monthly Report	Annual Report
Overlay & Capture Advanced	Report Format			txt	
	Save				
		-			

4. Allez sur Cameras>Camera Group de l'interface locale du NVR. Cliquez « Reset Counting ». Et puis configurez l'heure de réinitialisation de comptage selon votre besoin. L'heure de réinitialisation du NVR doit être le même ou plus tard que celui des caméras. Cliquez « Apply ».

偪	Camera		Reset Counting	Reset Countries		
0	Display		Creup No.			
INT.	Privacy Mask		Group Name	Ig		
गाली	Video Porometere		People Counting Limit(0:N	9		
	rideo fordilicitation of	Line Spacing	1.5			
			Total People	0		
	*		□P Camera □D1 □D9 □D17 □D25	02 03 04 05 06 07 06 070 011 032 003 014 015 016 070 011 032 022 023 024 015 016 070 011 020 021 022 023 024 015 016 026 027 028 026 038 034 032 034		
			Normal Linkage	Trigger Alerm Oatput		
			Notity Surveillance Cen	Loosi+1 □Loosi+2 □ nosi+3		
				⊡tincai≫4		
				□192.158 1.68 8600.⇒1		
				F 192.188.1 65.9.300.42		

Remarque : Assurez-vous que la version du firmware est de 5.5.90_200507.