


How to config to Shutdown HikCentral VMS safely when the UPS is LOW

As per the Regulation when the UPS battery is low to handle the load, all the Device (SERVER, NVR) shutdown safely. Therefore, we have integrated the HikCentral to monitor the UPS TRAP signal and Shutdown safely.

HikCentral (V1.3.1.50)

Fill the below two field correctly same as UPS send, you can get this from UPS Manufacture OID Document.

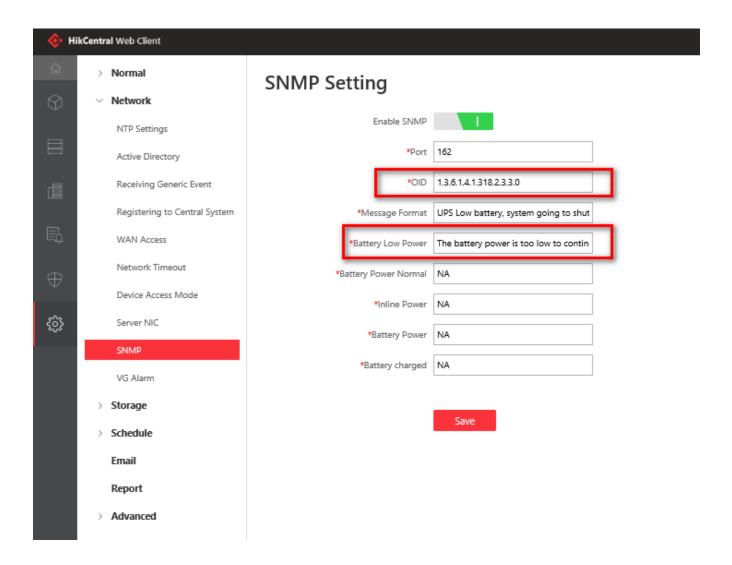




Config Trap receiver in UPS, IP is the VMS server IP




UPS Network Management Card 2

Smart-UPS/Matrix Application

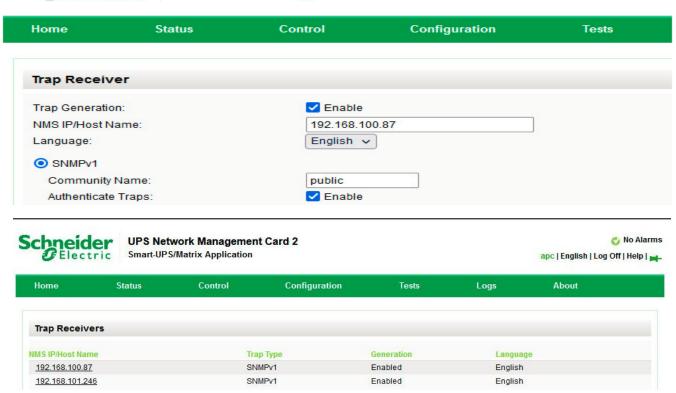

HikCentral Control client show the Popup message

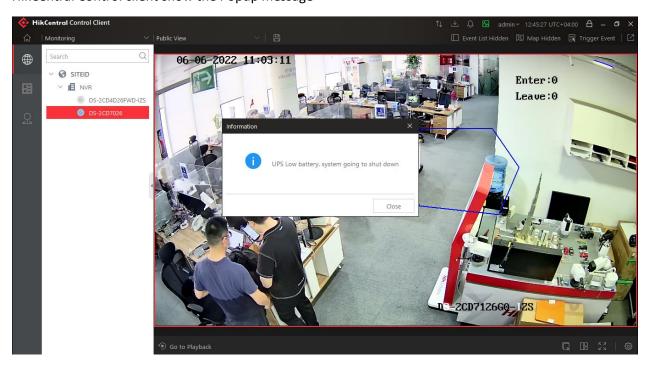




JOCY.JOHN/MENA

To verify we receive trap signal

1, Check Capture packet and anlyze

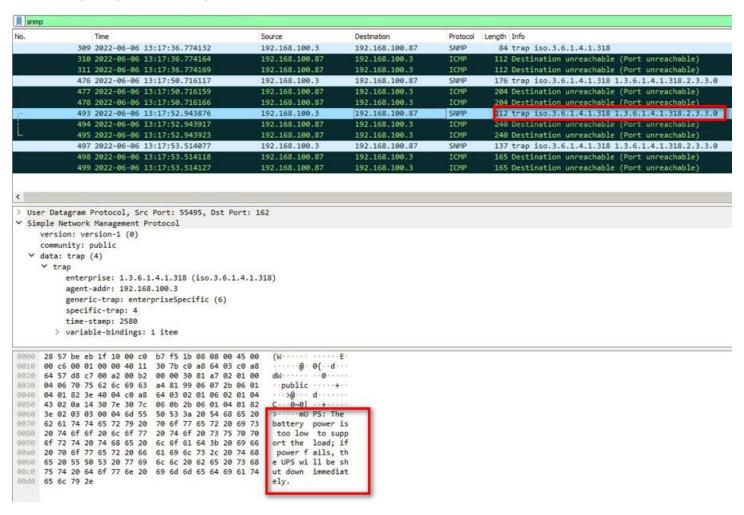

2, In th Hikcentral VSM Log

```
[2022-66-66 12:47:96.30] [SMD] [NFD] [VM::GRespTak::Exec] [CysmAccessControlTask::RaquestProccess] HttpServerSynSend success, revalue = 0, handle = 9, un.1 //ISAPI/Numblebee/PTZCtt/(Zameras/99/lockPTZ[...) 2022-66-66 12:47:96.30] [SmpTrapd] [IMFO] [smptrapd::callback [From Index = 0 .from Status = 0. Requestid = 0. MGCqutt = 1, Ivne = 1641. Asec.SemDrapdSomDrand (cquid2)] [Red0000144c] [2022-66-66 12:47:96.30] [SmpTrapd] [IMFO] [smptrapd::callback [From Index = 0 .from Status = 0. Requestid = 0. MGCqutt = 1, Ivne = 1641. Asec.SemDrapdSomDrand.cquid2)] [Red000144c] [Red000144c] [Red000146c] [Red00
```