

Video Intercom Bundle

Quick Start Guide

Legal Information

Quick Start Guide

©2017 Hangzhou Hikvision Digital Technology Co., Ltd.

About this Manual

This Manual is subject to domestic and international copyright protection. Hangzhou Hikvision Digital Technology Co., Ltd. ("Hikvision") reserves all rights to this manual. This manual cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision.

Please use this user manual under the guidance of professionals.

Trademarks

HIKVISION and other Hikvision marks are the property of Hikvision and are registered trademarks or the subject of applications for the same by Hikvision and/or its affiliates. Other trademarks mentioned in this manual are the properties of their respective owners. No right of license is given to use such trademarks without express permission.

Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THIS MANUAL. HIKVISION DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OF THE MANUAL, OR THE CORRECTNESS, ACCURACY, OR RELIABILITY OF INFORMATION CONTAINED HEREIN. YOUR USE OF THIS MANUAL AND ANY RELIANCE ON THIS MANUAL SHALL BE WHOLLY AT YOUR OWN RISK AND RESPONSIBILITY.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: http://www.recyclethis.info



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: <u>http://www.recyclethis.info</u>

Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (B)/NMB-3(B) standards requirements.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
🕂 Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
A Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
🕂 Note	Provides additional information to emphasize or supplement important points of the main text.

Contents

1 Appearance Description 1
1.1 Indoor Station 1
1.2 Door Station
2 Terminals and Wirings 4
2.1 Terminal Description 4
2.1.1 Indoor Station Terminal 4
2.1.2 Door Station Terminal 4
2.2 Wiring Description 5
2.2.1 Wiring of Indoor Station 5
2.2.2 Wiring of Door Station 6
3 Installation 10
3.1 Indoor Station Installation 10
3.1.1 Installation Accessory Description 10
3.1.1 Installation Accessory Description 10 3.1.2 Mount Indoor Station 10
3.1.2 Mount Indoor Station 10
3.1.2 Mount Indoor Station 10 3.2 Door Station Installation 11
3.1.2 Mount Indoor Station103.2 Door Station Installation113.2.1 Installation Accessory Description11
3.1.2 Mount Indoor Station103.2 Door Station Installation113.2.1 Installation Accessory Description113.2.2 Mount Door Station12
3.1.2 Mount Indoor Station103.2 Door Station Installation113.2.1 Installation Accessory Description113.2.2 Mount Door Station124 Getting Started15
3.1.2 Mount Indoor Station103.2 Door Station Installation113.2.1 Installation Accessory Description113.2.2 Mount Door Station124 Getting Started154.1 Activate Device via Batch Configuration Tool15

4.3.2 Add Device by IP Address	18
4.4 Set Indoor Station	18
4.4.1 Set Room No	18
4.4.2 Set Linked Network Parameters	19
4.5 Set Door Station	20
4.5.1 Set Call Button	20
4.6 Add Device to App	20

1 Appearance Description

1.1 Indoor Station

The front panel of indoor station contains function buttons and indicators. The rear panel of the indoor station contains interfaces, terminals, and card slot, and so on.

Front Panel

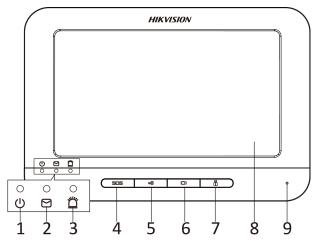


Figure 1-1 Front Panel Table 1-1 Components Description of Front Panel

No.	Description
1	Power Supply Indicator
2	Information Indicator
3	Alarm Indicator
4	SOS Button
5	Unlock Button
6	Live View Button

Video Intercom Bundle Quick Start Guide

No.	Description
7	Management Center Button
8	LCD Screen
9	Microphone

\land Note

Hold **SOS** to trigger a SOS alarm and upload the alarm message to the management center (the client software or the master station).

Rear Panel

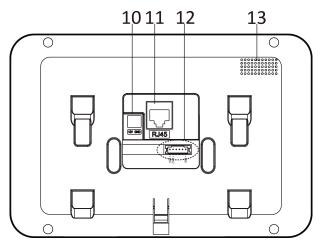


Figure 1-2 Rear Panel Table 1-2 Components Description of Rear Panel

No.	Description
1	Power Supply Interface
2	Network Interface
3	Terminals
4	Loudspeaker

1.2 Door Station

The door station appearance is shown as below.

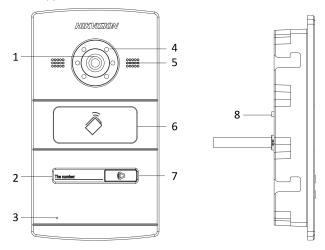




Table 1-3	Components	Description
-----------	------------	-------------

No.	Description
1	Built-in Camera
2	Room No. (Customized)
3	Microphone
4	Low Illumination Supplement Light
5	Loudspeaker
6	Card Induction Area
7	Call Button
8	Tamper Button

2 Terminals and Wirings

2.1 Terminal Description

2.1.1 Indoor Station Terminal

On the rear panel of the indoor station, there are 3 available pins: 2 alarm input pins and 1 GND pin.

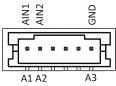


Figure 2-1 Indoor Station Terminal Table 2-1 Indoor Station Terminal Description

Name	No.	Interface	Description
Terminals	A1	AIN1	Zone Detector Input Terminal 1
	A2	AIN2	Zone Detector Input Terminal 2
	A3	GND	Grounding

2.1.2 Door Station Terminal

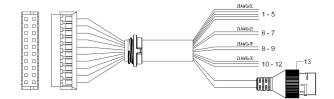


Figure 2-2 Door Station Terminal

Name	No.	Color	Description
Alarm In	1	YELLOW/PURPLE	ALARM_1
	2	YELLOW/ ORANGE	ALARM_2
	3	YELLOW/GREEN	ALARM_3
	4	YELLOW/ BROWN	ALARM_4
	5	YELLOW/BLACK	ALARM_GND
Power Supply	6	RED	DC 12V Power Supply Input
GND	7	BLACK	Grounding
RS485	8	ORANGE	RS485+
	9	YELLOW	RS485-
ALARM OUT	10	PINK	DR_NC
	11	BLUE	DR_NO
	12	GREEN	DR_COM
LAN	13	LAN	Network Interface

Table 2-2 Door Station Terminal Description

2.2 Wiring Description

2.2.1 Wiring of Indoor Station

On the rear panel of the indoor station, there are 3 available pins: 2 alarm input pins and 1 GND pin.

To access the alarm input device, you can connect the device as below.

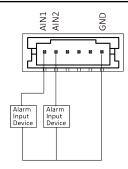


Figure 2-3 Wiring Description (Alarm Input Device)

2.2.2 Wiring of Door Station

Door Lock Wiring

To connect electric lock, refer to the picture below.

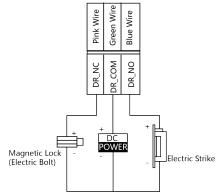


Figure 2-4 Door Lock Wiring

🕂 Note

- Terminal DR_NC/DR_COM is set as default for connecting magnetic lock/electric bolt;terminal DR_NO/DR_COM is set as default for connecting electric strike.
- To connect electric lock, it is required to set the output of terminal DR_NC/ DR_COM/DR_NO to be electric lock with Batch Configuration Tool or iVMS-4200 client software.

Door Magnetic Wiring

To connect door magnetic, refer to the picture below.

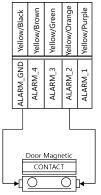


Figure 2-5 Door Magnetic Wiring

\land Note

To connect door magnetic, it is required to set the input of one alarm in terminal (ALARM_1, ALARM_2, ALARM_3, or ALARM_4) to be door magnetic with Batch Configuration Tool or iVMS-4200 client software.

Exit Button Wiring

To connect exit button, refer to the picture below.

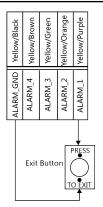


Figure 2-6 Exit Button Wiring

\land Note

To connect exit button, it is required to set the input of one alarm in terminal (ALARM_1, ALARM_2, ALARM_3, or ALARM_4) to be exit button with Batch Configuration Tool or iVMS-4200 client software.

Alarm Device Input Wiring

To connect other alarm devices, refer to the picture below.



Figure 2-7 Alarm Device Input Wiring

\land Note

To connect other alarm devices, it is required to set the input of one alarm in terminal (ALARM_1, ALARM_2, ALARM_3, or ALARM_4) to be custom with Batch Configuration Tool or iVMS-4200 client software.

RS-485 Card Reader Wiring

To connect RS-485 card reader, refer to the picture below.

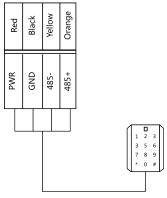


Figure 2-8 RS-485 Card Reader Wiring

3 Installation

3.1 Indoor Station Installation

3.1.1 Installation Accessory Description

The wall mounting plate and the junction box are required to install the indoor station onto the wall.

The dimension of junction box should be 75 mm (width) \times 75 mm (length) \times 50 mm (depth).

The dimension of wall mounting plate is shown in below.

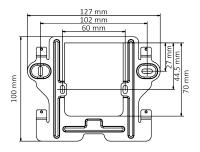


Figure 3-1 Wall Mounting Plate

3.1.2 Mount Indoor Station

Before You Start

- Make sure the device in the package is in good condition and all the assembly parts are included.
- The power supply the indoor station supports is 12 VDC. Please make sure your power supply matches your indoor station.
- Make sure all the related equipment is power-off during the installation.
- Check the product specification for the installation environment.

Steps

- 1. Insert the junction box to the hole chiseled on the wall.
- 2. Fix the wall mounting plate to the junction box with 2 screws.

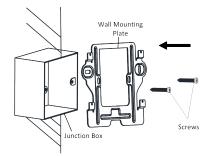


Figure 3-2 Install the Plate

3. Hook the indoor station to the wall mounting plate tightly by inserting the plate hooks into the slots on the rear panel of the indoor station, during which the lock catch will be locked automatically.

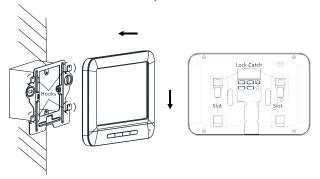


Figure 3-3 Hook the Indoor Station to the Plate

3.2 Door Station Installation

3.2.1 Installation Accessory Description

The gang box is required to install the door station onto the wall.

The dimension of the gang box should be 89 mm (width) \times 168 mm (length) \times 38 mm (depth).

Video Intercom Bundle Quick Start Guide

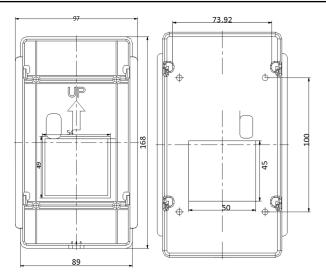


Figure 3-4 Gang Box

3.2.2 Mount Door Station

Before You Start

- Make sure the device in the package is in good condition and all the assembly parts are included.
- The power supply the indoor station supports is 12 VDC. Please make sure your power supply matches your indoor station.
- Make sure all the related equipment is power-off during the installation.
- Check the product specification for the installation environment.

Steps

- 1. Take the gang box and screws from the packing box.
- Chisel a hole in the wall for inserting the gang box. The size of the hole should be 90 (width) ×170 (length) × 38 (depth) mm.
- **3.** Insert the gang box into the hole and fix it with 4 PA4 screws, as shown in the figure below.

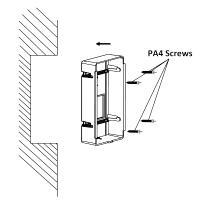


Figure 3-5 Insert the Gang Box

4. After fixing the gang box, install the door station into the gang box according to the direction of the arrow, as shown in the figure below.

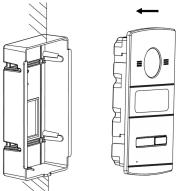


Figure 3-6 Insert the Door Station

- **5.** After inserting the door station into the gang box, pull the device downwards to hook the door station with the gang box.
- **6.** Secure the door station by inserting the fixing screw according to the direction of the arrow of the figure below.

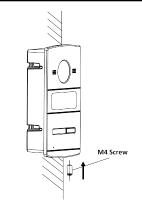


Figure 3-7 Secure the Door Station

4 Getting Started

4.1 Activate Device via Batch Configuration Tool

You can activate the device via Batch Configuration Tool. When the device is not activated, the basic operation and remote operation of device cannot be performed.

Steps

1. Run the Batch Configuration Tool.

Online Dev	ices: 5 😥	49 Z Edit NET	Parameter	rs 🛞 Reset Password	Activate		
Index $ riangle$	Device Type	IP Address	Port	Software Version	Serial No.	Security Status	Added
1	xx-xxxxx-xx	10.16.2.77	8000	Vx.x.x build xxxxxx	XX-30000X-30000000000000000000000000	Activated	Yes
2	XX-XXXXXXX	10.16.2.103	8000	Vx.x.x build x0000x	XX-X0000X-X000000000000000000000000000	Activated	No
3	XX-XXXX-XX	10.16.2.114	8000	Vxxxx build x00000	XX-XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	Activated	No
4	XX-XXXX-XXX	10.16.2.222	8000	Vx.x.x build x00000	XX-X0000X-X000000000000000000000000000	Activated	No
5	XX-XXXX-XX	192.0.0.64	8000	Vx.x.x build xxxxx	XX-X0000X-X0000000000000000000000X	Inactive	No

Figure 4-1 Select Inactive Device

2. Select an inactivated device and click Activate.



Figure 4-2 Activation

\land Note

You can hold **ctrl** or **shift** to select multiple devices in the online devices, and click the **Activate**to activate devices in batch.

3. Create a password, and confirm the password.

\land Note

We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

4. Click **OK** to activate the device.

4.2 Edit Network Parameters

To operate and configure the device via LAN (Local Area Network), you need connect the device in the same subnet with your PC. You can edit network parameters via batch configuration tool, and iVMS-4200 software. Here take editing network parameters via batch configuration tool as example.

Steps

1. Select an online activated device and click Edit NET Parameters.

Online Dev	ices: 5 🔗	Ф	/ Edit NET F	arameters	🕄 🚱 Reset Password	🦻 Activate		
Index $ riangle$	Device Type		IP Address	Port	Software Version	Serial No.	Security Status	Added
1	XX-XXXX-XX		10.16.2.77	8000	Vx.x.x build xxxxx	XX-X000X-X0000000000000000000000	Activated	Yes
2	XX-XXXX-XX	1	10.16.2.114	8000	Vx.x.x build xxxxxx	XX-XXXX-XXXXX-XXXXXXXXXXXXXXXXXXXXXXXX	Activated	No
3	XX-XXXX		10.16.2.103	8000	Vx.x.x build xxxxxx	XX-X000X-X00000000000000000000X	Activated	No
4	XX-XXXX-XX		192.0.0.64	8000	Vx.x.x build xxxxxx	XX-XXXX-XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	Activated	No
5	XX-XXXX-XX		10.16.2.222	8000	Vx.x.x build xxxxxx	XX-X000X-X000000000000000000000	Activated	No

Figure 4-3 Click Edit NET Parameters Button

2. Change the device IP address and gateway address to the same subnet with your computer.

IP Address:	10.16.6.159
Subnet Mask:	255.255.255.0
Gateway Address:	10.16.6.254
Port No.:	8000
Password:	
Enable DHCP	

Figure 4-4 Edit Network Parameters

\land Note

- The default port No. is 8000.
- After editing the network parameters of device, you should add the devices to the device list again.
- **3.** Enter the password and click **OK** to activate the network parameters modification.

4.3 Adding Device

You should add the device to the batch configuration tool and iVMS-4200 software before you start configuring or operating the device remotely on the software.

You can add the device to the software through 3 ways: Add Activated Online Devices within Your Subnet, Add Device by IP Address, and Add Device by IP Segment.

Here take Add Online Device and Add Device by IP Address via batch configuration tool as example.

4.3.1 Add Online Device

Before You Start

- Make sure you have activated the device.
- Make sure the device to be added is in the same subnet with your computer. Otherwise, you need to edit network parameters first.

Steps

3.

- 1. Run the software.
- 2. Select an activated online device in the online device area.

Online Devices: 5 🛛 😰 🚸 🥒 Edit NET Parameters 😳 Reset Password 👘 Activiste							
Index 🛆	Device Type	IP Address	Port	Software Version	Serial No.	Security Status	Added
1	XX-XXXX-XX	10.16.2.77	8000	Vx.x.x build xxxxxx	XX-X000-X0000000000000000000000	Activated	Yes
2	XX-XXXXX-XX	10.16.2.114	8000	Vx.x.x build xxxxxx	XX-XXXX-XXXXX-XXXXXX-XXXXX-XXXXX-XXXXX-XXXX	Activated	No
3	XX-XXXXX-XX	10.16.2.103	8000	Vx.x.x build x00000	XX-X000X-X000000000000000000000X	Activated	No
4	XX-XXXX-XX	10.16.2.88	8000	Vx.x.x build xxxxxx	XX-X000X-X0000000000000000000000000000	Activated	No
5	XX-XXXX-XX	10.16.2.222	8000	Vx.x.x build xooox	XX-XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	Activated	No

Figure 4-5 Select an Activated Online Device

Click 🛃 to display Login window.

-		-	Logir	ı	-	
Us	g into the s er Name: issword:		devid	:e(s):		
				ок	Cancel	

Figure 4-6 Login

4. Enter the user name and the password.

\land Note

The password entered here is the password you set when activating the device.

5. Click OK.

What to do next

You can configure and operate the device remotely via the client software after adding the device to the client software.

4.3.2 Add Device by IP Address

You can add device to Batch Configuration Tool by IP address.

Before You Start

Make sure you have activated the device.

Steps

- 1. Run Batch Configuration Tool.
- 2. Click on the Device List area.
- 3. Select IP Address as the adding mode.

	Add
Adding Mode:	IP Address 🗸 🗸
IP Address:	
Port No.:	8000
User Name:	admin
Password:	
	OK Cancel

Figure 4-7 Add Device by IP Address

- 4. Enter the IP address, the port No., the user name, and the password.
- 5. Click OK.

What to do next

You can configure and operate device remotely after adding the device to Batch Configuration Tool.

4.4 Set Indoor Station

4.4.1 Set Room No.

You can set the indoor station No. via client software remotely. You can dial the Room No. to call the indoor station of the resident.

Before You Start

Make sure you have activated the indoor station, and add it to the client software.

Steps

 Click Remote Configuration → ID Configuration to enter device ID configuration page.

Device No. Configuration			
Indoor Station	~		
101			
Save			
	[101]		

Figure 4-8 Set the Indoor Station Room No.

- 2. Select the device type as Indoor Station, and set the Room No..
- 3. Click Save.

4.4.2 Set Linked Network Parameters

Linked network configuration is a basic setting for the communication among devices.

Before You Start

Make sure you have activated devices, and have modified their default IP address.

Steps

 Click Remote Configuration → Network → Linked Network Configuration to enter the linked network configuration page.

inked Network Configuration	
Device Type:	Indoor Station ~
Master Station IP Address:	0.0.0.0
(Main) Door Station IP Address:	10.8.166.200
SIP Server IP Address:	0.0.0.0
Security Control Panel IP Address:	0.0.0.0
Security Control Panel Port No.:	0
Main Door Station Type:	Main Door Station (V S
Connect Mode:	Same Network
	Save

Figure 4-9 Set Linked Network Parameters

2. Enter the IP address of linked devices based on your requirements.

Example

We set the door station IP address as 10.15.3.208, so as to realize the communication between the indoor station and the door station.

3. Click Save.

4.5 Set Door Station

4.5.1 Set Call Button

You can set the relationship between the call button No. and the Room No. of the indoor station.

Steps

1. Click **Remote Configuration** → **Dial** to enter the call button configuration page.

Call Button		
	Number:	1 ~
	Floor No.:	1
	Room No.:	1
		Quick Press for Calling Center
		Save

Figure 4-10 Set Call Button

- 2. Select the button No..
- 3. Enter Floor No. and Room No..
- 4. Click the Save.

\land Note

If enabling **Quick Press for Calling Center**, you can hold the call button to call the resident, and quickly press the call button to call the center.

4.6 Add Device to App

You can add indoor station to Hik-Connect app by entering the device serial No..

Steps

- **1.** On the Home screen of App, click add icon.
- 2. Enter the device serial No., and click Add.
- **3.** Enter the device verification code, and click **OK**.

\land Note

- You can get the serial No. on the Maintenance page: Settings → Maintenance .
- The admin password of the indoor station is 123456.
- The default device verification code is ABCDEF.

