



Mobile Network Camera

User Manual

Legal Information

©2023 Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

About this Manual

The Manual includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the Hikvision website (<https://www.hikvision.com/>).

Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

Trademarks

HIKVISION and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned are the properties of their respective owners.

Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS MANUAL AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATTER PREVAILS.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance


This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.


FCC Conditions


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement

 This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the RE Directive 2014/53/EU, EMC Directive 2014/30/EU, the LVD Directive 2014/35/EU, the RoHS Directive 2011/65/EU.

 2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info




 2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info

Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (A)/NMB-3(A) standards requirements.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Note	Provides additional information to emphasize or supplement important points of the main text.
 Caution	Indicates a potentially hazardous situation, which if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Danger	Indicates a hazard with a high level of risk, which if not avoided, will result in death or serious injury.

Safety Instructions

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- Input voltage should meet limited power source or PS2 requirements according to the IEC60950-1 or IEC 62368-1 standard. Please refer to technical specifications for detailed information.
- Do not connect several devices to one power adapter as adapter overload may cause overheating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.

TABLE OF CONTENTS

Chapter 1 Product Introduction.....	1
1.1 Product Features.....	1
1.2 Function Features	1
Chapter 2 Operation Instructions	3
2.1 Setting the Network Camera over the LAN	3
2.1.1 Wiring over the LAN	3
2.2 Activating the Camera.....	4
2.2.1 Activation via SADP Software.....	4
2.2.2 Activation via Web Browser	6
2.2.3 (Optional) Setting Security Question	7
2.3 Login and Logout.....	8
2.3.1 Login	8
2.3.2 Logout.....	9
2.4 Main Interface	9
Chapter 3 Basic Functions.....	11
3.1 Local Parameters	11
3.1.1 Live View Parameters	11
3.1.2 Record File Setting.....	12
3.1.3 Picture and Clip Setting.....	12
3.2 Live View	12
3.2.1 Live View Page.....	12
3.2.2 Starting Live View	13
3.2.3 Record and Capture Pictures Manually	14
3.3 Playback	14
3.4 Picture	17
Chapter 4 System Configuration.....	18
4.1 Configure System Settings.....	18
4.1.1 Basic Information	18
4.1.2 Time Settings.....	19
4.1.3 DST	20
4.2 Maintenance.....	21
4.2.1 Upgrade & Maintenance.....	21
4.2.2 Log	22
4.3 Security.....	24
4.3.1 Authentication	24
4.3.2 Security Service	25
4.4 User Management	26
4.4.1 User Management.....	26
4.4.2 Security Question	28
4.4.3 Online Users.....	30
Chapter 5 Network Settings	31
5.1 Basic Settings.....	31
5.1.1 TCP/IP	31
5.1.2 Port.....	32
5.1.3 Multicast.....	33

5.2 Advanced Settings.....	33
5.2.1 HTTPS.....	33
5.2.2 Integration Protocol	34
5.2.3 Network Service	35
Chapter 6 Video and Audio Settings	36
6.1 Video Settings.....	36
6.2 Audio.....	39
Chapter 7 OSD Settings.....	41
Chapter 8 Storage Settings	43
8.1 Record Schedule	43
8.2 Capture Schedule and Capture Parameters	44
8.3 Storage Management.....	45
8.4 Advanced Settings.....	46
Chapter 9 Driving Status Monitoring Settings	47
9.1 Driving Status Monitoring	47
9.2 Advanced Parameters	48
Chapter 10 Access to the Network Camera	49
10.1.1 Via Static IP Connection	49
10.1.2 Via Dynamic IP Connection	50
Chapter 11 Appendix: SADP Software Introduction	51

Chapter 1 Product Introduction

1.1 Product Features

The main function of this DSM (Driving Status Monitoring) mobile network camera (hence force the “camera”) is for monitoring the driving status inside the vehicle. Based on the deep learning algorithm, the camera detects abnormality and send alarms, to alter the driver of possible dangers and improve driving safety.

The camera can be deployed in various settings, including bus, train, metro and special vehicles such as construction vehicles.

1.2 Function Features

The camera supports numerous DSM detection, voice alarm and capture, and the export of pictures and videos with TF card to facilitate the investigation of incidents.

DSM detection

- Distraction Prompt Detection

When the driver is detected distracted, the camera will send alarms.

- Fatigue Driving (Closing Eyes) Detection

When the driver is detected yawning or with eyes closed, the camera will send alarms.

- Fatigue Driving (Yawn) Detection

When the driver is detected fatigue driving, the camera will send alarms.

- Phone Call Detection

When the driver is detected making phone calls while driving, the camera will send alarms.

- Smoking Detection

When the driver is detected smoking, the camera will send alarms.

- Seatbelt Unbuckled Detection

When the driver is detected with seatbelt unbuckled, the camera will send alarms.

- Driver Exception Detection

When the driver is detected as absent from the driving seat, the camera will send alarms.

- Tampering Detection

When the camera is detected tampered, the camera will send alarms.

- IR Interrupted Sunglasses Detection

When the driver is detected putting up sunglasses that blocks infrared, the camera will send alarms.

System function

- Video recording and capturing pictures

The camera supports instant capture and video recording during preview, and after installing memory card, you can also configure video recording and capture plan to realize scheduled video recording and capture.

- User Management

You can manage many different users through the administrator "admin" user, and configure different permissions for each user.

Network function

The camera supports TCP/IP, MULTICAST and other network communication protocols; it also supports open interconnection protocols such as ONVIF.

Chapter 2 Operation Instructions

Note

- You shall acknowledge that the use of the product with Internet access might be under network security risks. For avoidance of any network attacks and information leakage, please strengthen your own protection. If the product does not work properly, please contact with your dealer or the nearest service center.
 - To ensure the network security of the network camera, we recommend you to have the network camera assessed and maintained termly. You can contact us if you need such service.
-

Before you start:

Step 1 If you want to set the network camera via a LAN (Local Area Network), please refer to Section 2.1 Setting the Network Camera over the LAN.

Step 2 If you want to set the network camera via a WAN (Wide Area Network), please refer to Section 2.2 Setting the Network Camera over the WAN.

2.1 Setting the Network Camera over the LAN

Purpose:

To view and configure the camera via a LAN, you need to connect the network camera in the same subnet with your computer, and install the SADP or iVMS-4200 software to search and change the IP of the network camera.

Note

- For the detailed introduction of SADP, please refer to Appendix 1.
-

2.1.1 Wiring over the LAN

The following figures show the two ways of cable connection of a network camera and a computer:

Purpose:

Step 1 To test the network camera, you can directly connect the network camera to the computer with a network cable as shown in Figure 2-1.

Step 2 Refer to the Figure 2-2 to set network camera over the LAN via a switch or a router.

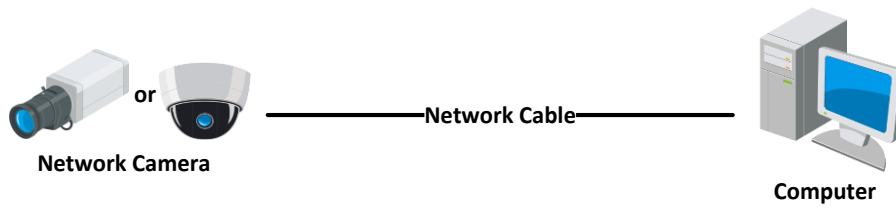


Figure 2-1 Connecting Directly

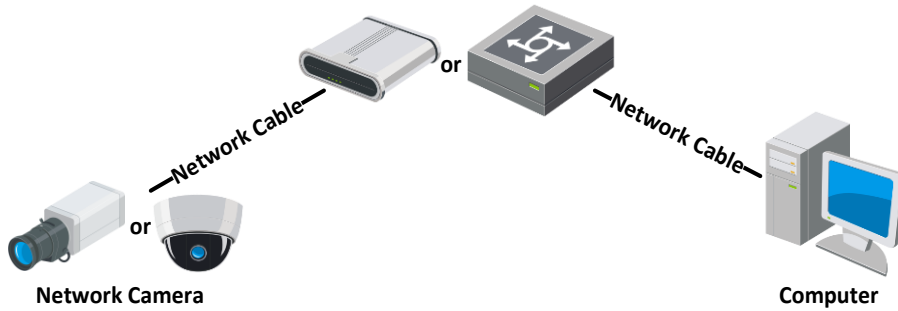


Figure 2-2 Connecting via a Switch or a Router

2.2 Activating the Camera

You are required to activate the camera first by setting a strong password for it before you can use the camera.

Activation via Web Browser, Activation via SADP, and Activation via Client Software are all supported.

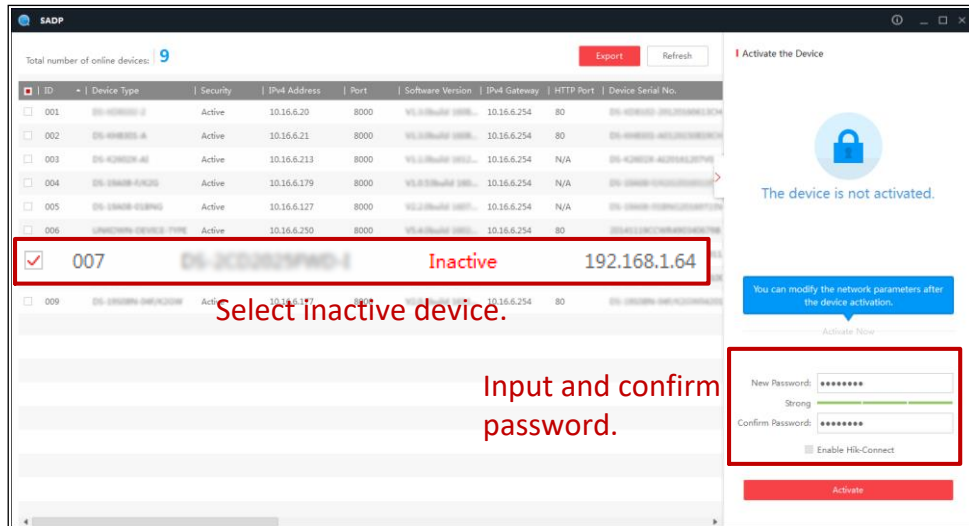
2.2.1 Activation via SADP Software

SADP software is used for detecting the online device, activating the camera, and resetting the password.

Get the SADP software from the official website, and install the SADP according to the prompts. Follow the steps to activate the camera.

Step 1 Run the SADP software to search the online devices.

Step 2 Check the device status from the device list, and select the inactive device.



SADP Interface

Note

- The SADP software supports activating the camera in batch. Refer to the user manual of SADP software for details.

Step 3 Create and input the password in the password field, and confirm the password. A password with user name in it is not allowed.

Caution

STRONG PASSWORD RECOMMENDED

- We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.
- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

You can enable the Hik-Connect service for the device during activation.

Step 4 Click Activate to start activation. You can check whether the activation is completed on the popup window. If activation failed, please make sure that the password meets the requirement and try again.

Step 5 Change the device IP address to the same subnet with your computer by either modifying the IP address manually or checking the checkbox of Enable DHCP.

Modify Network Parameters

Enable DHCP
 Enable Hik-Connect

Device Serial No.:

IP Address:

Port:

Subnet Mask:

Gateway:

IPv6 Address:

IPv6 Gateway:

IPv6 Prefix Length:

HTTP Port:

Security Verification

Admin Password:

[Modify](#) [Forgot Password](#)

Modify the IP Address

Step 6 Input the admin password and click Modify to activate your IP address modification.


2.2.2 Activation via Web Browser

Step 1 Power on the camera, and connect the camera to the network.

Step 2 Input the IP address into the address bar of the web browser, and click Enter to enter the activation interface.

 **Note**

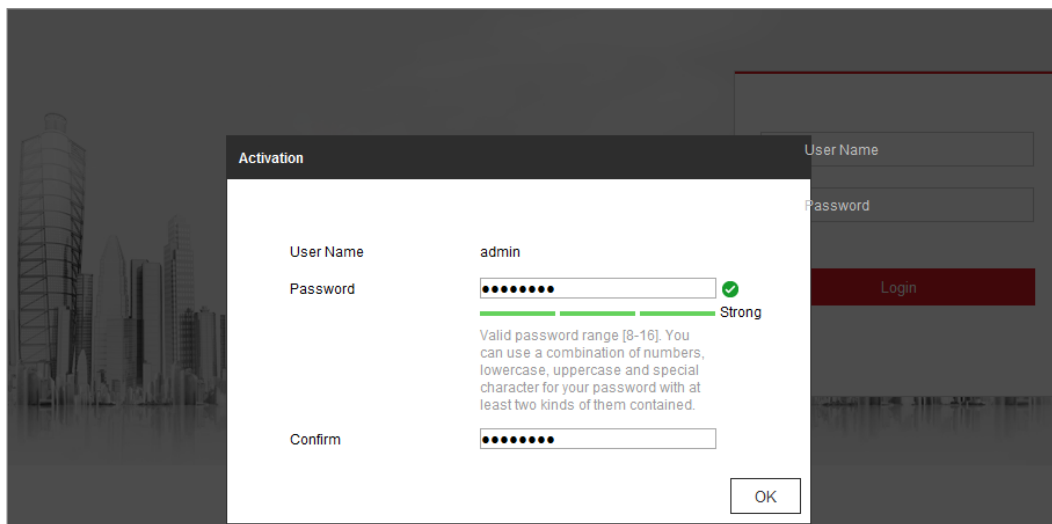- The default IP address of the camera is 192.168.1.64.
- The computer and the camera should belong to the same subnet.
- For the camera enables the DHCP by default, you need to use the SADP software to search the IP address.



Activation via Web Browser

Step 3 Create and input a password into the password field. A password with user name in it is not allowed.

 **Caution**

STRONG PASSWORD RECOMMENDED

- We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 4 Confirm the password.

Step 5 Click OK to save the password and enter the live view interface.

2.2.3 (Optional) Setting Security Question

Security question is used to reset the admin password when admin user forgets the password.

Admin user can follow the pop-up window to complete security question settings during camera activation. Or, admin user can go to User Management interface to configure the function.

2.3 Login and Logout

2.3.1 Login

For certain camera models, HTTPS is enabled by default and the camera creates an unsigned certificate automatically. When you access to the camera the first time, the web browser prompts a notification about the certificate issue.

To cancel the notification, install a signed-certificate to the camera.

Step 1 Open the web browser.

Step 2 In the browser address bar, input the IP address of the network camera, and press the Enter key to enter the login interface.

Note

The default IP address is 192.168.1.64. You are recommended to change the IP address to the same subnet with your computer.

Step 3 Input the user name and password.

The admin user should configure the device accounts and user/operator permissions properly. Delete the unnecessary accounts and user/operator permissions.

Note

The IP address gets locked if the admin user performs 7 failed password attempts (5 attempts for the user/operator).




Figure 2-3 Login Interface

Step 4 Click **Login**.

Step 5 (Optional) Install the plug-in before viewing the live video and operating the camera. Follow the installation prompts to install the plug-in.

Table 2-1 Install Plugins


OS	Browser Version	Plugin
Windows	<ul style="list-style-type: none"> • IE 8 and upper • Google Chrome 57 and lower • Mozilla Firefox 52 and lower 	Install the plugin according to instructions.
	<ul style="list-style-type: none"> • Google Chrome 57 and upper • Mozilla Firefox 52 and upper 	Click  in the preview page to download and install the plugin for high quality view and device functions.
Mac OS	<ul style="list-style-type: none"> • Google Chrome 57 and upper • Mozilla Firefox 52 and upper • Mac Safari 16 and upper 	To preview, enter Configuration > Network > Advanced Setting > Network Service, and enable WebSocket. Some functions will be limited after enabling this function, such as video play. The actual equipment shall prevail.

 **Note**

For camera that supports plug-in free live view, if you are using Google Chrome 57 and its above version or Mozilla Firefox 52 and its above version, plug-in installation is not required. But Picture and Playback functions are hidden. To use mentioned function via web browser, change to their lower version, or change to Internet Explorer 8.0 and above version.

Login without plug-in only supports configuration, not preview and playback.

2.3.2 Logout

To logout, click the  icon.

2.4 Main Interface

The main interface is shown as follows.

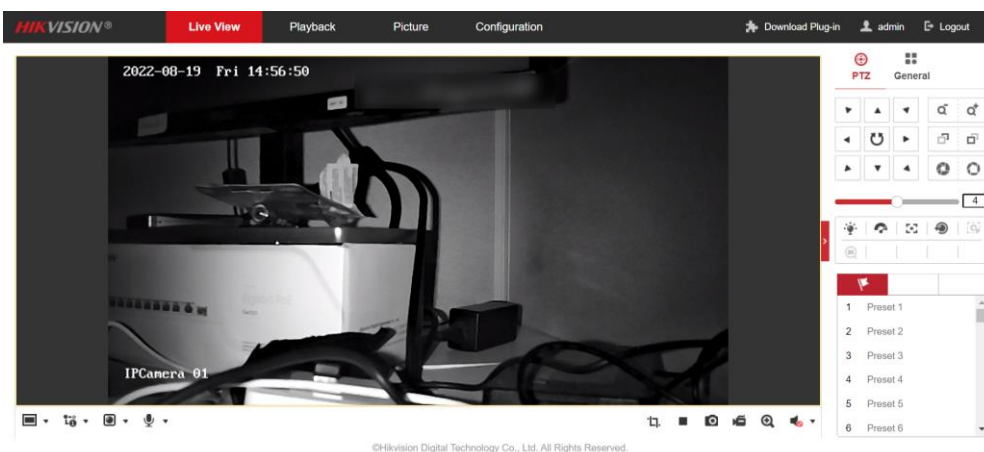


Figure 2-4 Main Interface

Live View: to view the camera and set parameters.

Playback: to play recordings according to their type and time.

Picture: to search, view and download the pictures stored in the SD Card of the network camera.

Configuration: to set the system and function parameters.

 **Note**

- The interface may vary according to the model of the camera.
-

Chapter 3 Basic Functions

3.1 Local Parameters

Go to **Configuration > Local** to configure local configurations. Live View Parameters, Record File Settings, Picture and Clip Settings can be configured.

Live View Parameters

Protocol	<input checked="" type="radio"/> TCP	<input type="radio"/> UDP	<input type="radio"/> MULTICAST	
Play Performance	<input type="radio"/> Shortest Delay	<input checked="" type="radio"/> Balanced	<input type="radio"/> Fluent	<input type="radio"/> Custom
Rules	<input type="radio"/> Enable	<input checked="" type="radio"/> Disable		
Display POS Information	<input checked="" type="radio"/> Enable	<input type="radio"/> Disable		
Image Format	<input checked="" type="radio"/> JPEG	<input type="radio"/> BMP		

Record File Settings

Record File Size	<input type="radio"/> 256M	<input checked="" type="radio"/> 512M	<input type="radio"/> 1G
Save record files to	<input type="text"/>	<input type="button" value="Browse"/>	<input type="button" value="Open"/>
Save downloaded files to	<input type="text"/>	<input type="button" value="Browse"/>	<input type="button" value="Open"/>

Picture and Clip Settings

Save snapshots in live vi...	<input type="text"/>	<input type="button" value="Browse"/>	<input type="button" value="Open"/>
Save snapshots when pla...	<input type="text"/>	<input type="button" value="Browse"/>	<input type="button" value="Open"/>
Save clips to	<input type="text"/>	<input type="button" value="Browse"/>	<input type="button" value="Open"/>

Figure 3-1 Local Parameters

3.1.1 Live View Parameters

- Protocols

TCP, UDP and MULTICAST protocols are supported.

- The default protocol is TCP
- UDP is suitable for the situation that the requirement of video fluency is not high and the network environment is unstable.
- MULTICAST is suitable for multicast addresses with many customers and need to be configured before selection.

- Playback performance:

You can choose the shortest delay, Balanced, Fluent and Custom, and the default is Custom.

- Minimum delay: Real-time is good, but it may affect the fluency of video.
- Balance: Give consideration to the real-time and fluency of video playback.

- **Good fluency:** In the same network situation, it takes up less network resources, and the video is smoother than other modes.
- **Custom:** the frame rate can be set according to the network conditions.
- **Information:** You can choose to enable or disable it. When enabled, information boxes will appear on the live screen, including the dynamic analysis box of motion detection and the face target box.
- **POS information overlay:** it can be enabled or disabled. When enabled, when a target triggers a rule, the live screen will display the attribute information of the target.
- **Picture and Clip Settings:** set the format of captured pictures, with optional JPEG and BMP.

3.1.2 Record File Setting

- **Record File Size:** it can be set to 256 M, 512 M and 1 G, indicating the size of a single video file stored locally.
- **Save record files to:** the path where video files are stored locally. You can choose Browse to change the path, and click Open Folder to open the folder under the archive path.
- **Save downloaded files to:** the path where the video files saved during playback are stored locally. You can choose Browse to change the path, and click Open Folder to open the folder under the archive path.

3.1.3 Picture and Clip Setting

- **Save snapshots in live view to:** the path where the captured pictures are stored locally during preview. You can choose Browse to change the path, and click Open Folder to open the folder under the archive path.
- **Save snapshots when playback to:** the path where captured pictures are stored locally during playback. You can choose Browse to change the path, and click Open Folder to open the folder under the archive path.
- **Save clips to:** the path where the cut video files are stored locally during playback. You can choose Browse to change the path, and click Open Folder to open the folder under the archive path.

3.2 Live View

3.2.1 Live View Page

Purpose:

The live view page allows you to view the real-time video, capture images, realize PTZ control, set/call presets and configure video parameters.

Log in the network camera to enter the live view page, or you can click Live View on the menu bar of the main page to enter the live view page.

Descriptions of the live view page:

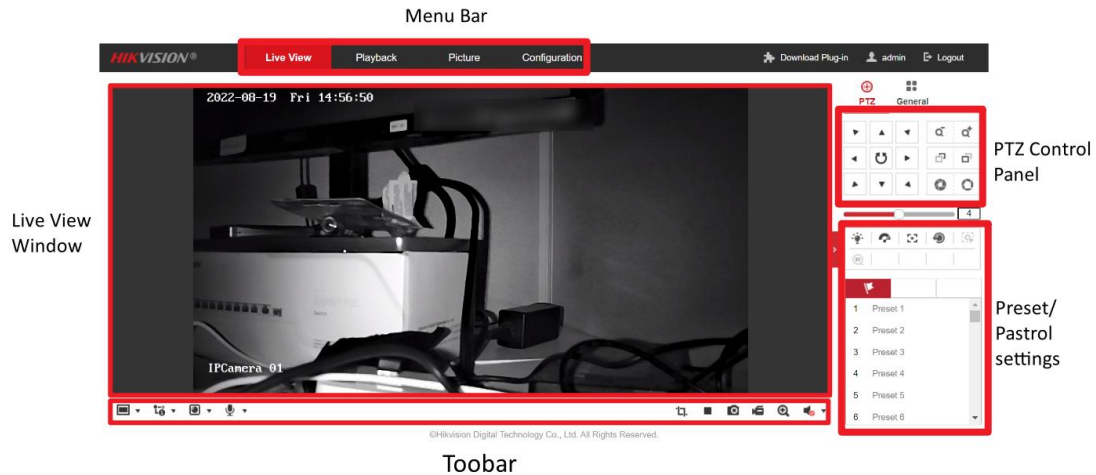


Figure 3-2 Live View Page

- **Menu Bar**

Click each tab to enter Live View, Playback, Picture, Application, and Configuration page respectively.

- **Live View Window**

Display the live video.

- **Toolbar**


Toolbar allows you to adjust the live view window size, the stream type, and the plug-ins. It also allows you to process the operations on the live view page, e.g., start/stop live view, capture, record, audio on/off, two-way audio, start/stop digital zoom, etc.

For IE (Internet Explorer) users, plug-ins as webcomponents and quick time are selectable. And for Non-IE users, webcomponents, quick time, VLC or MJPEG are selectable if they are supported by the web browser.

 **Note**

- For camera that supports plug-in free live view, when Google Chrome 45 and its above version or Mozilla Firefox 52 and its above version are used, plug-in installation is not required. But Picture and Playback functions are hidden. To use mentioned function via web browser, change to their lower versions, or change to Internet Explorer 8.0 and its above version.

3.2.2 Starting Live View

In the live view window as shown in Figure 4-2, click  on the toolbar to start the live view of the camera.

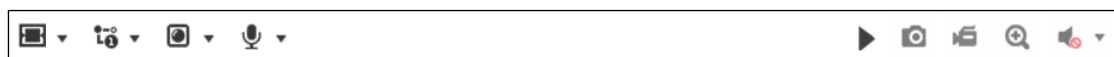





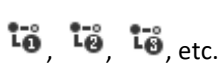



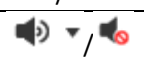

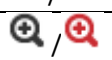


Figure 3-3 Live View Toolbar



Table 3-1 Descriptions of the Toolbar

Icon	Description
	Start/Stop live view.
	The window size is 4:3.
	The window size is 16:9.
	The original window size.
	Self-adaptive window size.
	Live view with the different video streams. Supported video streams vary according to camera models.
	Click to select the third-party plug-in.
	Manually capture the picture.
	Manually start/stop recording.
	Audio on and adjust volume /Mute.
	Turn on/off microphone.
	Start/stop digital zoom function.

Note

- The icons vary according to the different camera models.

3.2.3 Record and Capture Pictures Manually

In the live view interface, click  on the toolbar to capture the live pictures; click  to record the live view. The saving paths of the captured pictures and clips can be set on the Configuration > Local page. To configure remote scheduled recording, please refer to 8.1 Record Schedule.

Note

- The captured image will be saved as a JPEG file or BMP file in your computer.

3.3 Playback

Purpose:

This section explains how to view the remotely recorded video files stored in the network disks or SD cards.

Step 1 Click **Playback** on the menu bar to enter playback interface.

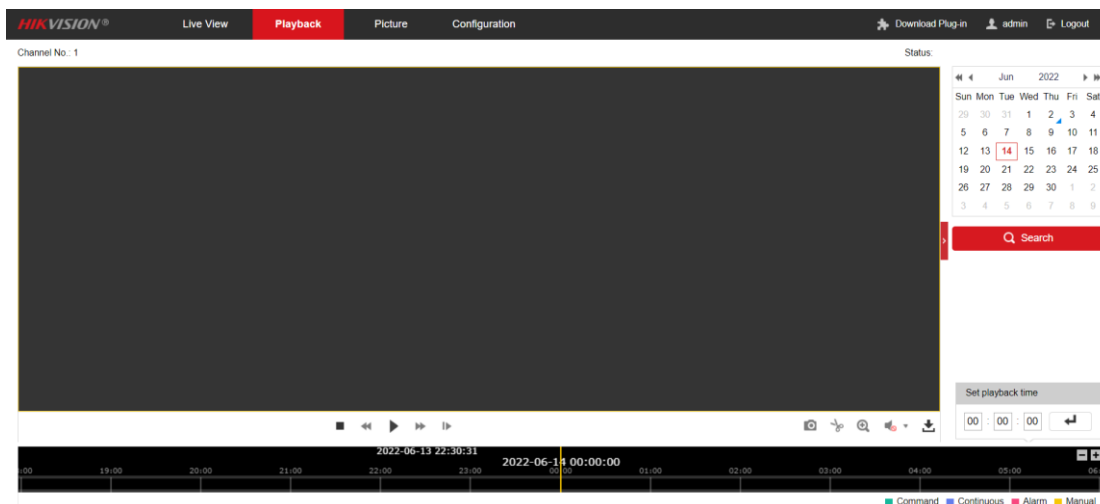


Figure 3-4 Playback Interface

Step 2 Select the date and click **Search**.

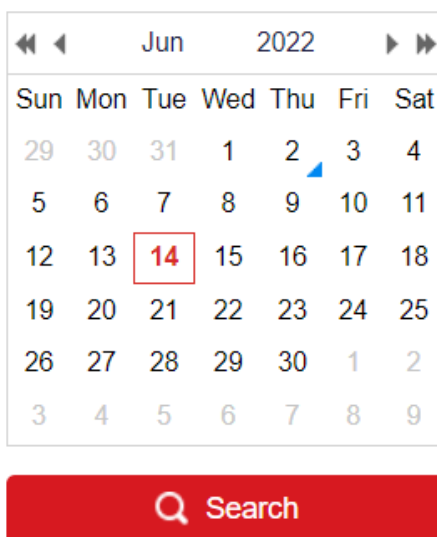



Figure 3-5 Search Video







Step 3 Click  to play the video files found on this date.






The toolbar on the bottom of Playback interface can be used to control playing process.

 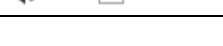

Figure 3-6 Playback Toolbar



Table 3-2 Description of the buttons

Button	Operation	Button	Operation
	Play		Capture a picture
	Pause		Start/Stop clipping video files
	Stop		Audio on and adjust volume

	Speed down		Mute
	Speed up		Download
	Enable/Disable digital zoom		Playback by frame

 **Note**

- You can choose the file paths locally for downloaded playback video files and pictures in Local Configuration interface.

You can also input the time and click  to locate the playback point in the **Set playback time** field. You can also click  to zoom out/in the progress bar.

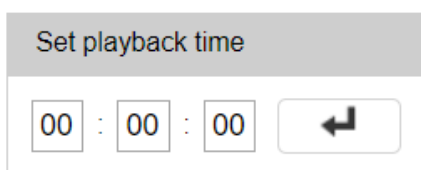


Figure 3-7 Set Playback Time

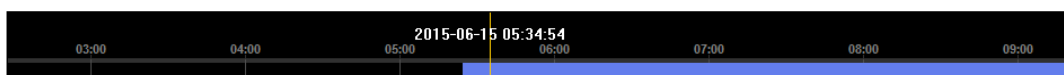


Figure 3-8 Progress Bar

The different colors of the video on the progress bar stand for the different video types.

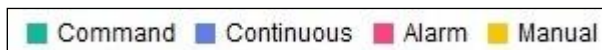


Figure 3-9 Video Types

3.4 Picture

Purpose:

Click Picture to enter the picture searching interface. You can search, view, and download the pictures stored in the local storage or network storage.

Note

- Make sure HDD, NAS or memory card are properly configured before you process the picture search.
- Make sure the capture schedule is configured. Go to **Configuration > Storage > Schedule Settings > Capture** to set the capture schedule.

The screenshot shows the 'Picture' search interface. At the top, there are navigation tabs: 'Live View', 'Playback', 'Picture' (highlighted in red), 'Application', and 'Configuration'. Below the tabs, the title 'Download by File' is displayed. The interface is divided into two main sections: 'Search Conditions' on the left and 'File List' on the right.

Search Conditions:

- File Type: Continuous (dropdown menu)
- Start Time: 2015-07-02 00:00:00
- End Time: 2015-07-10 23:59:59
- A red 'Search' button is located below the time fields.

File List:

No.	File Name	Time	File Size	Progress
1	ch01_08000000000068600	2015-07-10 15:35:13	134 KB	
2	ch01_08000000000068700	2015-07-10 15:35:18	134 KB	
3	ch01_08000000000068800	2015-07-10 15:35:24	134 KB	
4	ch01_08000000000068900	2015-07-10 15:35:29	132 KB	
5	ch01_08000000000069000	2015-07-10 15:35:34	132 KB	
6	ch01_08000000000069100	2015-07-10 15:35:39	133 KB	
7	ch01_08000000000069200	2015-07-10 15:35:45	133 KB	
8	ch01_08000000000069300	2015-07-10 15:35:50	131 KB	
9	ch01_08000000000069400	2015-07-10 15:35:55	131 KB	
10	ch01_08000000000069500	2015-07-10 15:36:01	132 KB	
11	ch01_08000000000069600	2015-07-10 15:36:06	132 KB	

At the bottom of the file list, it shows 'Total 1285 Items' and navigation controls: '<<', '<', '1/13', '>', '>>'.

Figure 3-10 Picture Search Interface

Step 2 Select the file type from the dropdown list. Continuous, Motion, Alarm, Motion | Alarm, Motion & Alarm, Line Crossing, Intrusion Detection, and Scene Change Detection are selectable.

Step 3 Select the start time and end time.

Step 4 Click **Search** to search the matched pictures.

Step 5 Check the checkbox of the pictures and then click **Download** to download the selected pictures.

Note

- Up to 4000 pictures can be displayed at one time.

Chapter 4 System Configuration

4.1 Configure System Settings

Purpose:

Follow the instructions below to configure the system settings, include System Settings, Maintenance, Security, and User Management, etc.

4.1.1 Basic Information

Step 1 Go to **Configuration > System > System Settings > Basic Information**.

Step 2 Edit the Device Name and Device No.

Basic Information	Time Settings	DST
Device Name	IP CAMERA	
Device No.	88	
Model	AE-VC583I-IS/P(H)	
Serial No.	K34606241	
Firmware Version	V2.0.1 build220727 374013	
Encoding Version	V2.0.0 build220704	
Web Version	V1.0.0 373795 build 220727	
Plugin Version	3.0.7.46	
Number of Channels	1	
Number of HDDs	1	
Number of Alarm Input	1	
Number of Alarm Output	0	


 Save

Figure 4-1 Basic Information

Note

- Other information of the network camera, such as Model, Serial No., Firmware Version, Encoding Version, Number of Channels, Number of HDDs, Number of Alarm Input and Number of Alarm Output are displayed. The information cannot

be changed in this menu. These options are the reference for maintenance or modification in future.

4.1.2 Time Settings

Purpose:

You can follow the instructions in this section to configure the time synchronization and DST settings.

Step 1 Go to **Configuration > System > System Settings > Time Settings**.

Basic Information **Time Settings** DST

Time Zone (GMT+08:00) Beijing, Urumqi, Singapore, Perth

NTP

NTP

Server Address ntp.aliyun.com

NTP Port 123

Interval 1440 minute(s)

Test

Manual Time Sync.

Manual Time Sync.

Device Time 2022-08-06T13:45:26

Set Time 2022-08-06T13:45:23 Sync. with computer time

Save

Figure 4-2 Time Settings

Step 2 Select the Time Zone of your location from the drop-down menu.

Step 3 Configure the NTP settings.

Step 4 Click to enable the NTP function.

Step 5 Configure the following settings:

- Server Address: IP address of NTP server.
- NTP Port: Port of NTP server.
- Interval: The time interval between the two synchronizing actions with NTP server.

Step 6 (Optional) You can click the Test button to test the time synchronization function via NTP server.

NTP

NTP

Server Address

NTP Port


Interval minute(s)

Time Sync by NTP Server

 **Note**

- If the camera is connected to a public network, you should use a NTP server that has a time synchronization function, such as the server at the National Time Center (IP Address: 210.72.145.44). If the camera is set in a customized network, NTP software can be used to establish a NTP server for time synchronization.

Step 7 Configure the manual time synchronization.

- 1) Check the Manual Time Sync. item to enable the manual time synchronization function.
- 2) Click the icon  to select the date, time from the pop-up calendar.
- 3) (Optional) You can check Sync. with computer time item to synchronize the time of the device with that of the local PC.

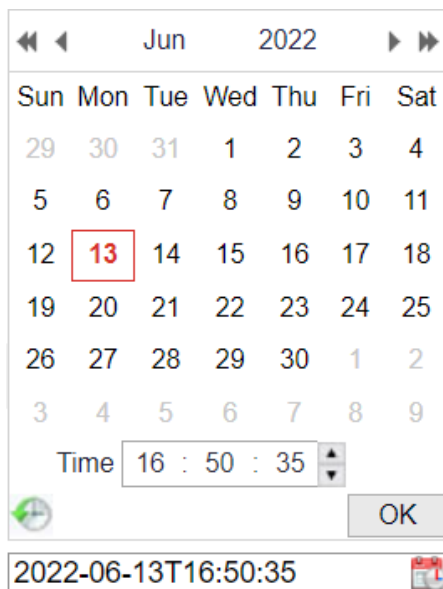


Figure 4-3 Time Sync Manually

Step 8 Click Save to save the settings.

4.1.3 DST

Purpose:

Daylight Saving Time (DST) is a way of making better use of the natural daylight by setting your clock forward one hour during the summer months, and back again in the fall.

Step 1 Go to **Configuration > System > System Settings > DST**.

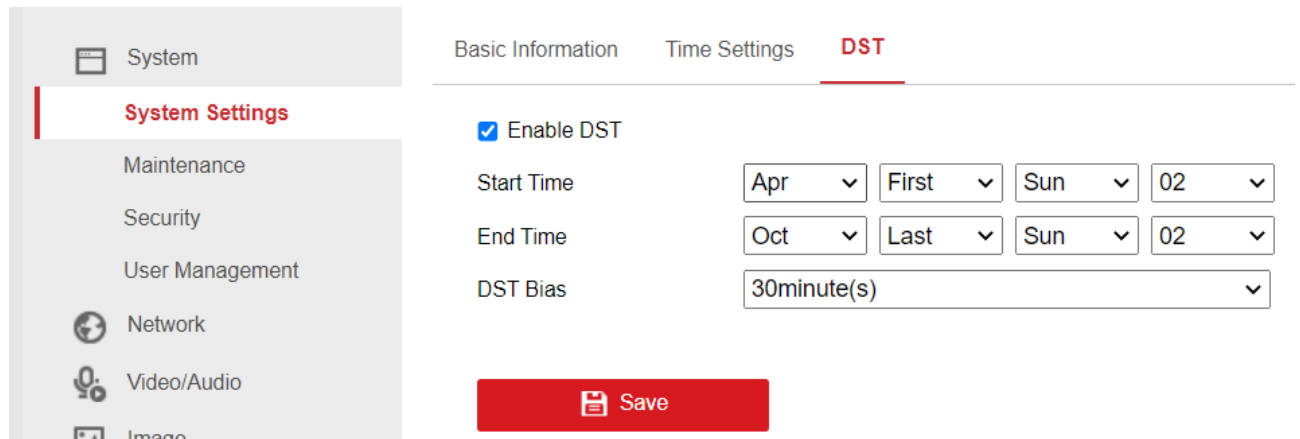


Figure 4-4 DST Settings

Step 2 Check Enable DST.

Step 3 Select the start time and the end time.

Step 4 Select the DST Bias.

Step 5 Click **Save** to activate the settings.

4.2 Maintenance

4.2.1 Upgrade & Maintenance

Purpose:

The upgrade & maintenance interface allows you to process the operations, including reboot, partly restore, restore to default, export/import the configuration files, and upgrade the device.

Step 1 Go to **Configuration > System > Maintenance > Upgrade & Maintenance**.

- Reboot: Restart the device.
- Restore: Reset all the parameters, except the IP parameters and user information, to the default settings.
- Default: Restore all the parameters to the factory default.

 **Note**

- After restoring the default settings, the IP address is also restored to the default IP address, please be careful for this action.
 - For camera that supports Wi-Fi, wireless dial, or wlan function, Restore action does not restore the related settings of mentioned functions to default.
-

- **Information Export**

Device Parameters: click to export the current configuration file of the camera.

This operation requires admin password to proceed.

For the exported file, you also have to create an encryption password. The encryption password is required when you import the file to other cameras.

Diagnose Information: click to download log and system information.

- **Import Config. File**

Configuration file is used for the batch configuration of the cameras.

Step 2 Click Browse to select the saved configuration file.

Step 3 Click Import and input the encryption password that you set during exporting.

 **Note**

- The camera needs rebooting after importing configuration file.
-

Upgrade: Upgrade the device to a certain version.

Step 4 Select firmware or firmware directory to locate the upgrade file.

- **Firmware:** Locate the exact path of the upgrade file.
- **Firmware Directory:** Only the directory the upgrade file belongs to is required.

Step 5 Click Browse to select the local upgrade file and then click Upgrade to start remote upgrade.

 **Note**

- The upgrading process will take 1 to 10 minutes. Please don't disconnect power of the camera during the process, and the camera reboots automatically after upgrade.
-

4.2.2 Log

Purpose:

The operation, alarm, exception and information of the camera can be stored in log files. You can also export the log files on your demand.

Before you start:

Please configure network storage for the camera or insert a SD card in the camera.

Step 1 Go to Configuration > System > Maintenance > Log.

Upgrade & Maintenance **Log**

Major Type Minor Type

Start Time End Time

Log List							<input type="button" value="Export txt"/>	<input type="button" value="Export CSV"/>
No.	Time	Major Type	Minor Type	Channel No.	Local/Remote User	Remote Host IP		

Total 0 Items << < 0/0 > >>

Figure 4-5 Log Searching Interface

Step 2 Set the log search conditions to specify the search, including the Major Type, Minor Type, Start Time and End Time.

Step 3 Click **Search** to search log files. The matched log files will be displayed on the log list interface.

Upgrade & Maintenance **Log** System Service

Major Type: All Types Minor Type: All Types

Start Time: 2022-06-13 00:00:00 End Time: 2022-06-13 23:59:59 Search

Log List							Export txt	Export CSV
No.	Time	Major Type	Minor Type	Channel No.	Local/Remote User	Remote Host IP		
1	2022-06-13 09:58:46	Operation	Power On			local		
2	2022-06-13 09:58:46	Operation	Local: Configure Parameters			local		
3	2022-06-13 10:31:17	Operation	Power On			local		
4	2022-06-13 10:31:17	Operation	Local: Configure Parameters			local		
5	2022-06-13 12:01:17	Operation	Power On			local		
6	2022-06-13 12:01:17	Operation	Local: Configure Parameters			local		
7	2022-06-13 12:03:37	Operation	Remote: Upgrade		admin	10.67.193.19		
8	2022-06-13 12:03:40	Operation	Local: Shutdown			local		
9	2022-06-13 12:03:40	Operation	Local: Reboot			local		
10	2022-06-13 12:03:40	Operation	Local: Stop Record			local		
11	2022-06-13 12:03:40	Operation	Local: Shutdown			local		
12	2022-06-13 12:05:05	Operation	Power On			local		

Total 45 Items << < 1/1 > >>

Figure 4-6 Log Searching

Step 4 To export the log files, click **Export** to save the log files.

4.3 Security

Configure the parameters, including Authentication, IP Address Filter, and Security Service from security interface.

4.3.1 Authentication

Purpose:

You can specifically secure the stream data of live view.

Step 1 Go to **Configuration > System > Security > Authentication**.

The screenshot shows a configuration interface with two tabs: 'Authentication' (active) and 'Security Service'. Under 'Authentication', there are two rows. The first row is 'RTSP Authentication' with a dropdown menu showing 'digest/basic'. The second row is 'WEB Authentication' with a dropdown menu showing 'digest'. At the bottom, there is a red button with a document icon and the text 'Save'.

Figure 4-7 Authentication

Step 2 Configure authentication method for RTSP authentication and WEB authentication.

Caution

- Digest is the recommended authentication method for better data security. You must be aware of the risk if you adopt basic as the authentication method.

Step 3 Click **Save**.

4.3.2 Security Service

To enable the remote login, and improve the data communication security, the camera provides the security service for better user experience.

Step 1 Go to Configuration > System > Security > Security Service.

The screenshot shows a configuration interface with two tabs: 'Authentication' and 'Security Service' (active). Under 'Security Service', there are two checkboxes. The first is 'Enable SSH' which is unchecked. The second is 'Enable Illegal Login Lock' which is checked. At the bottom, there is a red button with a document icon and the text 'Save'.

Figure 4-8 Security Service

Step 2 Check the checkbox of Enable Illegal Login Lock and SSH.

Illegal Login Lock is used to limit the user login attempts. Login attempt from the IP address is rejected if admin user performs 7 failed user name/password attempts (5 times for the operator/user).

SSH allows remote login, which increases the web security risk. Be cautious to enable this item.

 **Note**

- If the IP address is rejected, you can try to login the device after 30 minutes.
-

4.4 User Management

4.4.1 User Management

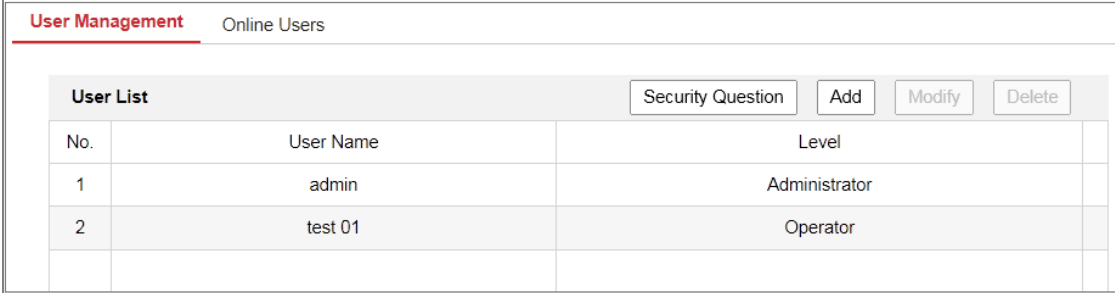
Administrator

The admin user can add, delete or modify user accounts, and grant them different permissions. We highly recommend you manage the user accounts and permissions properly.

Step 1 Go to **Configuration > System > User Management**.

 **Note**

- Admin password if required for adding and modifying a user account.
-



The screenshot shows the 'User Management' interface with the 'Online Users' tab selected. It features a table with columns for 'No.', 'User Name', and 'Level'. There are also buttons for 'Security Question', 'Add', 'Modify', and 'Delete'.

User List			Security Question	Add	Modify	Delete
No.	User Name	Level				
1	admin	Administrator				
2	test 01	Operator				

Figure 4-9 User Management Interface

Adding a User

The *admin* user has all permissions by default and can create/modify/delete other accounts.

The *admin* user cannot be deleted and you can only change the *admin* password.

Step 2 Click **Add** to add a user.

Step 3 Input the Admin Password, User Name, select Level and input Password.

Add user
✕

User Name ✔

Digits, lower-case letters, upper-case letters, and special characters (#\$%&'()*+,-./:;<=>?@[^_`{}~ space) are allowed.

Level

Admin Password ✔

Password ✔

Strong

8 to 16 characters allowed, including upper-case letters, lower-case letters, digits and special characters (!#\$%&'()*+,-./:;<=>?@[^_`{}~ space). At least two of above mentioned types are required.

Confirm ✔

Select All

Remote: Parameters Settings

Remote: Log Search / Interrogate Wo...

Remote: Upgrade / Format

Remote: Two-way Audio

Remote: Shutdown / Reboot

Remote: Notify Surveillance Center / ...

Remote: Video Output Control

Remote: Serial Port Control

Remote: Live View

Remote: Manual Record

Remote: PTZ Control

Remote: Playback

Figure 4-10 Add a User

Note

- Up to 16 user accounts can be created.
- Users of different levels own different default permissions. Operator and user are selectable.

Caution

- Strong Password recommended
- We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Step 4 You can check or uncheck the permissions for the new user.

Step 5 Click **OK** to finish the user addition.

Modify a User

Step 6 Left-click to select the user from the list and click **Modify**.

Step 7 Modify the User Name, Level and Password.



Caution

- Strong Password recommended
 - We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.
-

Step 8 You can check or uncheck the permissions.

Step 9 Click **OK** to finish the user modification.

Step 10 Deleting a User

- 1) Click to select the user you want to delete and click **Delete**.
- 2) Click **OK** on the pop-up dialogue box to confirm the deletion.

Operator/User

Operator or user can modify password. Old password is required for this action.

4.4.2 Security Question

Purpose:

Security question is used to reset the admin password when admin user forgets the password.

Set Security Questions

You can set the security questions during camera activation. Or you can set the function at user management interface.

Security question setting is not cleared when you restore the camera (not to default).

Steps:

Step 1 Go to **Configuration > System > User Management**.

Step 2 Click Account Security Question.

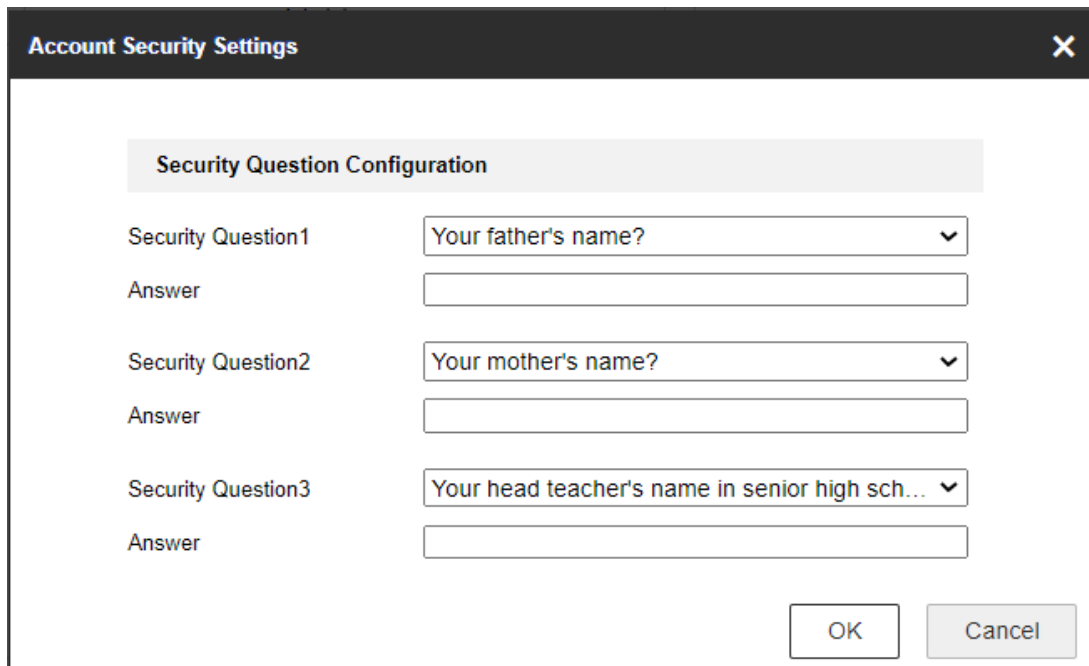


Figure 4-11 Account Security Question

Step 3 Select questions and input answers.

Step 4 Click **OK** to save the settings.

Reset Admin Password:

Before you start:

The PC used to reset password and the camera should belong to the same IP address segment of the same LAN.

Steps:

Step 5 Go to **Configuration > Network > Advanced Settings > QoS**

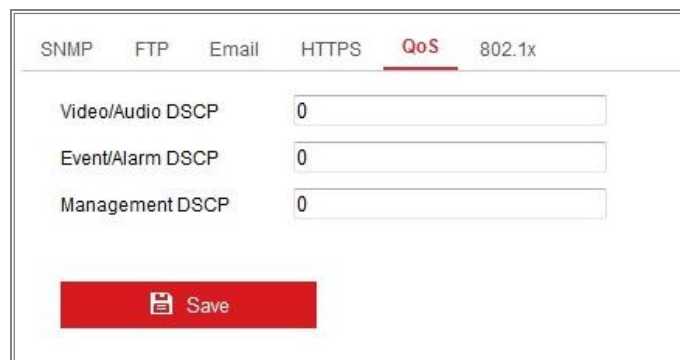


Figure 4-12 QoS Settings

Step 6 Configure the QoS settings, including Video/Audio DSCP, Event/Alarm DSCP and Management DSCP.

Step 7 The valid value range of the DSCP is 0 to 63. The bigger the DSCP value is, the higher the priority is.

 **Note**

- DSCP refers to the Differentiated Service Code Point; and the DSCP value is used in the IP header to indicate the priority of the data.
-

Step 8 Click **Save** to save the settings.

 **Note**

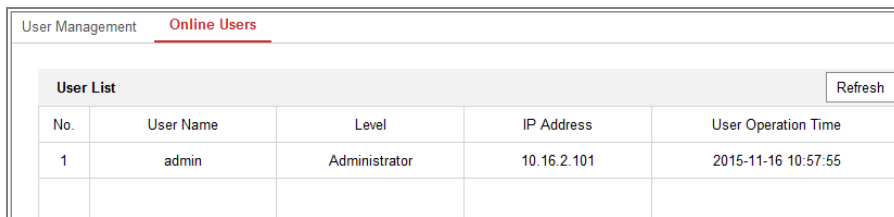
- A reboot is required for the settings to take effect.
-

4.4.3 Online Users

Purpose:

You can see the current users who are visiting the device through this interface. User information, such as user name, level, IP address, and operation time, is displayed in the User List.

Click **Refresh** to refresh the list.



The screenshot shows a web interface for 'User Management' with a sub-tab for 'Online Users'. Below the tab is a 'User List' table with a 'Refresh' button. The table has five columns: 'No.', 'User Name', 'Level', 'IP Address', and 'User Operation Time'. One row is visible with the following data: No. 1, User Name 'admin', Level 'Administrator', IP Address '10.16.2.101', and User Operation Time '2015-11-16 10:57:55'.

User List					Refresh
No.	User Name	Level	IP Address	User Operation Time	
1	admin	Administrator	10.16.2.101	2015-11-16 10:57:55	

Figure 4-13 View the Online Users

Chapter 5 Network Settings

Purpose:

Follow the instructions in this chapter to configure the basic settings and advanced settings.

5.1 Basic Settings

Purpose:

You can configure the parameters, including TCP/IP, Port, and Multicast, etc., by following the instructions in this section.

5.1.1 TCP/IP

Purpose:

TCP/IP settings must be properly configured before you operate the camera over network. The camera supports both the IPv4 and IPv6. Both versions can be configured simultaneously without conflicting to each other, and at least one IP version should be configured.

Step 1 Go to **Configuration > Network > Basic Settings > TCP/IP**.

The screenshot shows a configuration page for TCP/IP settings. At the top, there are tabs for 'TCP/IP', 'DDNS', 'Port', 'NAT', and 'Multicast', with 'TCP/IP' selected. Below the tabs, there are several configuration fields:

- NIC Type: Auto (dropdown menu)
- DHCP
- IPv4 Address: 10.67.197.234 (text input) with a 'Test' button
- IPv4 Subnet Mask: 255.255.255.0 (text input)
- IPv4 Default Gateway: 10.67.197.254 (text input)
- IPv6 Mode: Route Advertisement (dropdown menu) with a 'View Route Advertisement' button
- IPv6 Address: (empty text input)
- IPv6 Subnet Mask: 0 (text input)
- IPv6 Default Gateway: (empty text input)
- Mac Address: ac:b9:2f:ce:c4:fa (text input)
- MTU: 1500 (text input)

Below these fields is a section titled 'DNS Server' with a light gray background:

- Preferred DNS Server: 10.1.7.77 (text input)
- Alternate DNS Server: 10.1.7.88 (text input)

At the bottom, there is a red 'Save' button with a floppy disk icon.

Figure 5-1 TCP/IP Settings

Step 2 Configure the basic network settings, including the NIC Type, IPv4 or IPv6 Address, IPv4 or IPv6 Subnet Mask, IPv4 or IPv6 Default Gateway, and MTU settings.

Step 3 Configure the DNS server. Input the preferred DNS server, and alternate DNS server.

Step 4 Click **Save** to save the above settings.

 **Note**

- The valid value range of MTU is 1280 to 1500.
- A reboot is required for the settings to take effect.

5.1.2 Port

Step 1 Go to **Configuration > Network > Basic Settings > Port**.

TCP/IP	Port	Multicast
HTTP Port	<input type="text" value="80"/>	
RTSP Port	<input type="text" value="554"/>	
HTTPS Port	<input type="text" value="443"/>	
Server Port	<input type="text" value="8000"/>	




Figure 5-2 Port Settings

Step 2 Set the ports of the camera.

HTTP Port: The default port number is 80, and it can be changed to any port No. which is not occupied.

RTSP Port: The default port number is 554 and it can be changed to any port No. ranges from 1 to 65535.

HTTPS Port: The default port number is 443, and it can be changed to any port No. which is not occupied.

Server Port: The default server port number is 8000, and it can be changed to any port No. ranges from 2000 to 65535.

Step 3 Click **Save** to save the settings.

 **Note**

- A reboot is required for the settings to take effect.

5.1.3 Multicast

The Multicast sends a stream to the multicast group address and allows multiple clients to acquire the stream at the same time by requesting a copy from the multicast group address. Before utilizing this function, you have to enable the Multicast function of your router.

Step 1 Go to **Configuration > Network > Basic Settings > Multicast**.

Step 2 Configure the parameters for Multicast.

- IP Address: The IP address of the multicast host.
-

Note

- The range for multicast IP address is 224.0.0.19~239.255.255.255
 - Stream Type
Choose the type of stream according to your needs.
 - Video Port and Audio Port
For video and audio transmission.
-

Note

- For some models, the **Third Stream** is not enabled by default. Go to **System > Maintenance > System Service > Software** to enable the function is required.
 - The main stream is usually for recording and live view with good bandwidth, and the sub-stream can be used for live view when the bandwidth is limited.
 - You can customize the following parameters for the selected stream type.
-

Step 3 Click **Save**.

5.2 Advanced Settings

Purpose:

You can configure the parameters, including, HTTPS, integration protocol, network service and https listening etc., by following the instructions in this section.

5.2.1 HTTPS

Purpose:

HTTPS provides authentication of the web site and its associated web server, which protects against Man-in-the-middle attacks.

Note

- If HTTPS is enabled by default, the camera creates an unsigned certificate automatically. When you visit the camera via HTTPS, the web browser will send a

notification about the certificate issue. Install a signed-certificate to the camera to cancel the notification.

Step 1 G to **Configuration > Network > Advanced Settings > HTTPS**.

Step 2 Check Enable to access the camera via HTTP or HTTPS protocol.

Step 3 Check Enable HTTPS Browsing to access the camera only via HTTPS protocol.

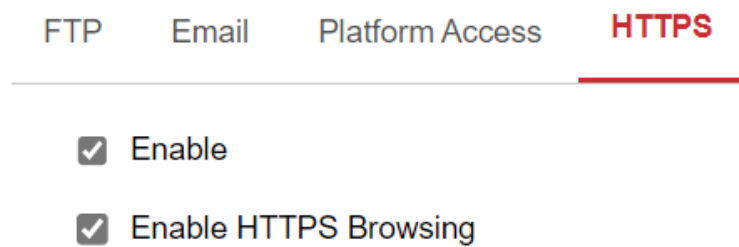


Figure 5-3 HTTPS Configuration Interface

There will be the certificate information after your successfully creating and installing the certificate.

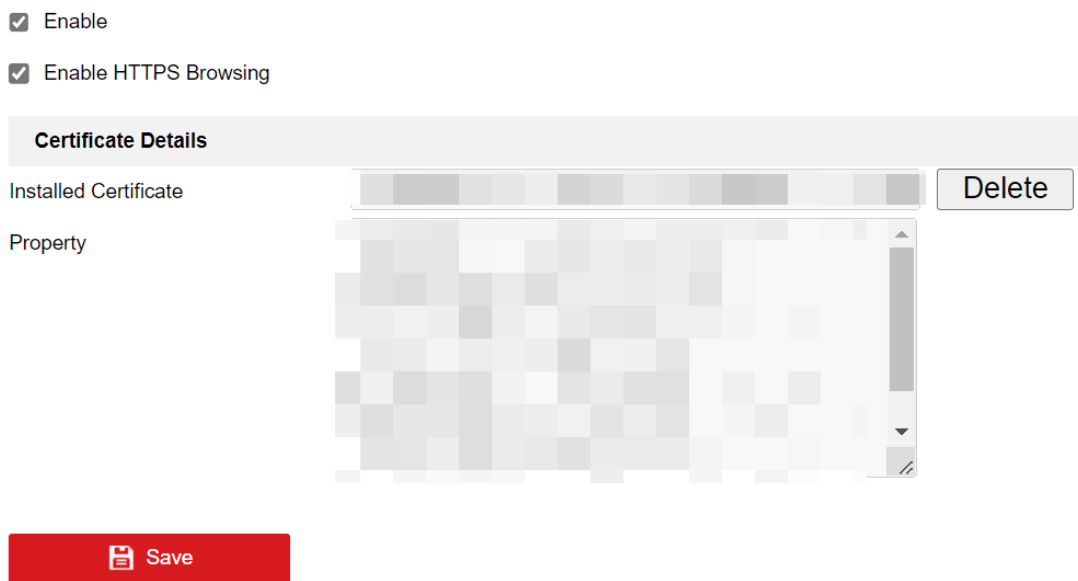


Figure 5-4 Installed Certificate

Step 4 Click **Save** to save the settings.

5.2.2 Integration Protocol

Purpose:

If you need to access to the camera through the third party platform, you can enable CGI function. And if you need to access to the device through ONVIF protocol, you can configure ONVIF user in this interface. Refer to ONVIF standard for detailed configuration rules.

ONVIF

Step 1 Check the Enable ONVIF checkbox to enable the function.

Step 2 Add ONVIF users. Up to 32 users are allowed.

Step 3 Set the user name and password, and confirm the password. You can set the user as media user, operator, and administrator.

Note

- ONVIF user account is different from the camera user account. You have set ONVIF user account independently.

Step 4 Click **Save** to save the settings.

Note

- User settings of ONVIF are cleared when you restore the camera.
-

5.2.3 Network Service

You can control the ON/OFF status of certain protocol that the camera supports.

Note

- Keep unused function OFF for security concern.
- Supported functions vary according to camera models.
- SDK Service and Enhanced SDK Service

If you want to add the device to the client software, you should enable SDK Service or Enhanced SDK Service.

- **SDK Service:** SDK protocol is used.
- **Enhanced SDK Service:** SDK over TLS protocol is used. Communication between the device and the client software is secured by using TLS (Transport Layer Security) protocol.
- TLS (Transport Layer Security)

The device offers TLS 1.1 and TLS 1.2. Enable one or more protocol versions according to your need.

Chapter 6 Video and Audio Settings

Purpose:

Follow the instructions below to configure the video setting, audio settings, ROI, Display info. on Stream, etc.

For certain camera models, you can configure parameters for available video streams, for example, the main stream, the sub-stream, etc. And you can also customize additional video streams for further needs.

6.1 Video Settings

Step 1 Go to **Configuration > Video/Audio > Video**

Video	Audio
Stream Type	Main Stream(Normal) ▾
Video Type	Video&Audio ▾
Resolution	1280*720P ▾
Bitrate Type	Constant ▾
Video Quality	Medium ▾
Frame Rate	30 ▾ fps
Max. Bitrate	4096 Kbps
Video Encoding	H.264 ▾
H.264+	OFF ▾
Profile	Main Profile ▾
I Frame Interval	30
SVC	OFF ▾
Smoothing	<input type="range" value="50"/> 50 [Clear<->Smooth]


 Save

Figure 6-1 Video Settings

Step 2 Select the Stream Type.

Supported stream types are listed in the drop-down list.

Note

- The main stream is usually for recording and live view with good bandwidth, and the sub-stream can be used for live view when the bandwidth is limited.
- You can customize the following parameters for the selected stream type.

● Video Type:

Select the stream type to video stream, or video & audio composite stream. The audio signal will be recorded only when the **Video Type** is **Video & Audio**.

● Resolution:

Select the resolution of the video output.

● Bitrate Type:

Select the bitrate type to constant or variable.

● Video Quality:

When bitrate type is selected as Constant, the video quality will be set as Medium.

When bitrate type is selected as Variable, 6 levels of video quality are selectable.

● Frame Rate:

Set the frame rate. The frame rate is to describe the frequency at which the video stream is updated and it is measured by frames per second (fps). A higher frame rate is advantageous when there is movement in the video stream, as it maintains image quality throughout.

● Max. Bitrate:

Set the max. bitrate from 32 to 16384 Kbps. The higher value corresponds to the higher video quality, which requires the better bandwidth.

Note

- The maximum limit of the max. bitrate value varies according to different camera platforms. For certain cameras, the maximum limit is 8192 Kbps or 12288 Kbps.

● Video Encoding:

The camera supports video encodings types such as H.264, and H.265. Supported encoding type for different stream types may differ. H.265 is a new encoding technology. Compared with H.264, it reduces the transmission bitrate under the same resolution, frame rate and image quality.

 **Note**

- Selectable video encoding types may vary according to different camera modes.
-

- H.264+ and H.265+:

- H.264+: If you set the main stream as the stream type, and H.264 as the video encoding, you can see H.264+ available. H.264+ is an improved compression coding technology based on H.264. By enabling H.264+, users can estimate the HDD consumption by its maximum average bitrate. Compared to H.264, H.264+ reduces storage by up to 50% with the same maximum bitrate in most scenes.

- H.265+: If you set the main stream as the stream type, and H.265 as the video encoding, you can see H.265+ available. H.265+ is an improved compression coding technology based on H.265. By enabling H.265+, users can estimate the HDD consumption by its maximum average bitrate. Compared to H.265, H.265+ reduces storage by up to 50% with the same maximum bitrate in most scenes.

You need to reboot the camera if you want to turn on or turn off the H.264+/H.265+. If you switch from H.264+ to H.265+ directly, and vice versa, a reboot is not required by the system.

 **Note**

- Upgrade your video player to the latest version if live view or playback does not work properly due to compatibility.
 - With H.264+/H.265+ enabled, the parameters such as profile, I frame interval, video quality, and SVC are greyed out.
 - With H.264+/H.265+ enabled, some functions are not supported. For those functions, corresponding interfaces will be hidden.
 - H.264+/H.265+ can spontaneously adjust the bitrate distribution according the requirements of the actual scene in order to realize the set maximum average bitrate in the long term. The camera needs at least 24 hours to adapt to a fixed monitoring scene.
-

- Max. Average Bitrate:

When you set a maximum bitrate, its corresponding recommended maximum average bitrate will be shown in the Max. Average Bitrate box. You can also set the maximum average bitrate manually from 32 Kbps to the value of the set maximum bitrate.

- Profile:

When you select H.264 or H.265 as video encoding, you can set the profile. Selectable profiles vary according to camera models.

- I Frame Interval:

Set I Frame Interval from 1 to 400.

- SVC:

Scalable Video Coding is an extension of the H.264/AVC and H.265 standard. Select OFF/ON to disable/enable the SVC function. Select Auto and the device will automatically extract frames from the original video when the network bandwidth is insufficient.

- Smoothing:

It refers to the smoothness of the stream. The higher value of the smoothing is, the better fluency of the stream will be, though, the video quality may not be so satisfactory. The lower value of the smoothing is, the higher quality of the stream will be, though it may appear not fluent.

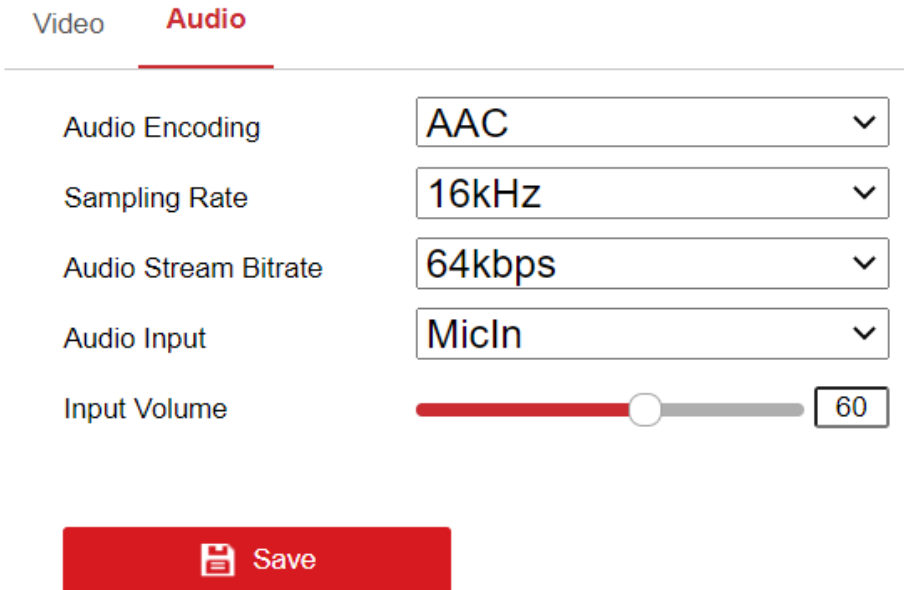
Step 3 Click **Save** to save the settings.

 **Note**

- The video parameters vary according to different camera models. Refer to the actual display page for camera functions.
-

6.2 Audio

Step 1 Go to **Configuration > Video/Audio > Audio**.



The screenshot shows the 'Audio' settings page. At the top, there are two tabs: 'Video' and 'Audio', with 'Audio' being the active tab. Below the tabs, there are five settings, each with a dropdown menu or a slider:

- Audio Encoding:** AAC
- Sampling Rate:** 16kHz
- Audio Stream Bitrate:** 64kbps
- Audio Input:** MicIn
- Input Volume:** A slider set to 60

At the bottom of the settings area, there is a red button with a floppy disk icon and the text 'Save'.

Figure 6-2 Audio Settings

Step 2 Configure the following settings.

 **Note**

- Audio settings may vary according to different camera models.
-

Audio Encoding: G.722.1, G.711 ulaw, G.711 alaw, G.726_A and PCM are selectable. For PCM, the Sampling Rate can be set.

Audio Input: MicIn is selectable for the connected microphone.

Sampling Rate: Only 16 kHz is supported.

Input Volume: 0-100 adjustable.

Environmental Noise Filter: Set it as OFF or ON. When the function is enabled, the noise in the environment can be filtered to some extent.

Step 3 Click **Save** to save the settings.

Chapter 7 OSD Settings

Purpose:

Follow the instructions in this chapter to configure the image parameters, including display settings and OSD settings.

Purpose:

You can customize the camera name, time/date format, display mode, and OSD size displayed on the live view.

Step 1 Go to **Configuration > Image > OSD Settings**.

Step 2 Check the corresponding checkbox to select the display of camera name, date or week if required.

Step 3 Edit the camera name in the text field of **Camera Name**.

Step 4 Select from the drop-down list to set the time format and date format.

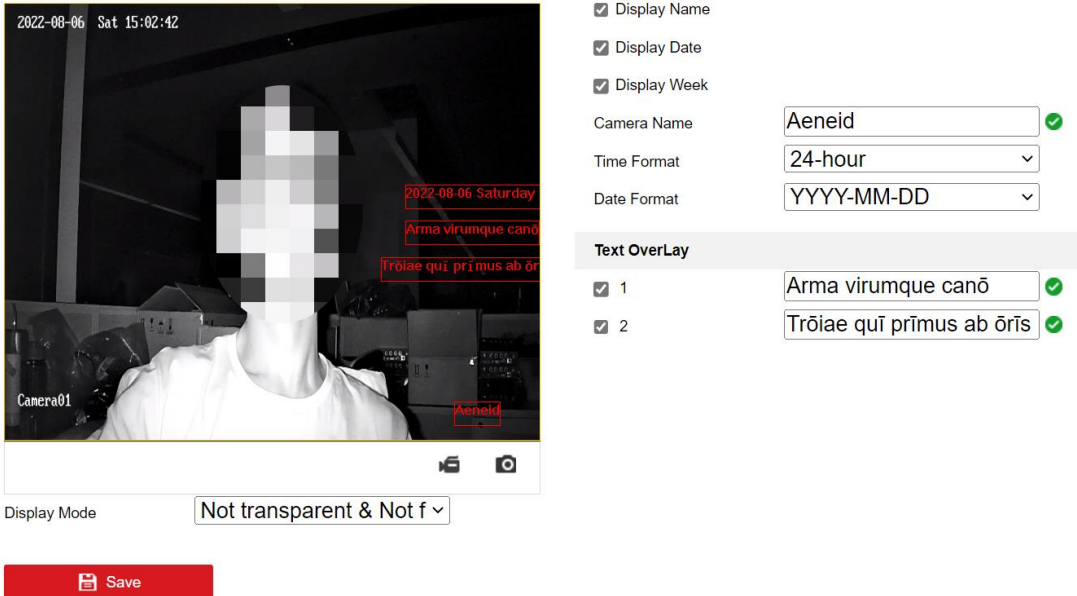
Step 5 Select from the drop-down list to set the time format, date format, and display mode.

Step 6 Configure the text overlay settings.

- 1) Check the checkbox in front of the textbox to enable the on-screen display.
- 2) Input the characters in the textbox.

Note

- Up to 2 text overlays are configurable.



2022-08-06 Sat 15:02:42

Camera01

Aeneid

2022-08-06 Saturday

Arma virumque canō

Trōiae quī prīmus ab ōrīs

Display Mode: Not transparent & Not f

Save

Display Name
 Display Date
 Display Week
 Camera Name: Aeneid
 Time Format: 24-hour
 Date Format: YYYY-MM-DD
Text OverLay
 1: Arma virumque canō
 2: Trōiae quī prīmus ab ōrīs

Figure 7-1 OSD Settings

Step 7 Adjust the position and alignment of text frames.

Use the mouse to click and drag text frames in the live view window to adjust their positions.

 **Note**

- The alignment adjustment is only applicable to Text Overlay items.
-

Step 8 Click **Save** to save the settings and view the result on the **Live View**.



Figure 7-2 4 Lines of Text Overlay: Not Transparent&Not Flashing

Chapter 8 Storage Settings

Before you start:

To configure record settings, make sure that you have the network storage device or local storage device configured.

8.1 Record Schedule

Purpose:

You can configure the scheduled recording. The captured picture can be stored in the local storage.

Step 1 Go to **Configuration > Storage > Schedule Settings > Record Schedule**.



Figure 8-1 Capture Schedule Interface

Step 2 Select the **Record Type**. The camera currently supports only Continuous.

- Continuous

The video will be recorded automatically according to the time of the schedule.

Step 3 Click **Advanced** to set the advanced parameters.

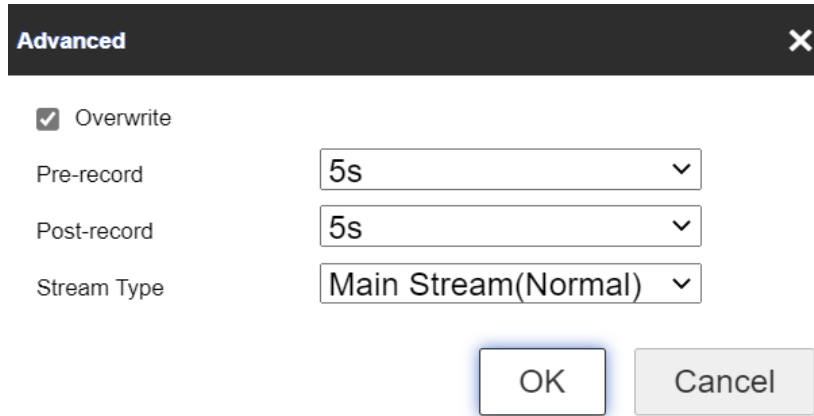


Figure 8-2 Advanced Setting

- Stream Type: Select the stream type for recording.
- Pre- and Post-record: the time that camera records before and after events.
- Stream Type: only supports Main Stream.

Note

- The record parameter configurations vary depending on the camera model.

Step 4 Click-and-drag the mouse on the time bar to set the record schedule.

Step 5 (optional) To duplicate the setting of one day to another, click that appears when the mouse hover over the time bar, and choose the date to apply the same setting. Check **Select All** if the setting is to be applied to all dates.

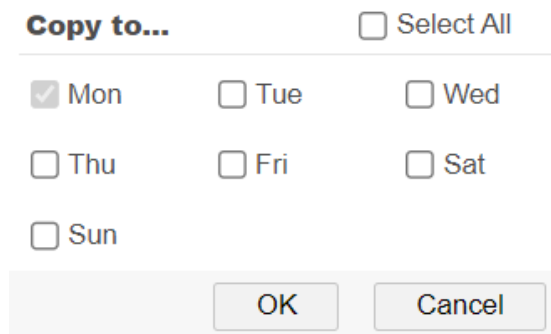


Figure 8-3 Copy Setting to Another Date

Step 6 Delete the setting of one day by selecting that date and click **Delete**. You can also click **Delete All** to remove all settings.

Step 7 Click **Save** to save the settings.

8.2 Capture Schedule and Capture Parameters

The setting of **Capture Schedule** is the same as the **Record Schedule**. The format, resolution, quality and interval of capture can be set on **Capture Parameters**.

Step 1 Go to **Capture Parameters** tab to configure the capture parameters.

- 1) Check the **Enable Timing Snapshot** checkbox to enable continuous snapshot.
- 2) Select the picture format, resolution, quality and capture interval.

Capture

Capture Schedule
Capture Parameters

Timing

Enable Timing Snapshot

Format:

Resolution:

Quality:

Interval:

Save

Figure 8-4 Set Capture Parameters

Step 2 Click **Save** to save the settings.

8.3 Storage Management

Steps:

Step 1 Go to **Configuration > Storage > Storage Management > HDD Management**, in which you can view the capacity, free space, status, type and property of the disk.

HDD Management

HDD Management									Format
<input type="checkbox"/>	HDD No.	Capacity	Free space	Status	Type	Formatting Type	Property	Progress	
<input type="checkbox"/>	1	6.28GB	1.02GB	Normal	Local	FAT32	R/W		

Figure 8-5 Storage Management Interface

Step 2 If the status of the disk is **Uninitialized**, check the corresponding checkbox to select the disk and click **Format** to start initializing the disk.

Step 3 When the initialization completed, the status of disk will become **Normal**.

8.4 Advanced Settings

Currently, the advanced settings only support the setting of whether to print logs.

Step 1 Go to **Configuration > Storage > Storage Management > HDD Management Advanced Settings > Other**.

Step 2 Check **Enable Print Log**.

Chapter 9 Driving Status Monitoring Settings

9.1 Driving Status Monitoring

To monitor driving status of the vehicle, you need to configure the sensitivity, inhibition time and speed threshold.

The setting items of all DSM detection are the same, and in the following, the setting is illustrated with the case of Distraction Prompt Detection.

Step 1 Go to **Configuration > Driving Status Monitoring**.

Step 2 Check **Enable** to enable the Driving Status Monitoring function and check the **Distraction Prompt Detection**.

Step 3 Check Enable **Primary Filter** and **Secondary Filter** to start setting these parameters by clicking and dragging and bar, or putting in a number to set the parameter.

- Sensitivity

Sensitivity refers to the time between the DSM detection and the alarm and it is measured in seconds.

- Inhibition Time

Inhibition time refers to the interval between two alarms.

- Alarm Volume

Alarm Volume refers to how loud the alarm is and the highest degree is 9.

- Speed Threshold

- The speed range for primary filter is 1-100 km/h and the second filter 10-100 km/h. The value of the second filter must be higher than the primary filter.
- The default speed threshold for primary filter is 30 km/h and the second filter is 50 km/h.
- When the vehicle speed is lower than the speed threshold of the primary filter, then no alarm will be triggered.
- When the vehicle speed is between the speed threshold of the primary and secondary filter, then the setting of the primary filter will take effect.
- When the vehicle speed is above the speed threshold of the secondary filter, then the setting of the secondary filter will take effect.

Step 4 Check the **Audible Alarm Enable** to adjust the **Alarm Volume**.

Step 5 Click **Save** to save the settings.

9.2 Advanced Parameters

Step 1 Go to **Configuration > Driving Status Monitoring**.

Step 2 Click **Advanced Parameters** to configure the video threshold of the Distraction Prompt Detection, Fatigue Driving (Closing Eyes) Detection. When the above mentioned behavior is detected to be higher than the configured value, then an alarm will be triggered.

Step 3 **Demo mode**:

The demo mode is for demonstrating the alarm effects and for calibration. On demo mode:

- The DSM detection alarm will be switched on regardless of the speed threshold and will be easier to be triggered as filter configurations are disabled.
- the DSM detection algorithm uses the internal default value, regardless of the external configuration;

Step 4 Click **Default** to restore default parameters.

Step 5 Click **Save** to save the settings.

Chapter 10 Access to the Network Camera

Purpose:

This section explains how to connect the network camera to the WAN with a static IP or a dynamic IP.

10.1.1 Via Static IP Connection

Before you start:

Please apply a static IP from an ISP (Internet Service Provider). With the static IP address, you can connect the network camera via a router or connect it to the WAN directly.

Connecting the network camera via a router

Step 1 Connect the network camera to the router.

Step 2 Assign a LAN IP address, the subnet mask and the gateway. Refer to Section 5.1.1 TCP/IP for detailed IP address configuration of the network camera.

Step 3 Save the static IP in the router.

Step 4 Set port mapping, e.g., 80, 8000, and 554 ports. The steps for port mapping vary according to the different routers. Please call the router manufacturer for assistance with port mapping.

Note

- Refer to Appendix 2 for detailed information about port mapping.
-

Step 5 Visit the network camera through a web browser or the client software over the internet.

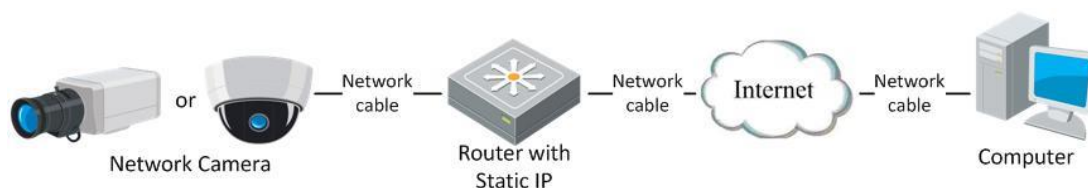


Figure 10-1 Accessing the Camera through Router with Static IP

Connecting the network camera with static IP directly

You can also save the static IP in the camera and directly connect it to the internet without using a router. Refer to Section 5.1.1 TCP/IP for detailed IP address configuration of the network camera.

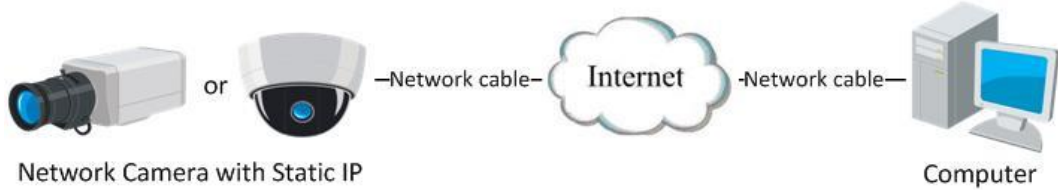


Figure 10-2 Accessing the Camera with Static IP Directly

10.1.2 Via Dynamic IP Connection

Before you start:

Please apply a dynamic IP from an ISP. With the dynamic IP address, you can connect the network camera to a modem or a router.

Connecting the network camera via a router

Step 1 Connect the network camera to the router.

Step 2 In the camera, assign a LAN IP address, the subnet mask and the gateway. Refer to Section 2.1.2 for detailed IP address configuration of the network camera.

Step 3 Set port mapping. E.g. 80, 8000, and 554 ports. The steps for port mapping vary depending on different routers. Please call the router manufacturer for assistance with port mapping.

Note

- Refer to Appendix 2 for detailed information about port mapping.
-

Step 4 Apply a domain name from a domain name provider.

Step 5 Configure the DDNS settings in the setting interface of the router.

Step 6 Visit the camera via the applied domain name.

Step 7 Connecting the network camera via a modem

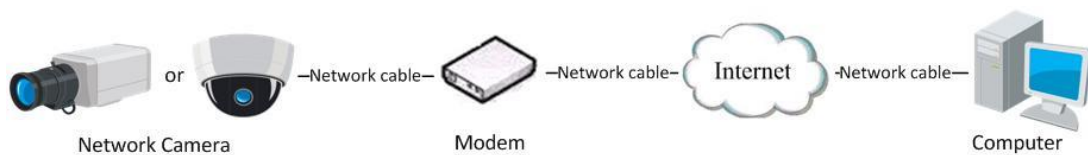


Figure 10-3 Accessing the Camera with Dynamic IP

Chapter 11 Appendix: SADP Software Introduction

● Description of SADP

SADP (Search Active Devices Protocol) is a kind of user-friendly and installation-free online device search tool. It searches the active online devices within your subnet and displays the information of the devices. You can also modify the basic network information of the devices using this software.

● Search active devices online

Step 1 Search online devices automatically

Step 2 After launch the SADP software, it automatically searches the online devices every 15 seconds from the subnet where your computer locates. It displays the total number and information of the searched devices in the Online Devices interface. Device information including the device type, IP address and port number, etc. will be displayed.

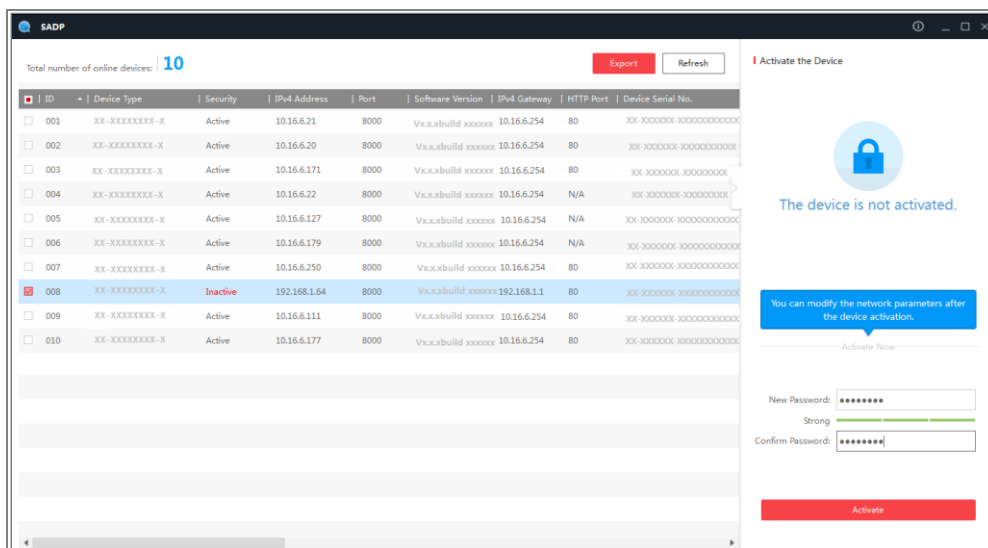
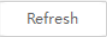







Figure A.1.1 Searching Online Devices

Note

- Device can be searched and displayed in the list in 15 seconds after it went online; it will be removed from the list in 45 seconds after it went offline.

Step 3 Search online devices manually

 
Step 4 You can also click  to refresh the online device list manually. The newly searched devices will be added to the list.

Step 5  You can click  or  on each column heading to order the information; you can click  to expand the device table and hide the network parameter panel on the right side, or click  to show the network parameter panel.

● Modify network parameters

Step 6 Select the device to be modified in the device list and the network parameters of the device will be displayed in the **Modify Network Parameters** panel on the right side.

Step 7 Edit the modifiable network parameters, e.g. IP address and port number.

Step 8 Enter the password of the admin account of the device in the **Admin Password** field and click  to save the changes.



Caution

STRONG PASSWORD RECOMMENDED

- We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.
 - Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
-

Modify Network Parameters

Enable DHCP

Device Serial No.:

IP Address:

Port:

Subnet Mask:

Gateway:

IPv6 Address:

IPv6 Gateway:

IPv6 Prefix Length:

HTTP Port:


Security Verification

Admin Password:

[Modify](#)

[Forgot Password](#)

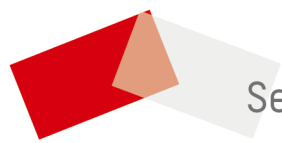Figure A.1.2 Modify Network Parameters



See Far, Go Further