


E-UIPEDIA Series

HIKVISION

INTRODUCING A NEW NVR INTERFACE


NO.1 LIVEVIEW INTERFACE

New interface, new experience

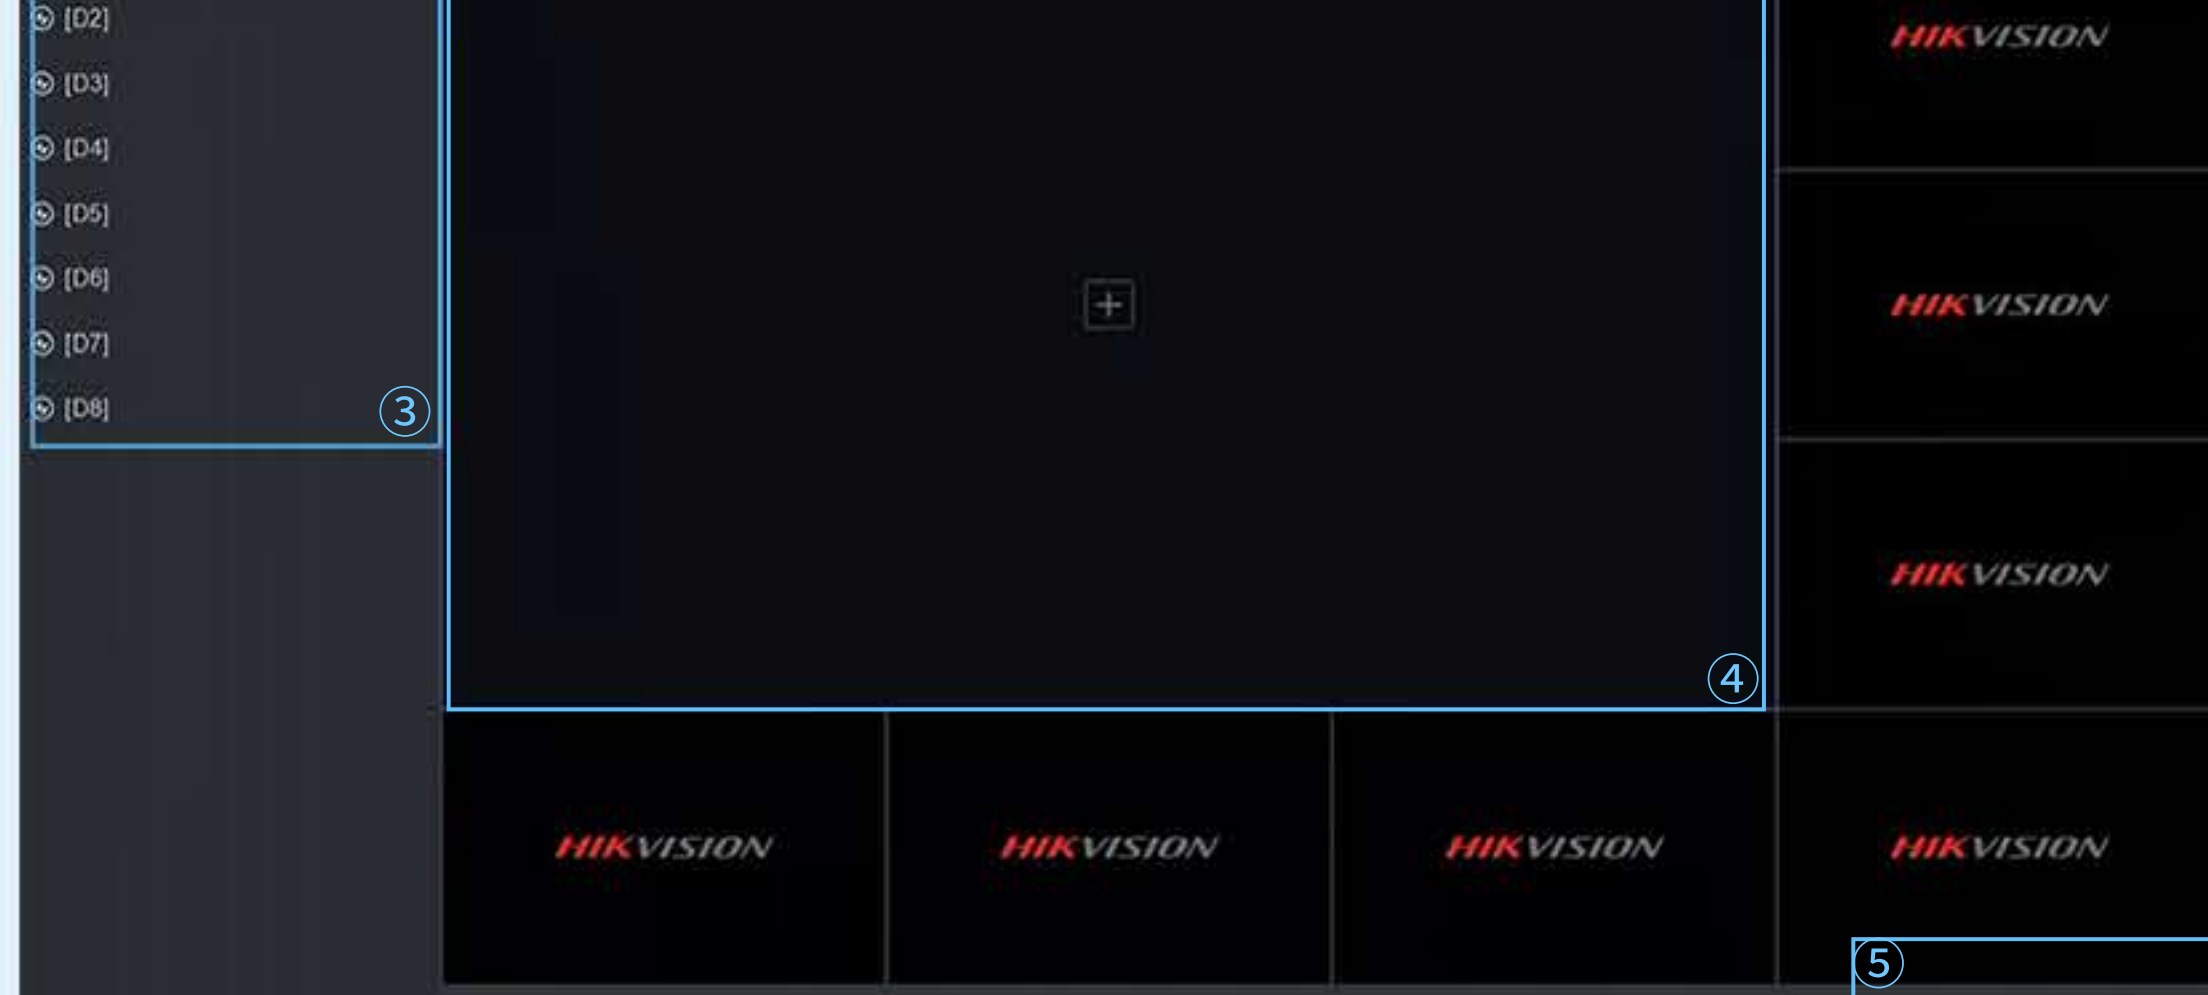


- ① Main functions
- ② System functions
- ③ Channel list
- ④ Live view windows
- ⑤ Live view functions

New interface: main functions

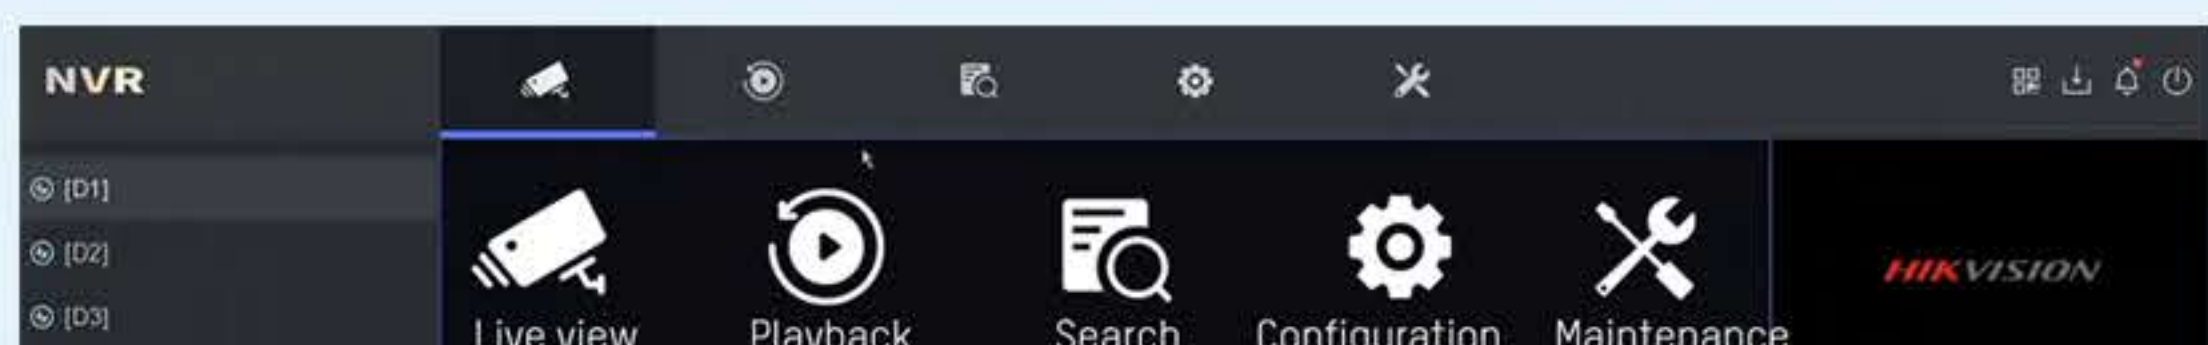


New interface: system functions

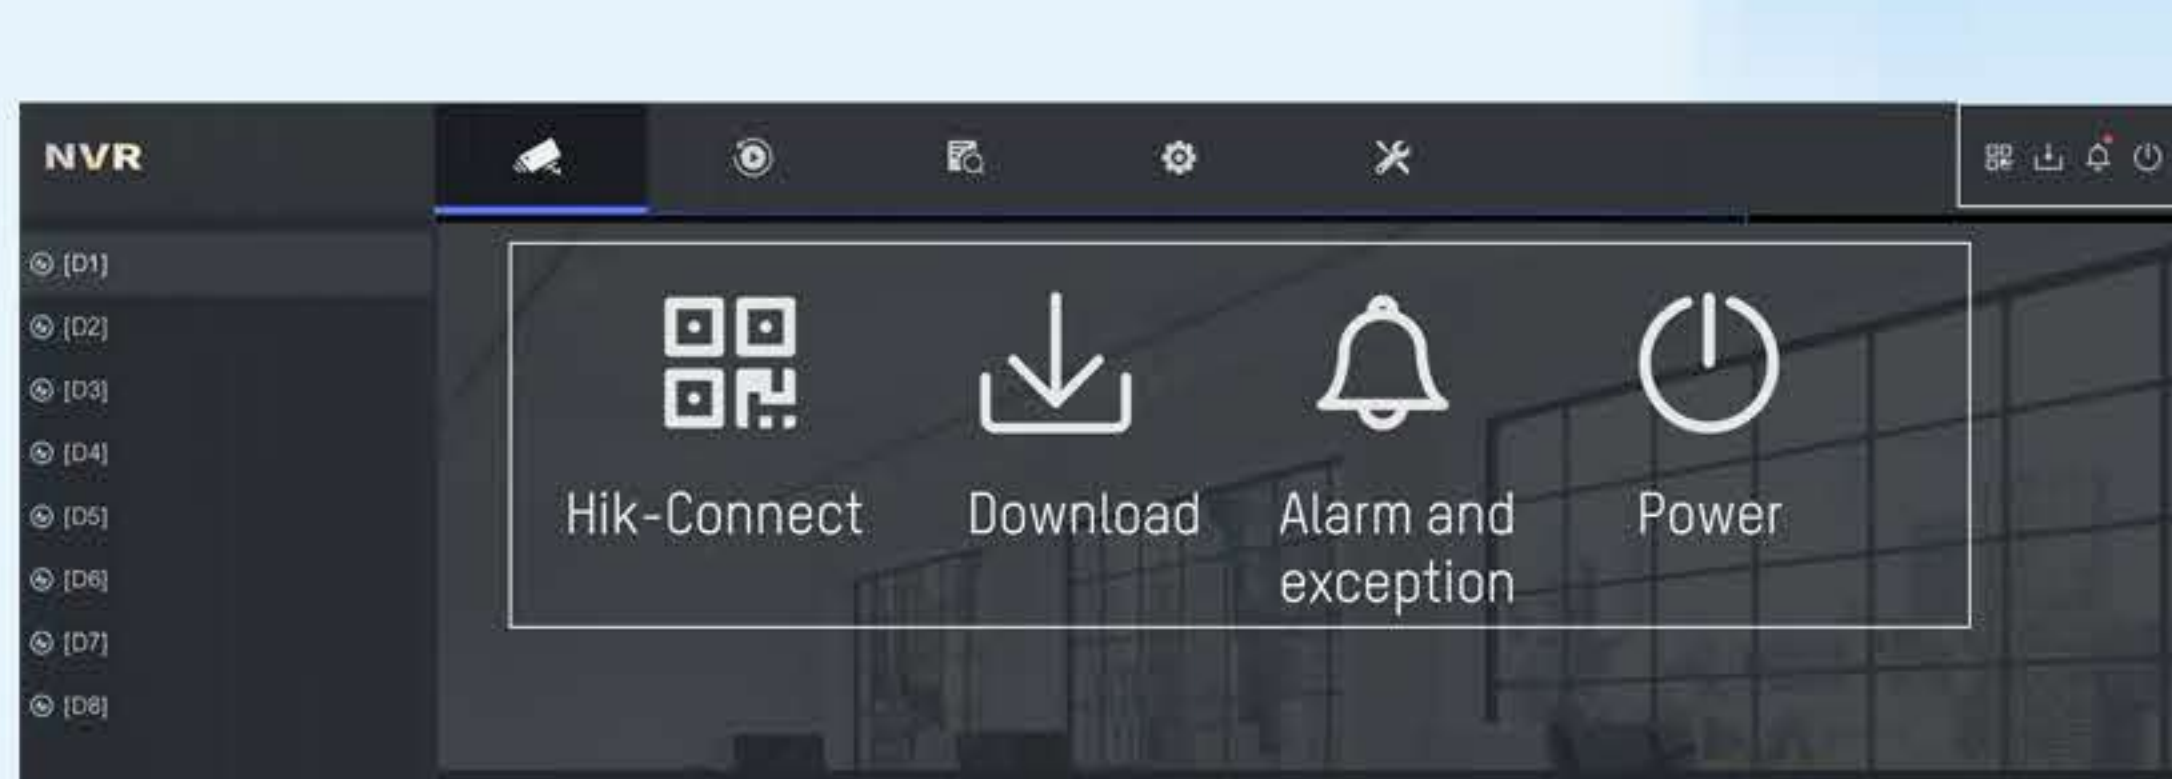


If this NVR hasn't been bonded to the Hik-Connect App, you can set it and bind the NVR to App here.


If this NVR has already been bonded to the Hik-Connect App, you can get the NVR QR code here and apply more functions.

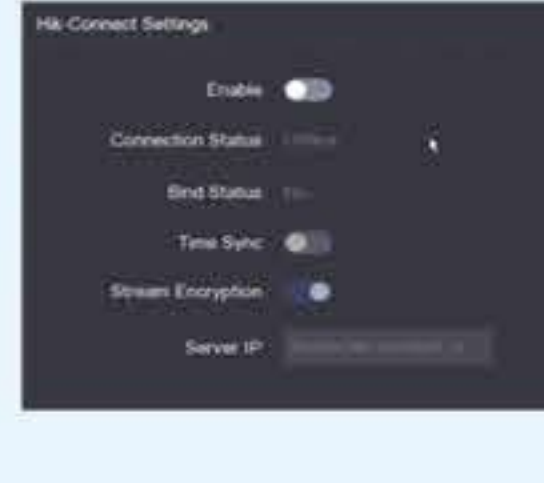

You can check and get the latest firmware here.

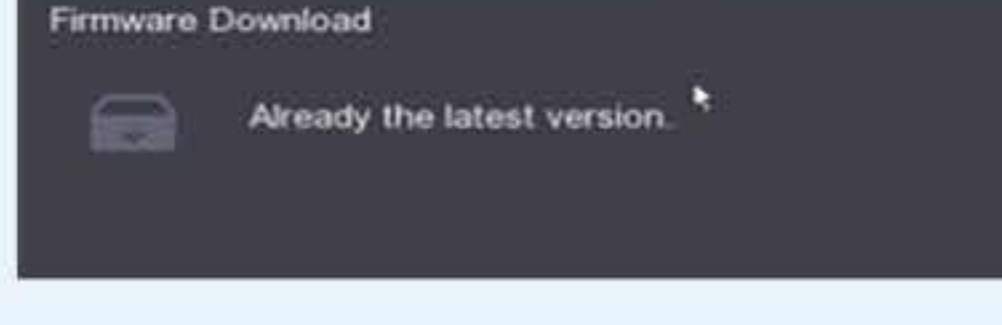


All event alarm and exception notification information is shown here, including time, related videos and alarm types.

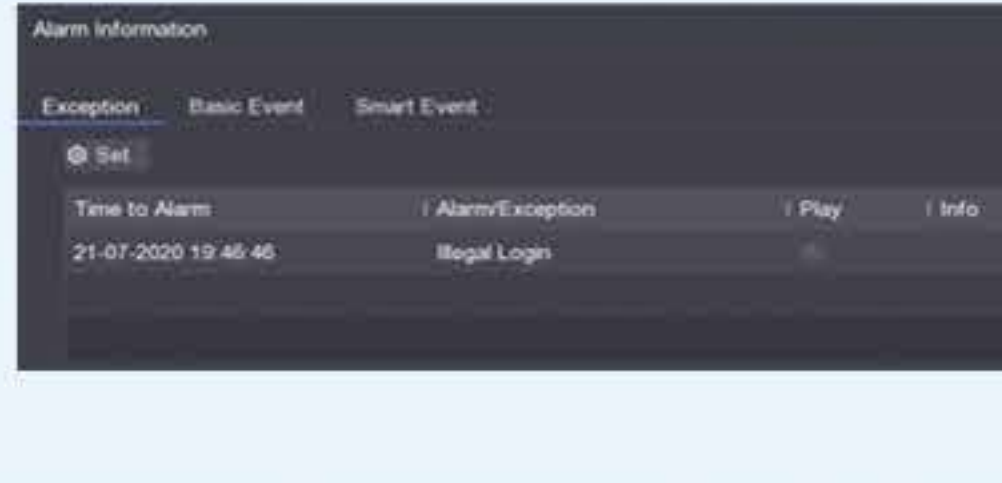

Live view interface

1. Clearer channel list in live view

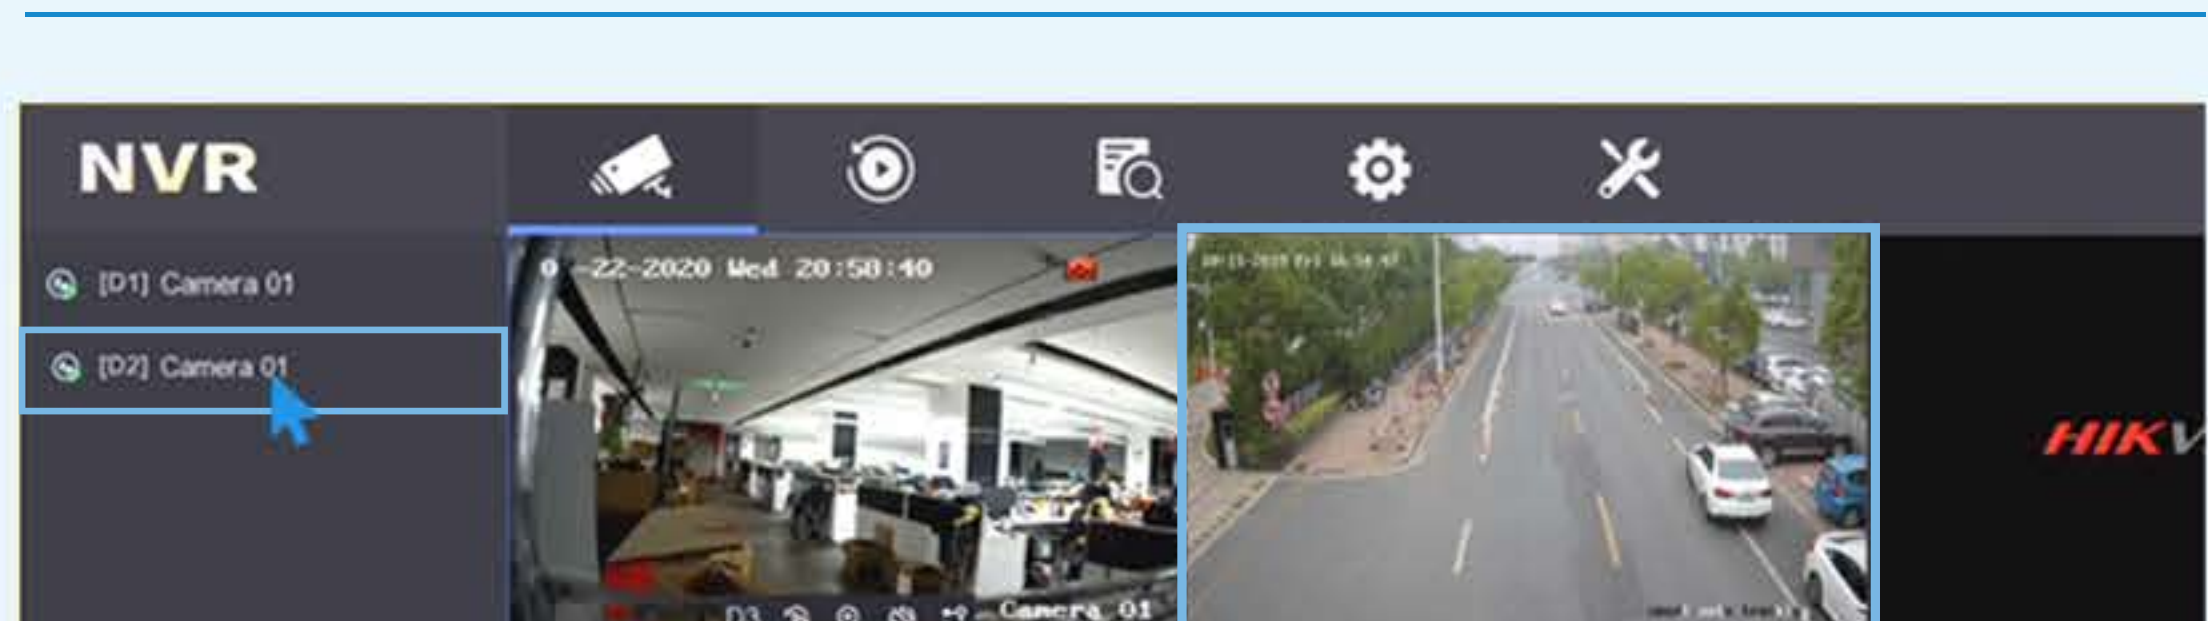


Online cameras are marked with a green icon.

When you click [Camera 01], the live view window on the right interface of this channel will be marked blue. You can spot the live view window quickly.


2. Access most frequently used functions with right click

1. Right click the mouse on the live view interface.


2. Quickly access a list of most frequently used live view functions.

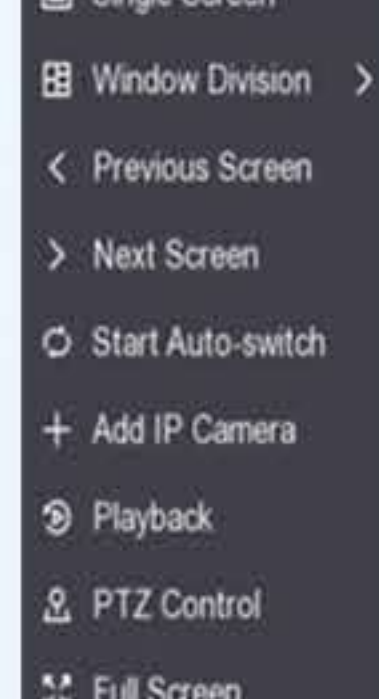

3. Quickly add cameras in live view

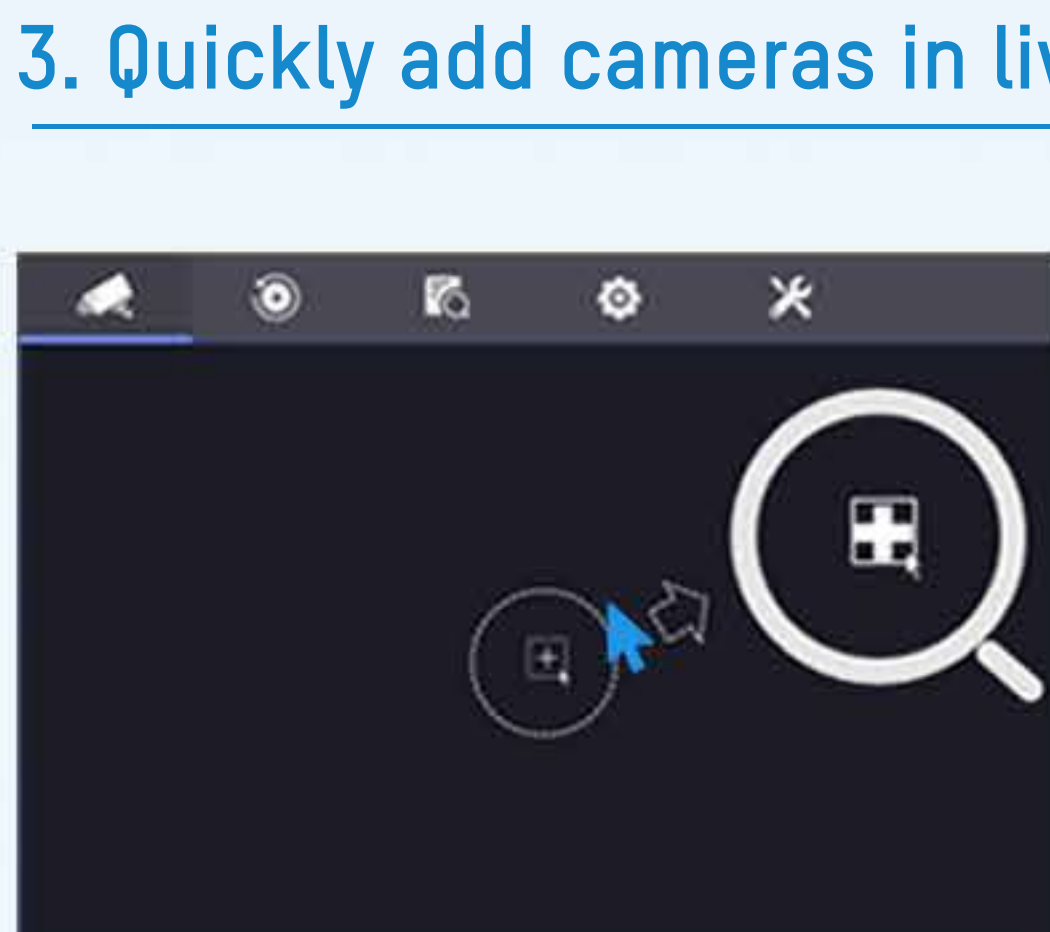

1. Click the "+"

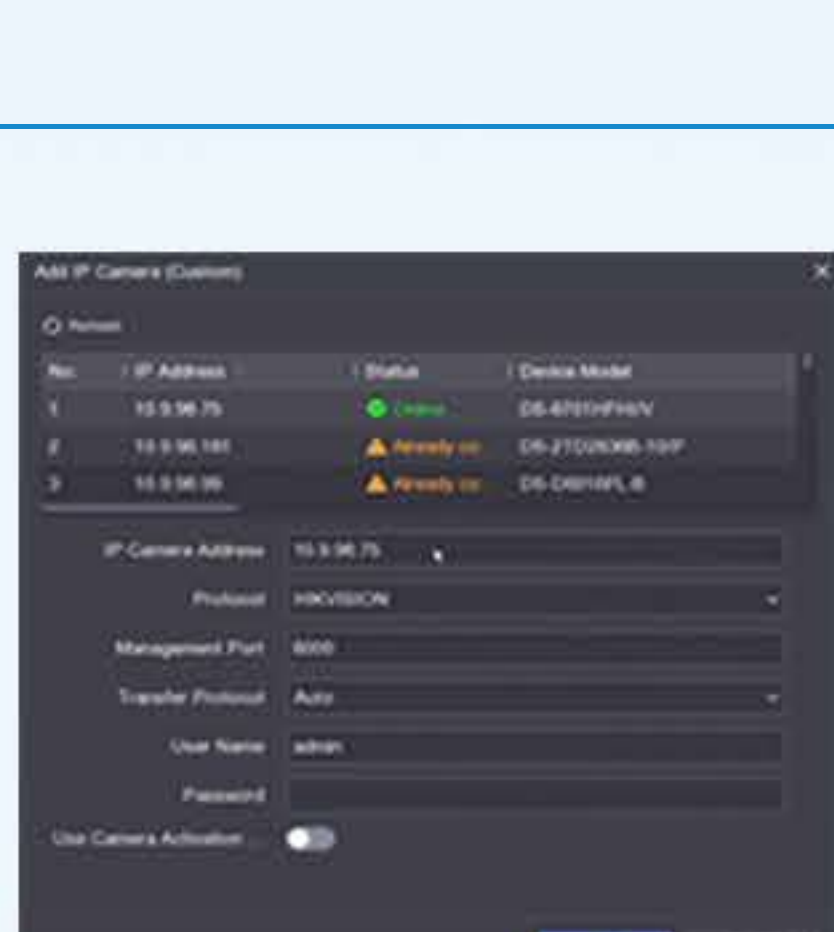

2. You can see all the cameras that can be connected into the NVR.

E-UI operation

2 steps


1. Click the "+"
2. Activate and add

Conventional operation

4 steps

1. Configuration
2. Camera
3. IP Camera
4. Activate and add

4. Quicker access to live view functions

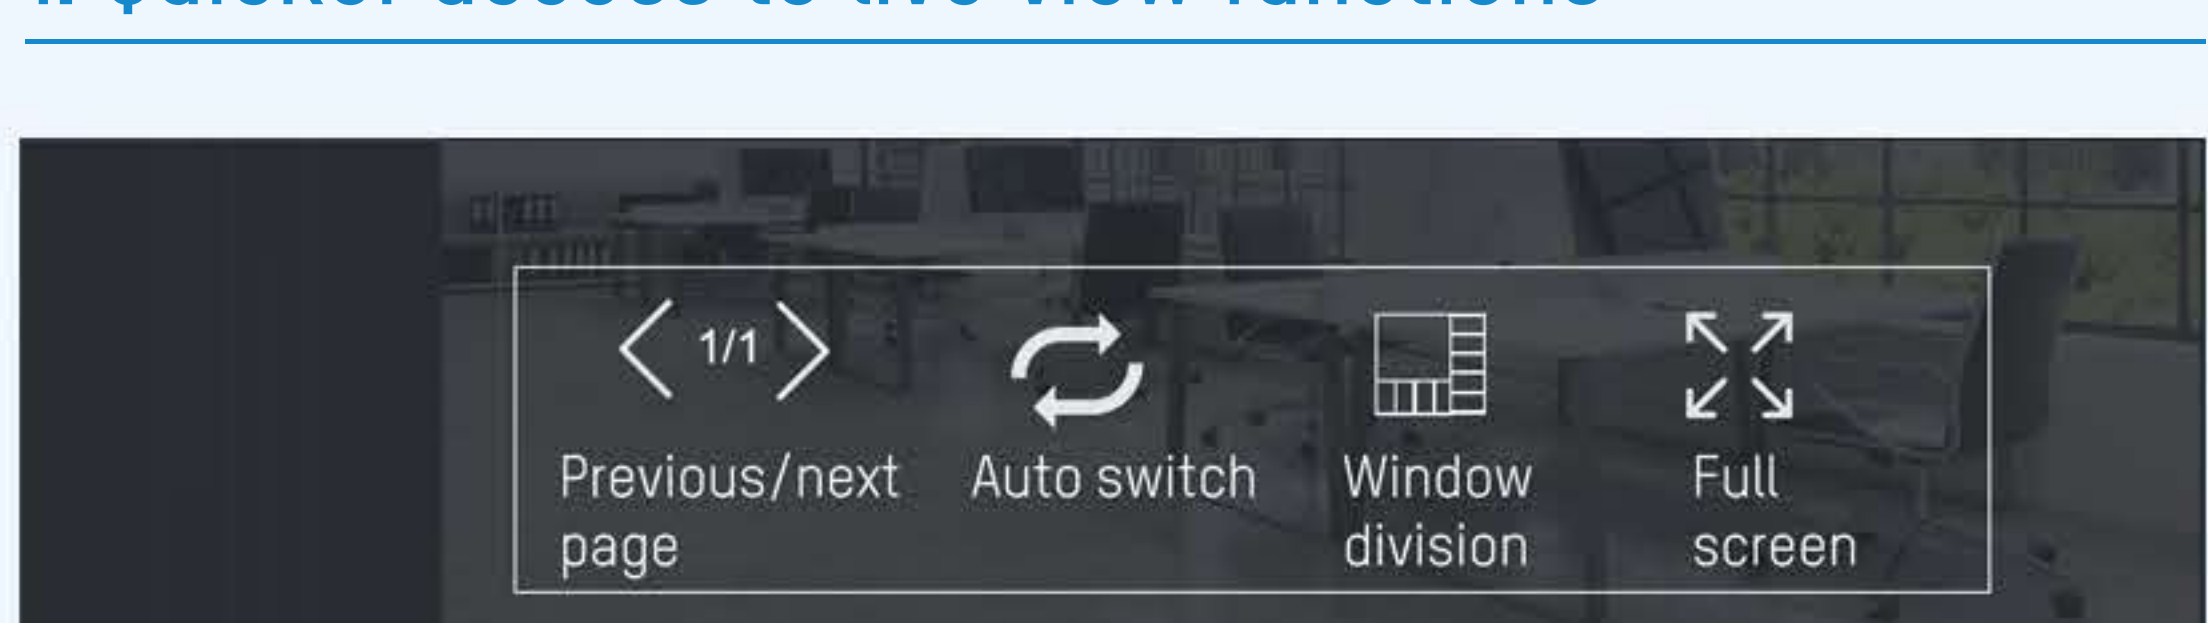

Auto switch will change the live view page automatically within a specified time period.



Multiple window divisions will be offered, like 2*2, 3*3.



Product showcase



DS-7604/08/16NI-K1(B)(/4P/8P)

DS-7608/16NI-K2(/8P/16P)

DS-7716/32NI-K4(/16P)

*Firmware: V 4.30.005



No.2 Playback interface