



# User Manual of Density Control Solution via People Counting Camera Alone

## People Counting Camera Configuration

### 1. Product Model


- i. DS-2CD6825G0/C-I(V)(S)

### 2. Product Firmware

- i. PJ14PC20200402001\_IPCDC\_H7\_EN\_STD\_5.5.90\_200430


### 3. Configuration

- i. Login to the camera web page->Upgrade with the customized firmware. After upgraded, be sure to restore the camera settings.
- ii. Go to VCA->People Counting->Data Uploading, be sure to turn on real-time upload data.

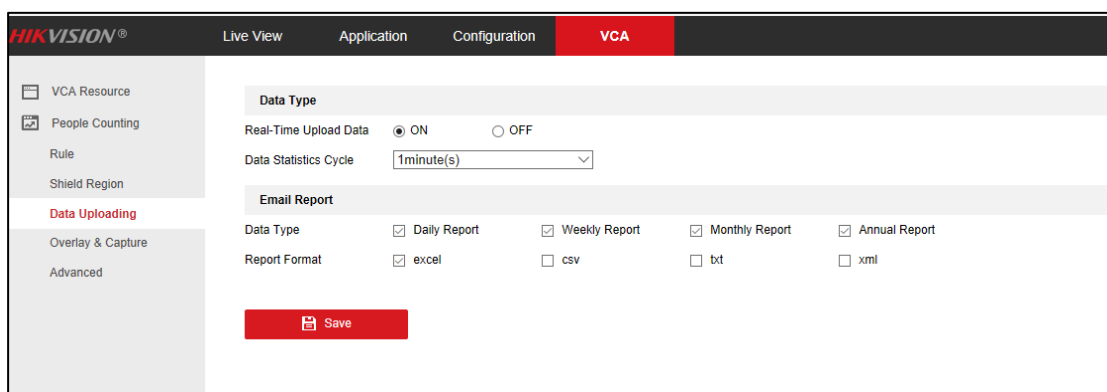

- iii. Click "Rule" tab to enable People Counting and set up counting rule on the image. Refer to the picture below.
- iv. Enable privacy to make the live view image black on the monitor.
- v. Set up people threshold which is the maximum number of people available.

**Note:** When the threshold is reached, the alarm output and audio will be triggered automatically till the number of people stayed is below the threshold.

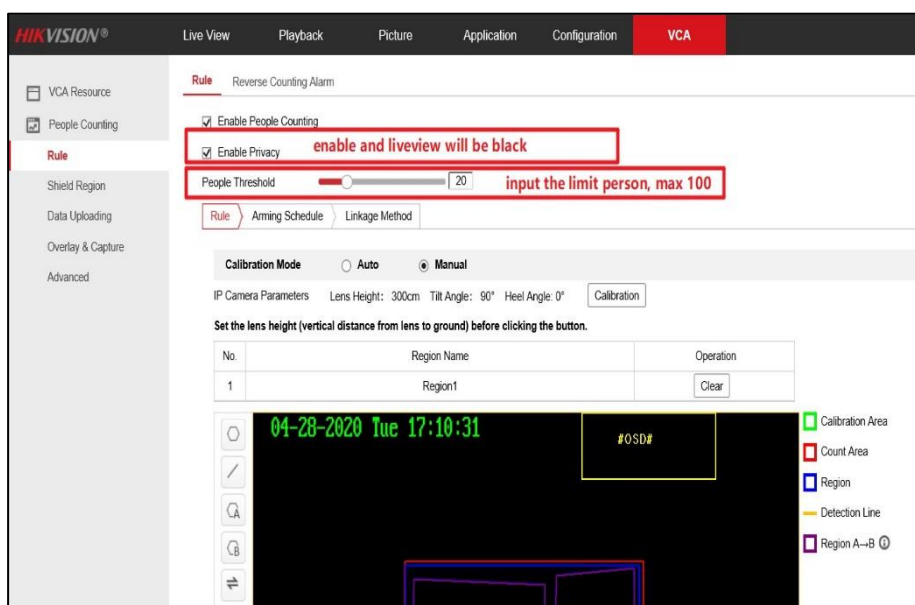


- vi. Go to Configuration->Image->OSD Settings to define the flow control contents on image

- vii. Under Text Overlay filed, input the description to be shown on the monitor. Refer to the picture below.


**Field 1: the content will be displayed when the threshold is not reached**

**Field 2: the content will be displayed when the threshold is reached**

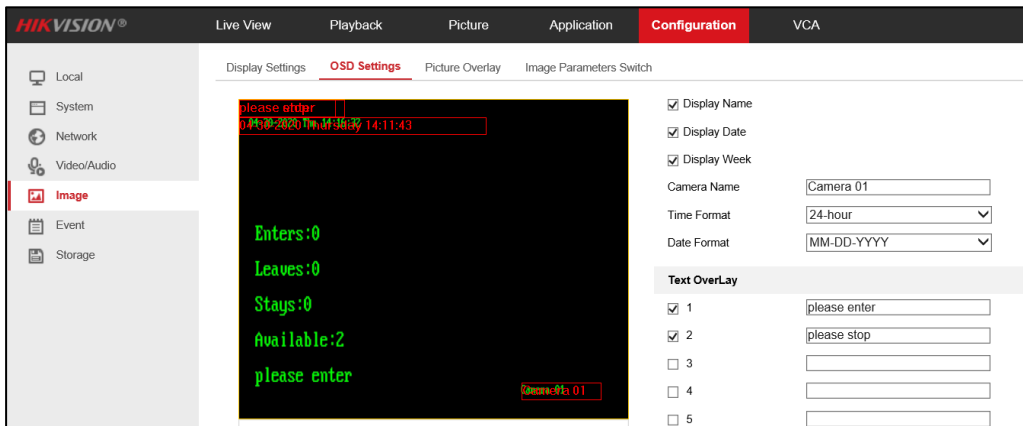

- viii. (Optional) Upload audio file if you don't want to use the default audio content "Please stop entering".

Note: please make sure the audio file meets these standards on the screen.

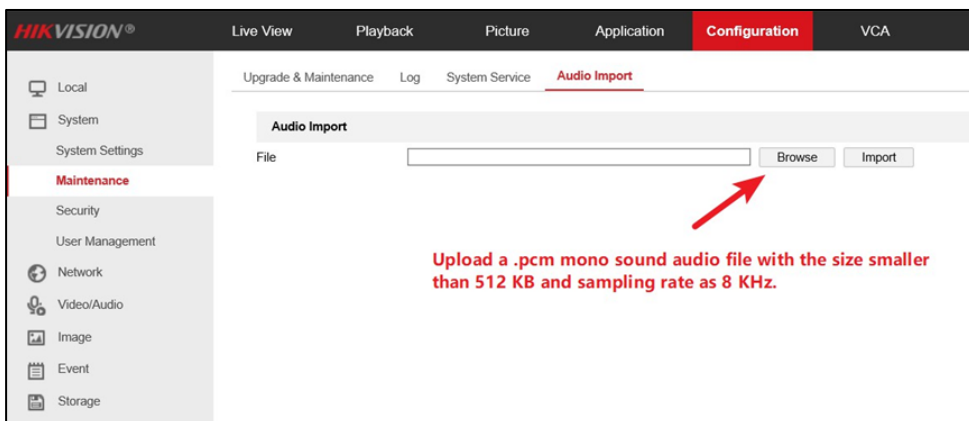



See Far, Go Further