

Title:	Troubleshooting for No Temperature on ISD-SMG318LT-F	Version:	v1.0	Date:	05/08/2020
Product:	Security Inspection	Page:	1 of 4	HIKVISION	

Troubleshooting for No Temperature on ISD-SMG318LT-F

Problem phenomenon

After walk through temperature detector is assembled and powered on, no temperature is displayed on the LCD screen, as the following picture shows.




Step 1 Check if there is temperature on web client

Log in web client of the camera and check if there is temperature displayed. There are a few reasons why there is no temperature on web client. Wrong setting of pupillary distance leads to no face detected. Check the following picture to set pupillary distance and other settings.

Min pupil distance:81

Max pupil distance:349

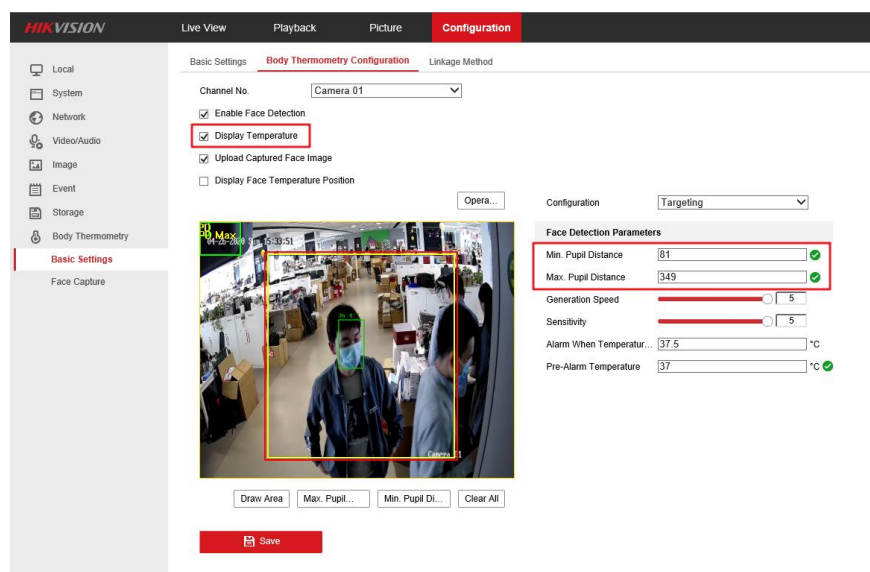

Title:	Troubleshooting for No Temperature on ISD-SMG318LT-F	Version:	v1.0	Date:	05/08/2020
Product:	Security Inspection	Page:	2 of 4		

HIKVISION

Step 2. Check firmware version of camera


If there is temperature on web client but no temperature on LCD screen, we need to check if firmware version of camera is correct. Camera on temperature detector needs special firmware to output 485 signal to screen. If firmware is not correct, upgrade it to correct version, **restore and reboot**.

Firmware of camera:

http://www.hikvisioneurope.com/uk/portal/?dir=portal/Product%20Firmware/00%20Temperature%20Screening/Metal%20Detector%20Door/V5.5.26_build200508

Note:

When camera uses this special firmware, model name of the camera is NP-SGXXXLT-F not DS-2TD1217B-3/PA.

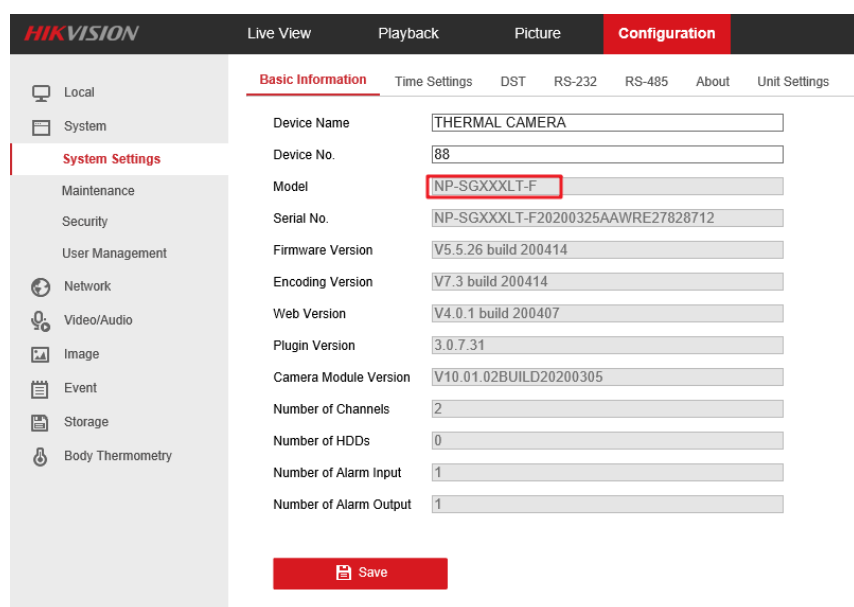


The screenshot shows the Hikvision web interface with the 'Configuration' tab selected. Under 'Basic Information', the following fields are visible:

- Device Name: THERMAL CAMERA
- Device No.: 88
- Model: NP-SGXXXLT-F (highlighted with a red box)
- Serial No.: NP-SGXXXLT-F20200325AAWRE27828712
- Firmware Version: V5.5.26 build 200414
- Encoding Version: V7.3 build 200414
- Web Version: V4.0.1 build 200407
- Plugin Version: 3.0.7.31
- Camera Module Version: V10.01.02BUILD20200305
- Number of Channels: 2
- Number of HDDs: 0
- Number of Alarm Input: 1
- Number of Alarm Output: 1

A red 'Save' button is located at the bottom of the configuration page.

Step 3. Check RS485 setting of camera

RS485 needs to be configured like the following picture, both channel 1 and channel 2 need to be configured, and the Parity should be **None**

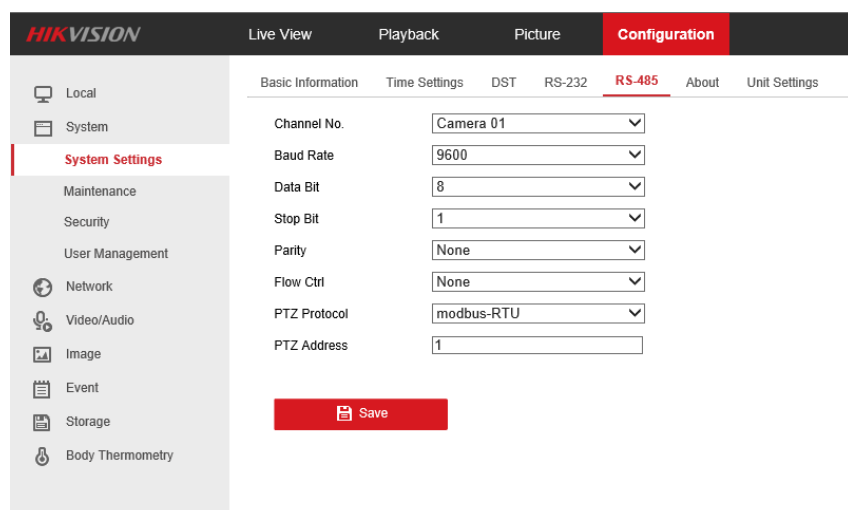

The screenshot shows the Hikvision web interface with the 'Configuration' tab selected. Under 'RS-485', the following fields are visible:


- Channel No.: Camera 01
- Baud Rate: 9600
- Data Bit: 8
- Stop Bit: 1
- Parity: None
- Flow Ctrl: None
- PTZ Protocol: modbus-RTU
- PTZ Address: 1

A red 'Save' button is located at the bottom of the configuration page.

Title:	Troubleshooting for No Temperature on ISD-SMG318LT-F	Version:	v1.0	Date:	05/08/2020
Product:	Security Inspection	Page:	3 of 4	HIKVISION	

Step 4. Check wiring

If all the settings of camera are correct but there is still no temperature displayed, it could be the wiring issue. Check if RS485 cable is connected well with camera or disassemble LCD screen to check if RS485 cable is wired tight. If connected tight, reversely connect it. If not, rewire it.

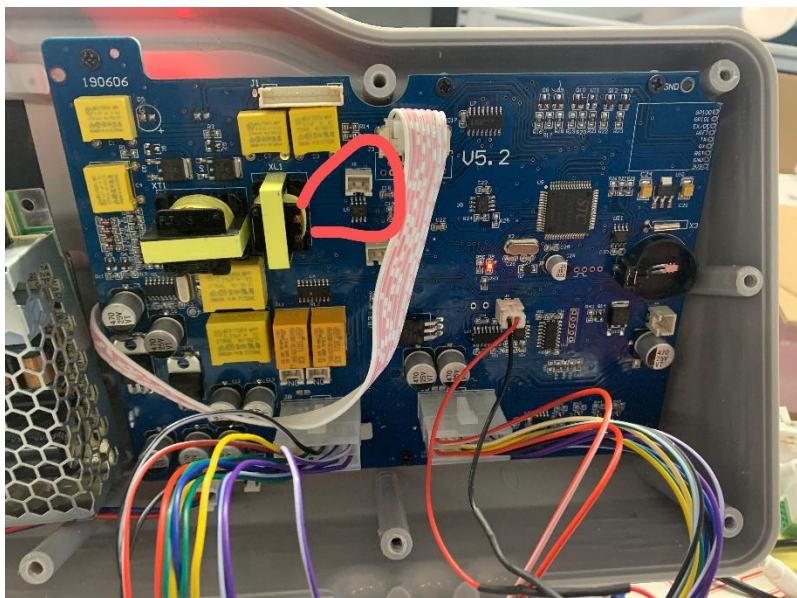

If all above steps have been operated and the problem still exists, please contact Hikvision technical support team.

Title:	Troubleshooting for No Temperature on ISD-SMG318LT-F	Version:	v1.0	Date:	05/08/2020
Product:	Security Inspection	Page:	4 of 4	HIKVISION	

See Far Go Further

HIKVISION

Technical Support