

Thermal & Optical Bi-spectrum Network Camera

User Manual

Legal Information


© Hangzhou Microimage Software Co., Ltd. All rights reserved.

About this Manual

The Manual includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the HIKMICRO website (http://www.hikmicrotech.com).

Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

Trademarks

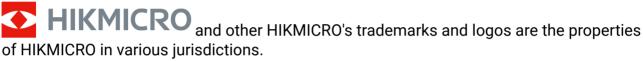

Other trademarks and logos mentioned are the properties of their respective owners.

Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS MANUAL AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKMICRO MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKMICRO BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKMICRO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKMICRO SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKMICRO WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED. YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING

WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATTER PREVAILS.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description	
<u> </u>	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.	
A Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.	
Note	Provides additional information to emphasize or supplement important points of the main text.	

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

Laws and Regulations

• In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.

Transportation

- Keep the device in original or similar packaging while transporting it.
- Keep all wrappers after unpacking them for future use. In case of any failure occurred, you need to return the device to the factory with the original wrapper. Transportation without the original wrapper may result in damage on the device and the company shall not take any responsibilities.
- DO NOT drop the product or subject it to physical shock. Keep the device away from magnetic interference.

Power Supply

- Check the input voltage before powering on the device to avoid damage.
- CAUTION: If the fuse of the device can be replaced, replace it only with the same model to reduce the risk of fire or electric shock.
- If a fuse is connected to the neutral wire and a double pole/neutral fusing occurs, parts
 of the device that remain energized might represent a hazard during servicing after
 operation of the fuse.
- If the device uses a 3-prong power supply plug, it must be connected to an earthed mains socket-outlet properly.
- Do not touch the bare components (such as the metal contacts of the inlets) and wait for at least 5 minutes, since electricity may still exist after the device is powered off.
- For the permanently connected device without a disconnect equipment, a readily
 accessible disconnect equipment shall be incorporated into the electrical installation of
 the connected building.
- For the permanently connected device without an overcurrent protection equipment, an
 overcurrent protection equipment shall be incorporated into the electrical installation of
 the connected building. The specifications of the overcurrent protection equipment shall
 not exceed that of the building.
- For the permanently connected device without an all-pole mains switch, an all-pole mains switch shall be incorporated into the electrical installation of the connected building.
- If the device is powered by terminals connected to the power cord, ensure correct voltage and wiring of the terminals for connection to mains supply.

- Please purchase the charger by yourself. Input voltage should meet the Limited Power Source (12 VDC, 24 VAC, or PoE(802.3af)) according to the IEC62368 standard. Please refer to technical specifications for detailed information.
- Make sure the plug is properly connected to the power socket.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- DO NOT connect multiple devices to one power adapter, to avoid over-heating or fire hazards caused by overload.
- DO NOT touch the bare metal contacts of the inlets after the circuit breaker is turned off. Electricity still exists.
- + identifies the positive terminal(s) of equipment which is used with, or generates direct current. - identifies the negative terminal(s) of equipment which is used with, or generates direct current.

Battery

- Risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- The built-in battery cannot be dismantled. Please contact the manufacture for repair if necessary.
- For long-term storage of the battery, make sure it is fully charged every half year to ensure the battery quality. Otherwise, damage may occur.
- This equipment is not suitable for use in locations where children are likely to be present.
- Improper replacement of the battery with an incorrect type may defeat a safeguard (for example, in the case of some lithium battery types).
- DO NOT dispose of the battery into fire or a hot oven, or mechanically crush or cut the battery, which may result in an explosion.
- DO NOT leave the battery in an extremely high temperature surrounding environment, which may result in an explosion or the leakage of flammable liquid or gas.
- DO NOT subject the battery to extremely low air pressure, which may result in an explosion or the leakage of flammable liquid or gas.

Installation

- This device is suitable for use above 2 m only.
- Install the device according to the instructions in Quick Start Guide. To prevent injury, this device must be securely attached to the installation surface in accordance with the installation instructions.
- Never place the device in an unstable location. The device may fall, causing serious personal injury or death.
- The additional force shall be equal to three times the weight of the device but not less than 50 N. The device and its associated mounting means shall remain secure during the installation. After the installation, the device, including any associated mounting plate, shall not be damaged.

- Never place the equipment in an unstable location. The equipment may fall, causing serious personal injury or death.
- This equipment is for use only with corresponding brackets. Use with other (carts, stands, or carriers) may result in instability causing injury.
- The interface varies with the models. Please refer to the product datasheet for details.
- If the device needs to be wired by yourself, select the corresponding wire to supply power according to the electric parameters labeled on the device. Strip off wire with a standard wire stripper at corresponding position. To avoid serious consequences, the length of stripped wire shall be appropriate, and conductors shall not be exposed.
- Make sure that the power has been disconnected before you wire, install, or disassemble the device.

System Security

- You acknowledge that the nature of Internet provides for inherent security risks, and our company shall not take any responsibilities for abnormal operation, privacy leakage or other damages resulting from cyber attack, hacker attack, however, our company will provide timely technical support if required.
- Please enforce the protection for the personal information and the data security as the
 device may be confronted with the network security problems when it is connected to
 the Internet. Please contact us when the device might exist network security risks.
- Please understand that you have the responsibility to configure all the passwords and other security settings about the device, and keep your user name and password.

Maintenance

- If the product does not work properly, please contact your dealer or the nearest service center. We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.
- Wipe the device gently with a clean cloth and a small quantity of ethanol, if necessary.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the device may be impaired.
- To reduce the risk of fire, replace only with the same type and rating of fuse.
- The serial port of the equipment is used for debugging only.

Using Environment

- Make sure the running environment meets the requirement of the device. The operating temperature shall be -40°C to 65°C (-40°F to 149°F), and the operating humidity shall be 95% or less, no condensing.
- DO NOT expose the device to high electromagnetic radiation or dusty environments.
- DO NOT aim the lens at the sun or any other bright light.
- The equipment shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the equipment.
- No naked flame sources, such as lighted candles, should be placed on the equipment.

- For the device with ventilation openings, the ventilation openings should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, and curtains. The openings shall never be blocked by placing the device on a bed, sofa, rug, or other similar surface.
- Keep a proper distance around the device for sufficient ventilation.
- This device is suitable for mounting on concrete or other non-combustible surface only to avoid fire hazard.
- This equipment is not suitable for use in locations where children are likely to be present.
- Provide a surge suppressor at the inlet opening of the equipment under special conditions such as the mountain top, iron tower, and forest.
- Burned fingers when handling the parts with symbol ▲. Wait one-half hour after switching off before handling the parts.

Emergency

• If smoke, odor, or noise arises from the device, immediately turn off the power, unplug the power cable, and contact the service center.

COMPLIANCE NOTICE: The thermal series products might be subject to export controls in various countries or regions, including without limitation, the United States, European Union, United Kingdom and/or other member countries of the Wassenaar Arrangement. Please consult your professional legal or compliance expert or local government authorities for any necessary export license requirements if you intend to transfer, export, re-export the thermal series products between different countries.

Contents

Chapter 1 Overview	1
1.1 Brief Description	1
1.2 Function	1
Chapter 2 Device Activation and Accessing	2
2.1 Activate Device	2
2.1.1 Activate the Device via Browser	2
2.1.2 Activate the Device via SADP	3
2.2 Login	3
2.2.1 Plug-in Installation	3
2.2.2 Illegal Login Lock	4
Chapter 3 Network Settings	6
3.1 TCP/IP	6
3.1.1 Multicast Discovery	7
3.2 Port	7
3.3 Port Mapping	8
3.3.1 Set Auto Port Mapping	8
3.3.2 Set Manual Port Mapping	9
3.4 Multicast	9
3.5 SNMP	9
3.6 Access to Device via Domain Name	10
3.7 Access to Device via PPPoE Dial Up Connection	11
3.8 Set ISUP	11
3.9 Set Open Network Video Interface	12
3.10 Set Alarm Host	
3.11 Set Alarm Server	12
3.12 Set Network Service	13

	3.13 Set SRTP	. 13
	3.14 Modbus Communication	. 14
	3.14.1 Set Modbus Main Mode	. 14
	3.14.2 Set Modbus Subordinate Mode	. 16
	3.14.3 Modbus Error Code Description	. 17
	3.15 Operate via Mobile Client	. 19
	3.15.1 Enable Hik-Connect Service on Camera	. 19
	3.15.2 Set Up Hik-Connect	. 20
	3.15.3 Add Camera to Hik-Connect	. 20
Ch	apter 4 Live View	. 22
	4.1 Live View Parameters	. 22
	4.1.1 Window Division	22
	4.1.2 Live View Stream Type	. 22
	4.1.3 Enable and Disable Live View	. 22
	4.1.4 Start Digital Zoom	. 22
	4.1.5 View Previous/Next Page	. 23
	4.1.6 Full Screen	. 23
	4.1.7 Light	. 23
	4.1.8 Wiper	. 23
	4.1.9 Lens Initialization	. 23
	4.1.10 Auxiliary Focus	. 24
	4.1.11 Quick Set Live View	. 24
	4.1.12 Lens Parameters Adjustment	. 24
	4.2 Set Transmission Parameters	. 25
Ch	apter 5 Video and Image Settings	27
	5.1 Video Settings	. 27
	5.1.1 Stream Type	. 27
	5.1.2 Video Type	27

	5.1.3 Resolution	28
	5.1.4 Bitrate Type and Max. Bitrate	28
	5.1.5 Video Quality	28
	5.1.6 Frame Rate	28
	5.1.7 Video Encoding	28
	5.1.8 Smoothing	30
	5.1.9 Display VCA Info	30
	5.1.10 Audio Settings	30
	5.1.11 Two-way Audio	31
	5.1.12 Set ROI	31
	5.1.13 Metadata	32
5.2	2 Display Settings	32
	5.2.1 Image Adjustment	33
	5.2.2 Image Adjustment (Thermal Channel)	33
	5.2.3 Exposure Settings	34
	5.2.4 Day/Night Switch	34
	5.2.5 Set Supplement Light	34
	5.2.6 BLC	35
	5.2.7 WDR	35
	5.2.8 White Balance	36
	5.2.9 DNR	36
	5.2.10 Defog	37
	5.2.11 Gray Scale	37
	5.2.12 Set Palette	37
	5.2.13 Set Target Enhancement	38
	5.2.14 DDE	38
	5.2.15 Brightness Sudden Change	39
	5.2.16 Enhance Regional Image	39

	5.2.17 Mirror	36
	5.2.18 Video Standard	36
	5.2.19 Digital Zoom	36
	5.2.20 Scene Mode	40
	5.2.21 Local Output	40
	5.3 OSD	40
	5.4 VCA Rule Display Settings	40
	5.5 Set Privacy Mask	41
	5.6 Overlay Picture	41
	5.7 Set Manual DPC (Defective Pixel Correction)	41
	5.8 Set Picture in Picture	42
Ch	apter 6 Video Recording and Picture Capture	44
	6.1 Storage Settings	44
	6.1.1 Set Memory Card	44
	6.1.2 Set NAS	44
	6.1.3 Set FTP	45
	6.1.4 Set Cloud Storage	46
	6.2 Video Recording	46
	6.2.1 Record Automatically	47
	6.2.2 Record Manually	48
	6.2.3 Playback and Download Video	48
	6.3 Capture Configuration	49
	6.3.1 Capture Automatically	49
	6.3.2 Capture Manually	49
	6.3.3 View and Download Picture	50
Cŀ	apter 7 VCA Resource	51
	7.1 Temperature Measurement	51
	7.1.1 Thermography Configuration Flow Chart	51

	7.1.2 Automatic Thermography	53
	7.1.3 Manual Thermography	62
	7.2 Fire and Smoke Detection	62
	7.2.1 Recommended Scene	62
	7.2.2 Set Fire and Smoke Detection	. 62
	7.2.3 Set Dynamic Fire Source Detection	64
	7.2.4 Set Detection Shield Region	65
	7.3 Perimeter Protection	66
	7.3.1 Set Perimeter Protection Rules	. 66
	7.3.2 Set Perimeter Protection Shield Region	68
	7.3.3 Set Overlay & Capture Parameters	69
	7.3.4 Calibration	69
	7.3.5 Set Advanced Configuration Parameters	73
	7.4 Open Platform	. 74
	7.4.1 Set Open Platform	74
Cha	apter 8 Event and Alarm	76
	8.1 Set Motion Detection	. 76
	8.1.1 Normal Mode	76
	8.1.2 Expert Mode	77
	8.2 Set Video Tampering Alarm	77
	8.3 Set Alarm Input	78
	8.4 Set Exception Alarm	79
	8.5 Detect Audio Exception	79
	8.6 Detect Scene Change	80
Cha	apter 9 Arming Schedule and Alarm Linkage	. 81
	9.1 Set Arming Schedule	81
	9.2 Linkage Method Settings	81
	9.2.1 Trigger Alarm Output	81

	9.2.2 FTP/NAS/Memory Card Uploading	. 83
	9.2.3 Send Email	. 83
	9.2.4 Notify Surveillance Center	. 84
	9.2.5 Trigger Recording	85
	9.2.6 External Alarm Module	. 85
	9.2.7 Module Order	85
	9.2.8 Set Audible Alarm Output	. 86
	9.2.9 Set Flashing Alarm Light Output	. 86
Ch	napter 10 System and Security	. 87
	10.1 View Device Information	. 87
	10.2 Search and Manage Log	. 87
	10.3 Import and Export Configuration File	. 87
	10.4 Export Diagnose Information	. 88
	10.5 Reboot	. 88
	10.6 Device Auto Maintenance	. 88
	10.7 Restore and Default	. 89
	10.8 Upgrade	. 89
	10.9 View Open Source Software License	. 89
	10.10 Time and Date	90
	10.10.1 Synchronize Time Manually	. 90
	10.10.2 Set NTP Server	. 90
	10.10.3 Set DST	. 90
	10.11 Set RS-232	91
	10.12 Set RS-485	91
	10.13 Set Same Unit	. 92
	10.14 Security	92
	10.14.1 Authentication	92
	10.14.2 Security Audit Log	93

10.14.3 Set IP Address Filter	93
10.14.4 Set MAC Address Filter	94
10.14.5 Certificate Management	94
10.14.6 Control Timeout Settings	97
10.14.7 Set SSH	97
10.14.8 Set HTTPS	97
10.14.9 Set QoS	97
10.14.10 Set IEEE 802.1X	98
10.15 User and Account	98
10.15.1 Set User Account and Permission	98
10.15.2 Online Users	99
Chapter 11 Appendix	100
11.1 Common Material Emissivity Reference	100

Chapter 1 Overview

1.1 Brief Description

Thermal & Optical Bi-spectrum network camera equipped with built-in GPU which supports intelligent perimeter protection algorithm, can realize high-precision VCA detection and real-time alarm. It is applied to perimeter protection and fire-prevention purposes in critical infrastructures such as community, villa, construction site, factory, 4S stores, and so on. The pre-alarm system helps you discover unexpected events immediately and protects your property.

1.2 Function

This section introduces main functions of the device.		
iNote		
Not all models support the configurations below. Take the actual product for reference.		

Fire and Smoke Detection

Device can detect the dynamic fire source and smoke in the scene and output pre-alarm and alarm to protect the property.

Temperature Measurement

Device can measure the actual temperature of the spot being monitored. The device alarms when temperature exceeds the temperature threshold value.

Perimeter Protection

Device can do perimeter protection. Multiple rules can be configured for different requirements.

Chapter 2 Device Activation and Accessing

To protect the security and privacy of the user account and data, you should set a login password to activate the device when access the device via network.



Refer to the user manual of the software client for the detailed information about the client software activation.

2.1 Activate Device

The device needs to be activated by setting a strong password before use. This part introduces activation using different client tools.

2.1.1 Activate the Device via Browser

You can access and activate the device via the browser.

Steps

- 1. Connect your computer to the same Wi-Fi network that the device is in.
- 2. Change the IP address of the computer and device to the same segment.

i Note

The default IP address of the device is 192.168.1.64. You can set the IP address of the computer from 192.168.1.2 to 192.168.1.253 (except 192.168.1.64). For example, you can set the IP address of the PC to 192.168.1.100.

- 3. Input 192.168.1.64 in the browser.
- 4. Set device activation password.



We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including at least three of the following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

- 5. Click OK.
- 6. Input the activation password to log in to the device.
- **7. Optional:** Go to **Configuration > Network > Basic > TCP/IP** to change the IP address of the device to the same segment of your network.

2.1.2 Activate the Device via SADP

Search and activate the online devices via SADP software.

Before You Start

Access https://www.hikmicrotech.com to get SADP software to install.

Steps

- 1. Connect your computer to the same Wi-Fi network that the device is in.
- 2. Run SADP software to search the online devices of the LAN.
- 3. Check **Device Status** from the device list, and select **Inactive** device.
- 4. Create and input the new password in the password field, and confirm the password.



We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

5. Click OK.

Device Status changes into **Active**.

6. Optional: Change the network parameters of the device in **Modify Network Parameters**.

2.2 Login

Log in to the device via Web browser.

2.2.1 Plug-in Installation

Certain operation systems and web browser may restrict the display and operation of the device function. You should install plug-in or complete certain settings to ensure normal display and operation. For detailed restricted function, refer to the actual device.

Operating System	Web Browser	Operation
Windows	Internet Explorer 10+	Follow pop-up prompts to complete plug-in installation.
	Google Chrome 57+ Mozilla Firefox 52+ Microsoft Edge 79.0.309+	Click Download Plug-in to download and install plug-in. Go to Configuration > Network > Advanced

Operating System	Web Browser	Operation
		Settings > Network Service to enable WebSocket or WebSockets for normal view if plug-in installation is not required. Display and operation of certain functions are restricted. For example, Playback and Picture are not available. For detailed restricted function, refer to the actual device.
Mac OS 10.13+	Mac Safari 12+	Plug-in installation is not required. Go to Configuration > Network > Advanced Settings > Network Service to enable WebSocket or WebSockets for normal view. Display and operation of certain functions are restricted. For example, Playback and Picture are not available. For detailed restricted function, refer to the actual device.

iNote

The device only supports Windows and Mac OS system and does not support Linux system.

2.2.2 Illegal Login Lock

It helps to improve the security when accessing the device via Internet.

Go to Configuration > System > Security > Security Service , and enable Enable Illegal Login Lock, Illegal Login Attempts and Locking Duration are configurable.

Illegal Login Attempts

When your login attempts with the wrong password reach the set times, the device is locked.

Locking Duration The device releases the lock after the setting duration.						

Chapter 3 Network Settings

3.1 TCP/IP

TCP/IP settings must be properly configured before you operate the device over network. IPv4 and IPv6 are both supported. Both versions can be configured simultaneously without conflicting to each other.

Go to Configuration > Basic Configuration > Network > TCP/IP for parameter settings. NIC Type

Select a NIC (Network Interface Card) type according to your network condition.

IPv4

Two IPv4 modes are available.

DHCP

The device automatically gets the IPv4 parameters from the network if you check **DHCP**. The device IP address is changed after enabling the function. You can use SADP to get the device IP address.



The network that the device is connected to should support DHCP (Dynamic Host Configuration Protocol).

Manual

You can set the device IPv4 parameters manually. Input IPv4 Address, IPv4 Subnet Mask, and IPv4 Default Gateway, and click Test to see if the IP address is available.

IPv6

Three IPv6 modes are available.

Route Advertisement

The IPv6 address is generated by combining the route advertisement and the device Mac address.

iNote

Route advertisement mode requires the support from the router that the device is connected to.

DHCP

The IPv6 address is assigned by the server, router or gateway.

Manual

Input IPv6 Address, IPv6 Subnet, IPv6 Default Gateway. Consult the network administrator for required information.

MTU

It stands for maximum transmission unit. It is the size of the largest protocol data unit that can be communicated in a single network layer transaction.

The valid value range of MTU is 1280 to 1500.

DNS

It stands for domain name server. It is required if you need to visit the device with domain name. And it is also required for some applications (e.g., sending email). Set **Preferred DNS Server** and **Alternate DNS server** properly if needed.

3.1.1 Multicast Discovery

Check the **Enable Multicast Discovery**, and then the online network camera can be automatically detected by client software via private multicast protocol in the LAN.

3.2 Port

The device port can be modified when the device cannot access the network due to port conflicts.



Do not modify the default port parameters at will, otherwise the device may be inaccessible.

Go to Configuration > Network > Basic Settings > Port for port settings.

HTTP Port

It refers to the port through which the browser accesses the device. For example, when the HTTP Port is modified to 81, you need to enter *http://192.168.1.64:81* in the browser for login.

HTTPS Port

It refers to the port through which the browser accesses the device with certificate. Certificate verification is required to ensure the secure access.

RTSP Port

It refers to the port of real-time streaming protocol.

SRTP Port

It refers to the port of secure real-time transport protocol.

Server Port

It refers to the port through which the client adds the device.

WebSocket Port

TCP-based full-duplex communication protocol port for plug-in free preview.

WebSockets Port

TCP-based full-duplex communication protocol port for plug-in free preview. Certificate verification is required to ensure the secure access.

ModbusTCP

It refers to the protocol through which the device transmits data, such as the thermometry data.



- WebSocket Port, and WebSockets Port are only supported by certain models.
- For device models that support that function, go to Configuration > Network > Advanced Settings > Network Service to enable it.

3.3 Port Mapping

By setting port mapping, you can access devices through the specified port.

Before You Start

When the ports in the device are the same as those of other devices in the network, refer to **Port** to modify the device ports.

Steps

- 1. Go to Configuration > Network > Basic Settings > NAT.
- 2. Select the port mapping mode.

Auto Port Mapping Refer to **Set Auto Port Mapping** for detailed information.

Manual Port Mapping Refer to <u>Set Manual Port Mapping</u> for detailed information.

3. Click Save.

3.3.1 Set Auto Port Mapping

Steps

- 1. Check **Enable UPnP™**, and choose a friendly name for the camera, or you can use the default name.
- 2. Select the port mapping mode to **Auto**.
- 3. Click Save.

	\sim	1
	i - i	
		Note
_	_	IAOTE

UPnP™ function on the router should be enabled at the same time.

3.3.2 Set Manual Port Mapping

Steps

- 1. Check Enable UPnP™, and choose a friendly name for the device, or you can use the default name.
- 2. Select the port mapping mode to **Manual**, and set the external port to be the same as the internal port.
- 3. Click Save.

What to do next

Go to the router port mapping settings interface and set the port number and IP address to be the same as those on the device. For more information, refer to the router user manual.

3.4 Multicast

Multicast is group communication where data transmission is addressed to a group of destination devices simultaneously. After setting multicast, you can send the source data efficiently to multiple receivers.

Go to **Configuration > Network > Basic Settings > Multicast** for the multicast settings.

IP Address

It stands for the address of multicast host.

Stream Type

The stream type as the multicast source.

Video Port

The video port of the selected stream.

Audio Port

The audio port of the selected stream.

1	•	
1		Note
1	1	NICTO
\sim	$\overline{}$	11010

Audio Port varies according to different camera models.

3.5 SNMP

You can set the SNMP (Simple Network Management Protocol) to get device information in network management.

Before You Start

Before setting the SNMP, you should download the SNMP software and manage to receive the device information via SNMP port.

Steps

- 1. Go to Configuration > Network > Advanced Settings > SNMP.
- 2. Check Enable SNMPv1, Enable SNMP v2c or Enable SNMPv3.

Note

The SNMP version you select should be the same as that of the SNMP software. And you also need to use the different version according to the security level required. SNMP v1 is not secure and SNMP v2 requires password for access. And SNMP v3 provides encryption and if you use the third version, HTTPS protocol must be enabled.

- 3. Configure the SNMP settings.
- 4. Click Save.

3.6 Access to Device via Domain Name

You can use the Dynamic DNS (DDNS) for network access. The dynamic IP address of the device can be mapped to a domain name resolution server to realize the network access via domain name.

Before You Start

Registration on the DDNS server is required before configuring the DDNS settings of the device.

Steps

- 1. Refer to <u>TCP/IP</u> to set DNS parameters.
- 2. Go to the DDNS settings page: Configuration > Network > Basic Settings > DDNS .
- 3. Check Enable DDNS and select DDNS type.

DynDNS

Dynamic DNS server is used for domain name resolution.

NO-IP

NO-IP server is used for domain name resolution.

- 4. Input the domain name information, and click Save.
- **5.** Check the device ports and complete port mapping. Refer to <u>Port</u> to check the device port, and refer to <u>Port Mapping</u> for port mapping settings.
- 6. Access the device.

By Browsers Enter the domain name in the browser address bar to access the

device.

By Client Software Add domain name to the client software. Refer to the client

manual for specific adding methods.

3.7 Access to Device via PPPoE Dial Up Connection

This device supports the PPPoE auto dial-up function. The device gets a public IP address by ADSL dial-up after the device is connected to a modem. You need to configure the PPPoE parameters of the device.

Steps

- 1. Go to Configuration > Network > Basic Settings > PPPoE.
- 2 Check Enable PPPoE.
- 3. Set the PPPoE parameters.

Dynamic IP

After successful dial-up, the dynamic IP address of the WAN is displayed.

User Name

User name for dial-up network access.

Password

Password for dial-up network access.

Confirm

Input your dial-up password again.

- 4. Click Save.
- 5. Access the device.

By Browsers	Enter the WAN dynamic IP address in the browser address bar to access the device.
By Client	Add the WAN dynamic IP address to the client software. Refer to

Note

The obtained IP address is dynamically assigned via PPPoE, so the IP address always changes after restarting the camera. To solve the inconvenience of the dynamic IP, you need to get a domain name from the DDNS provider (e.g., DynDns.com). Refer to <u>Access</u> to Device via Domain Name for detail information.

3.8 Set ISUP

When the device is registered on ISUP platform (formerly called Ehome), you can visit and manage the device, transmit data, and forward alarm information over public network.

Steps

- 1. Go to Configuration > Network > Advanced Settings > Platform Access .
- 2. Select ISUP as the platform access mode.
- 3. Select Enable.

- 4. Select a protocol version and input related parameters.
- 5. Click Save.

Register status turns to **Online** when the function is correctly set.

3.9 Set Open Network Video Interface

If you need to access the device through Open Network Video Interface protocol, you can configure the user settings to enhance the network security.

Steps

- 1. Go to Configuration > Network > Advanced Settings > Integration Protocol.
- 2. Check Enable Open Network Video Interface.
- 3. Select an authentication mode.
 - If you select **Digest**, the device only supports digest authentication.
 - If you select Digest&ws-username token, the device supports digest authentication or ws-username token authentication. You can check Time Verification to verify the client time based on your needs.
- 4. Click Add to configure the Open Network Video Interface user.

Delete Delete the selected Open Network Video Interface user.

Modify Modify the selected Open Network Video Interface user.

- 5. Click Save.
- 6. Optional: Repeat the steps above to add more Open Network Video Interface users.

3.10 Set Alarm Host

The device can send the alarm signal to the remote alarm host when an event occurs. The alarm host refers to the PC installed with client software.

Steps

- 1. Go to Configuration > Network > Other.
- 2. Enter the alarm host IP and port.
- 3. Click Save.

3.11 Set Alarm Server

The device can send alarms to destination IP address or host name through HTTP, HTTPS, or ISUP protocol. The destination IP address or host name should support HTTP, HTTP, or ISUP data transmission.

Steps

1. Go to Configuration > Network > Advanced Settings > Alarm Server .

- 2. Enter Destination IP or Host Name, URL, and Port.
- 3. Select Protocol.

Note

HTTP, HTTPS, and ISUP are selectable. It is recommended to use HTTPS, as it encrypts the data transmission during communication.

- 4 Click **Test** to check if the IP or host is available.
- 5. Click Save.

3.12 Set Network Service

You can control the ON/OFF status of certain protocol as desired.

Steps

Note

This function varies according to different models.

- 1. Go to Configuration > Network > Advanced Settings > Network Service .
- 2. Set network service.

WebSocket & WebSockets

WebSocket or WebSockets protocol should be enabled if you use Google Chrome 57 and its above version or Mozilla Firefox 52 and its above version to visit the device. Otherwise, live view, image capture, and digital zoom function cannot be used.

If the device uses HTTP, enable WebSocket.

If the device uses HTTPS, enable WebSockets.

TLS (Transport Layer Security)

The device offers TLS1.1 and TLS1.2. Enable one or more protocol versions according to your need.

Bonjour

Bonjour is a zero-configuration protocol used to automatically find devices in a network or create networks between devices. You can disable it when not using the protocol.

3. Click Save.

3.13 Set SRTP

The Secure Real-time Transport Protocol (SRTP) is a Real-time Transport Protocol (RTP) internet protocol, intended to provide encryption, message authentication and integrity, and replay attack protection to the RTP data in both unicast and multicast applications.

Steps

- 1. Go to Configuration > Network > Advanced Settings > SRTP.
- 2. Select Server Certificate.
- 3. Select Encrypted Algorithm.
- 4. Click Save.

☑iNote

Only certain device models support this function.

3.14 Modbus Communication

During communicating with Modbus protocol, the camera can function as the main or the subordinate for transmitting temperature measurement and temperature measurement alarm data, or responding to temperature measurement parameter configuration requests from the main.

Please select the device mode and configure the communication rules and parameters according to the demand to ensure the security of data transmission under the premise of satisfying the data access of the device.

Go to **Configuration > Network > Advanced Configuration > Modbus** to configure the Modbus.

3.14.1 Set Modbus Main Mode

Configure the device as the main server which actively uploads data to the subordinate according to set rules without sending requests.

Steps

1. Select the **Device Mode** as **Main**.

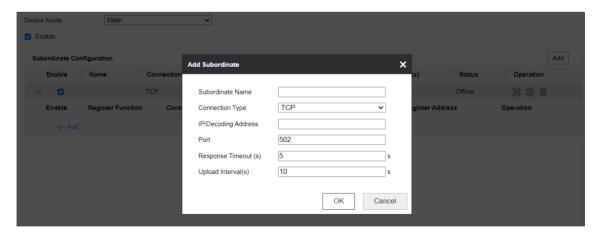


Figure 3-1 Main Mode Configuration

- 2. Check to enable the function of transmitting data via Modbus.
- **3.** Click **Add** to configure the transmission parameters between the device and the subordinate.

Subordinate Name

Customized subordinate for distinguishing between different subordinates.

Connection type



Only when **System > System Configuration > RS-485** is selected as main mode, the RS-485 connection type can be supported.

TCP

When connecting the device and the subordinate via the RJ45 interface, the TCP connection type can be selected. Multiple connections can be implemented through the TCP type, but the IP/decoding address and port of the TCP connection cannot be duplicated.

RS-485

Before selecting an RS-485 connection, make sure that the connection between the device and the subordinate has been established through the RS-485 connector on the body. And only 1 RS-485 connection can be supported.

Response Timeout(s)

When the response timeout occurs, the device displays the error code **11**, then it will resend the data, and when the response timeout occurs for three consecutive times, it will discard the current data and send the next data.

Upload Interval(s)

The time interval during the device uploads data to the subordinate.

- 4. Click OK to view the status.
- 5. Click * to refresh the status.



- If the connection status displays online, the device is connected to the subordinate
 normally; if it displays offline, the device is disconnected from the subordinate, which
 may be caused by the subordinate not being online. If the status shows Error, refer to
 the contents of the error code description below to diagnose the connection problem.
- Click Edit or Delete to re-edit the subordinate parameters or delete the added subordinate.
- 6. Configure the contents to be uploaded to the registers of subordinate.
 - 1) Click Add.
 - 2) Check the contents to be uploaded.

- 3) Select the Rule ID to be uploaded, and the device uploads the temperature measurement information corresponding to the expert temperature measurement rule.
- 4) Enter the register starting address and register ending address.

Note

In a single subordinate configuration, all register addresses cannot be duplicated or conflicted.

5) Click OK.

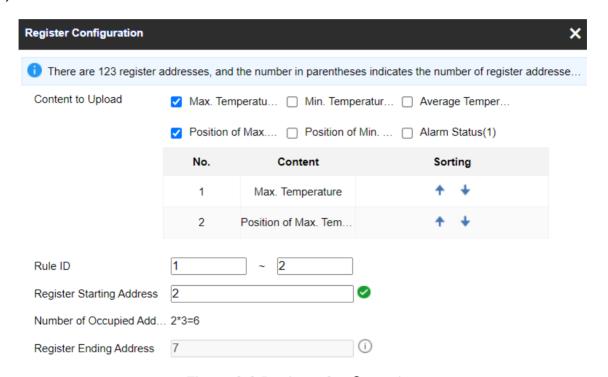


Figure 3-2 Register Configuration

7. Click Save.

3.14.2 Set Modbus Subordinate Mode

Configure the device as the subordinate server, the main can read the temperature measurement data of the device or write the temperature measurement parameters of the device. The form of authorized access can improve data communication security.

Steps

∐iNote

You can set the Modbus TCP port, go to Configuration > Network > Basic Settings > Port.

1. Go to Configuration > Network > Advanced Settings > Modbus.

2. Select Modbus TCP mode.

Device Mode

The device is set as **subordinate**, which means that the device operates as a Modbus server processing the request from the client.

Register Mode

In **Read Only**, the client can only read all the register data. In **Read/Write**, the client can read while configure the device using the Modbus TCP protocol.

3. Check **Enable Authorized IP Addresses** and click **Add** to add IP addresses that are allowed to access to the device.



With regard to the network security risk, it is recommended to limit permission only to trusted IP addresses.

3.14.3 Modbus Error Code Description

If communication of Modbus is abnormal, an error code will be returned. Please refer to the following table to check the meaning of the error code to help troubleshoot Modbus communication problems.

Table 3-1 Modbus Error Code Description

Error Code	Name	Description
01	Illegal Function	The function code received in the query is not an allowable action for the server. This may be because the function code is only applicable to newer devices, and was not implemented in the unit selected. It could also indicate that the server is in the wrong state to process a request of this type, for example because it is unconfigured and is being asked to return register values.
02	Illegal Data Address	The data address received in the query is not an allowable address for the server. More specifically, the combination of reference number and transfer length is invalid. For a controller with 100 registers, the PDU addresses the first register as 0, and the last one as 99. If a request is submitted with a starting register address of 96 and a quantity of registers of 4, then this request will successfully operate (address-wise at least) on registers 96, 97,

Error Code	Name	Description
		98, 99. If a request is submitted with a starting register address of 96 and a quantity of registers of 5, then this request will fail with Exception Code 0x02 "Illegal Data Address" since it attempts to operate on registers 96, 97, 98, 99 and 100, and there is no register with address 100.
03	Illegal Data Value	A value contained in the query data field is not an allowable value for server. This indicates a fault in the structure of the remainder of a complex request, such as that the implied length is incorrect. It specifically does NOT mean that a data item submitted for storage in a register has a value outside the expectation of the application program, since the Modbus protocol is unaware of the significance of any particular value of any particular register.
04	Server Device Failure	An unrecoverable error occurred while the server was attempting to perform the requested action.
05	Acknowledge	Specialized use in conjunction with programming commands. The server has accepted the request and is processing it, but a long duration of time will be required to do so. This response is returned to prevent a timeout error from occurring in the client. The client can next issue a Poll Program Complete message to determine if processing is completed.
06	Server Device Busy	Specialized use in conjunction with programming commands. The server is engaged in processing a long– duration program command. The client should retransmit the message later when the server is free.
08	Memory Parity Error	Specialized use in conjunction with function codes 20 and 21 and reference type 6, to indicate that the extended file area failed to pass a consistency check. The server attempted to read record file, but detected a parity error in the memory. The client can retry the request, but service may be required on the server device.

Error Code	Name	Description
10	Gateway Path Unavailable	Specialized use in conjunction with gateways, indicates that the gateway was unable to allocate an intern communication path from the input port to the output port for processing the request. Usually means that the gateway is misconfigured or overload.
11	Gateway Target Device Failed to Response	Specialized use in conjunction with gateways, indicates that no response was obtained from the target device. Usually means that device is not present on the network.

3.15 Operate via Mobile Client

Hik-Connect is an application for mobile devices. Using the App, you can view live image, receive alarm notification and so on.



Hik-Connect service should be supported by the camera.

3.15.1 Enable Hik-Connect Service on Camera

Hik-Connect service should be enabled on your camera before using the service.

You can enable the service through SADP software or Web browser.

Enable Hik-Connect Service via Web Browser


Follow the following steps to enable Hik-Connect Service via Web Browser.

Before You Start

You need to activate the camera before enabling the service.

Steps

- 1. Access the camera via web browser.
- 2. Enter platform access configuration interface. Configuration > Network > Advanced Settings > Platform Access
- 3. Select Hik-Connect as the Platform Access Mode.
- 4. Check Enable.
- 5. Click and read "Terms of Service" and "Privacy Policy" in pop-up window.

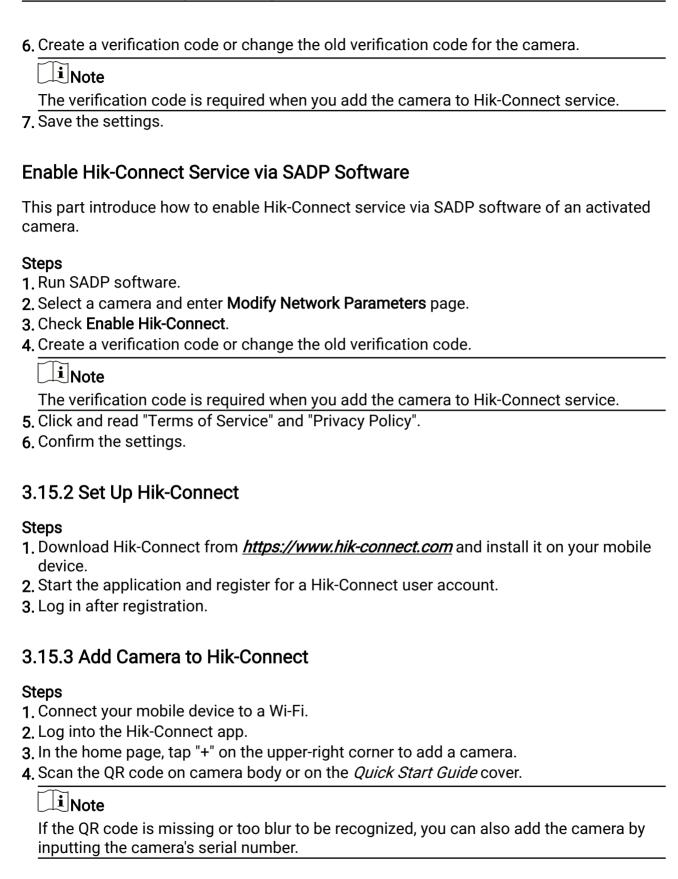

5. Input the verification code of your camera.

i Note

- The required verification code is the code you create or change when you enable Hik-Connect service on the camera.
- If you forget the verification code, you can check the current verification code on **Platform Access** configuration page via web browser.
- 6. Tap Connect to a Network button in the popup interface.
- 7. Choose Wired Connection or Wireless Connection according to your camera function.

Wireless Connection	Input the Wi-Fi password that your mobile phone has connected to, and tap Next to start the Wi-Fi connection process. (Locate the camera within 3 meters from the router when setting up the Wi-Fi.)
Wired	Connect the camera to the router with a network cable and tap
Connection	Connected in the result interface.

i Note

The router should be the same one which your mobile phone has connected to.

8. Tap Add in the next interface to finish adding.

For detailed information, refer to the user manual of the Hik-Connect app.

Chapter 4 Live View

It introduces the live view parameters, function icons and transmission parameters settings.

4.1 Live View Parameters

The supported functions vary depending on the model.



For multichannel devices, select the desired channel first before live view settings.

4.1.1 Window Division

- refers to 1 × 1 window division.
- III refers to 2 × 2 window division.
- IIII refers to 3 × 3 window division.
- IIII refers to 4 × 4 window division.

4.1.2 Live View Stream Type

Select the live view stream type according to your needs. For the detailed information about the stream type selection, refer to <u>Stream Type</u>.

4.1.3 Enable and Disable Live View

This function is used to quickly enable or disable live view of all channels.

- Click to start live view of all channels.
- Click \(\bar{\mathbb{\text{\text{\$\operation}\$}} \) to stop live view of all channels.

i Note

Go to **Configuration > Local**, to set **Auto Start Live View**, If **Yes** is selected, live view will start automatically when you go to live view.

4.1.4 Start Digital Zoom

It helps to see a detailed information of any region in the image.

Steps

1. Click to enable the digital zoom.

- 2. In live view image, drag the mouse to select the desired region.
- 3. Click in the live view image to back to the original image.

4.1.5 View Previous/Next Page

When the number of channels surpasses that of live view window division, this function can switch live view among multiple channels.

Click ← → to switch live view among multiple channels.

4.1.6 Full Screen

This function is used to view the image in full screen mode.

Click 53 to start full screen mode and press ESC button to exit.

4.1.7 Light

Click * to turn on or turn off the illuminator.



- DO NOT stare at operating light source. May be harmful to the eyes.
- If appropriate shielding or eye protection is not available, turn on the light only at a safe distance or in the area that is not directly exposed to the light.
- When assembling, installing or maintaining the device, DO NOT turn on the light, or wear eye protection.

4.1.8 Wiper

For the device that has a wiper, you can control the wiper via web browser.

Click on live view page. The wiper wipes the window one time.

4.1.9 Lens Initialization

Lens initialization is used on the device equipped with motorized lens. The function can reset lens when long time zoom or focus results in blurred image. This function varies according to different models.

Click **1** to operate lens initialization.

4.1.10 Auxiliary Focus

Click to enable automatic focus. This function is subject to the actual device model.

4.1.11 Quick Set Live View

It offers a quick setup of PTZ, display settings, OSD, video/audio and VCA resource settings on live view page.

Steps

- 1. Click to show quick setup page.
- 2. Set PTZ, display settings, OSD, video/audio and VCA resource parameters.
 - For PTZ settings, see *Lens Parameters Adjustment*.
 - For display settings, see *Display Settings*.
 - For OSD settings, see OSD.
 - For audio and video settings, see *Video and Image Settings*.
 - For VCA settings, see *Fire and Smoke Detection*, *Temperature Measurement*, and *Perimeter Protection*.



The function is only supported by certain models.

4.1.12 Lens Parameters Adjustment

It is used to adjust the lens focus, zoom and iris.

Zoom

- Click d, and the lens zooms in.
- Click a, and the lens zooms out.

Focus

- Click 🗗 , then the lens focuses near and the nearby object gets clear.

Iris

- When the image is too dark, click to enlarge the iris.
- When the image is too bright, click to stop down the iris.



The function is only supported by certain models.

4.2 Set Transmission Parameters

The live view image may be displayed abnormally according to the network conditions. In different network environments, you can adjust the transmission parameters to solve the problem.

Steps

- 1. Go to Configuration > Local > Live View Parameters .
- 2. Set the transmission parameters as required.

Protocol

TCP

TCP ensures complete delivery of streaming data and better video quality, yet the real-time transmission will be affected. It is suitable for the stable network environment.

UDP

UDP is suitable for the unstable network environment that does not demand high video fluency.

MULTICAST

MULTICAST is suitable for the situation that there are multiple clients. You should set the multicast address for them before selection.



For detailed information about multicast, refer to Multicast.

HTTP

HTTP is suitable for the situation that the third-party needs to get the stream from the device.

Play Performance

Shortest Delay

The device takes the real-time video image as the priority over the video fluency.

Balanced

The device ensures both the real-time video image and the fluency.

Fluent

The device takes the video fluency as the priority over teal-time. In poor network environment, the device cannot ensures video fluency even the fluency is enabled.

Custom

Thermal & Optical Bi-spectrum Network Camera User Manual

You can set the frame rate manually. In poor network environment, you can reduce the frame rate to get a fluent live view. But the rule information may cannot display.

Auto Start Live View

- Yes means the live view is started automatically. It requires a high performance monitoring device and a stable network environment.
- No means the live view should be started manually.
- 3. Click Save.

Chapter 5 Video and Image Settings

This part introduces the configuration of video/audio and image related parameters.

5.1 Video Settings

This part introduces the settings of video parameters, such as, stream type, video encoding, and resolution.

Go to setting page: Configuration > Video/Audio > Video .

Note

For device with multiple camera channels, select a channel before other settings.

5.1.1 Stream Type

For device supports more than one stream, you can specify parameters for each stream type.

Main Stream

The stream stands for the best stream performance the device supports. It usually offers the best resolution and frame rate the device can do. But high resolution and frame rate usually mean larger storage space and higher bandwidth requirements in transmission.

Sub Stream

The stream usually offers comparatively low resolution options, which consumes less bandwidth and storage space.

5.1.2 Video Type

Select the content (video and audio) that should be contained in the stream.

Video

Only video content is contained in the stream.

Video & Audio

Video content and audio content are contained in the composite stream.

i Note

Video & Audio varies according to different camera models.

5.1.3 Resolution

Select video resolution according to actual needs. Higher resolution requires higher bandwidth and storage.

5.1.4 Bitrate Type and Max. Bitrate

Constant Bitrate

It means that the stream is compressed and transmitted at a comparatively fixed bitrate. The compression speed is fast, but mosaic may occur on the image.

Variable Bitrate

It means that the device automatically adjust the bitrate under the set **Max**. **Bitrate**. The compression speed is slower than that of the constant bitrate. But it guarantees the image quality of complex scenes.

5.1.5 Video Quality

When **Bitrate Type** is set as Variable, video quality is configurable. Select a video quality according to actual needs. Note that higher video quality requires higher bandwidth.

5.1.6 Frame Rate

The frame rate is to describe the frequency at which the video stream is updated and it is measured by frames per second (fps).

A higher frame rate is advantageous when there is movement in the video stream, as it maintains image quality throughout. Note that higher frame rate requires higher bandwidth and larger storage space.

5.1.7 Video Encoding

It stands for the compression standard the device adopts for video encoding.

Note

Available compression standards vary according to device models.

H.264

H.264, also known as MPEG-4 Part 10, Advanced Video Coding, is a compression standard. Without compressing image quality, it increases compression ratio and reduces the size of video file than MJPEG or MPEG-4 Part 2.

H.265

H.265, also known as High Efficiency Video Coding (HEVC) and MPEG-H Part 2, is a compression standard. In comparison to H.264, it offers better video compression at the same resolution, frame rate and image quality.

MJPEG

Motion JPEG (M-JPEG or MJPEG) is a video compression format in which intraframe coding technology is used. Images in a MJPEG format is compressed as individual JPEG images.

Profile

This function means that under the same bitrate, the more complex the profile is, the higher the quality of the image is, and the requirement for network bandwidth is also higher.

I-Frame Interval

I-frame interval defines the number of frames between 2 I-frames.

In H.264 and H.265, an I-frame, or intra frame, is a self-contained frame that can be independently decoded without any reference to other images. An I-frame consumes more bits than other frames. Thus, video with more I-frames, in other words, smaller I-frame interval, generates more steady and reliable data bits while requiring more storage space.

SVC

Scalable Video Coding (SVC) is the name for the Annex G extension of the H.264 or H.265 video compression standard.

The objective of the SVC standardization has been to enable the encoding of a high-quality video bitstream that contains one or more subset bitstreams that can themselves be decoded with a complexity and reconstruction quality similar to that achieved using the existing H.264 or H.265 design with the same quantity of data as in the subset bitstream. The subset bitstream is derived by dropping packets from the larger bitstream.

SVC enables forward compatibility for older hardware: the same bitstream can be consumed by basic hardware which can only decode a low-resolution subset, while more advanced hardware will be able decode high quality video stream.

5.1.8 Smoothing

It refers to the smoothness of the stream. The higher value of the smoothing is, the better fluency of the stream will be, though, the video quality may not be so satisfactory. The lower value of the smoothing is, the higher quality of the stream will be, though it may appear not fluent.

5.1.9 Display VCA Info

VCA information can be displayed by Player and Video.

Player

Player means the VCA info can be displayed by the dedicated player provided by the manufacturer.

Video

Video means the VCA info can be displayed by any general video player.

5.1.10 Audio Settings

It is a function to set audio parameters such as audio encoding, environment noise filtering.

Go to the audio settings page: Configuration > Video/Audio > Audio .

Note

Only certain camera models support the function.

Audio Encoding

Select the audio encoding compression of the audio.

Audio Input



- · Connect the audio input device as required.
- The audio input display varies with the device models.

LineIn	Set Audio Input to LineIn when the device connects to the audio input device with the high output power, such as MP3, synthesizer or active pickup.	
MicIn	Set Audio Input to MicIn when the device connects to the audio input device with the low output power, such as microphone or passive pickup.	

Environmental Noise Filter

Set it as OFF or ON. When the function is enabled, the noise in the environment can be filtered to some extent.

5.1.11 Two-way Audio

It is used to realize the two-way audio function between the monitoring center and the target in the monitoring screen.

Before You Start

- Make sure the audio input device (pick-up or microphone) and audio output device (speaker) connected to the device is working properly. Refer to specifications of audio input and output devices for device connection.
- If the device has built-in microphone and speaker, two-way audio function can be enabled directly.

Steps

iNote

The function varies according to different camera models.

- 1. Click Live View.
- 2. Click \$\sigma\$ on the toolbar to enable two-way audio function of the camera.
- 3. Click \$\square\$, disable the two-way audio function.

5.1.12 Set ROI

ROI (Region of Interest) encoding helps to assign more encoding resource to the region of interest, thus to increase the quality of the ROI whereas the background information is less focused.

Before You Start

Please check the video coding type. ROI is supported when the video coding type is H.264 or H.265.

Steps

- 1. Go to Configuration > Video/Audio > ROI.
- 2. Check Enable.
- 3. Select the channel No. according to your need.
- 4. Select Stream Type.
- 5. Select Region No. in Fixed Region to draw ROI region.
 - 1) Click Draw Area.
 - 2) Click and drag the mouse on the view screen to draw the fixed region.
 - 3) Click Stop Drawing.

п	\sim		
ı		I N I	ote
П	_	IN	OTE

Select the fixed region that needs to be adjusted and drag the mouse to adjust its position.

- 6. Input the Region Name and ROI Level.
- 7. Click Save.

Note

The higher the ROI level is, the clearer the image of the detected region is.

8. Optional: Select other region No. and repeat the above steps if you need to draw multiple fixed regions.

5.1.13 Metadata

Metadata is the raw data that the device collects before algorithm processing. It is often used for the third party integration.

Go to **Configuration > Video/Audio > Metadata Settings** to enable metadata uploading of the desired function for the camera channels.

5.2 Display Settings

It offers the parameter settings to adjust image features.

Go to Configuration > Image > Display Settings.

For device that supports multiple channels, display settings of each channel is required. The settings for different channels may be different. This part introduces all possible parameters among the channels.

Click **Default** to restore settings.

5.2.1 Image Adjustment

By adjusting the **Brightness**, **Saturation**, **Hue**, **Sharpness** and **Contrast**, the image can be best displayed.





Low Saturation

High Saturation

Figure 5-1 Saturation

5.2.2 Image Adjustment (Thermal Channel)

You can optimize the image display effect of thermal channel by manual correction.

Manual Correction

Click DPC (Defective Pixel Correction) to optimize the image once.



It is a normal phenomenon that short video freezing might occur during the process of **Manual Correction**.

Thermal AGC Mode

Choose the AGC mode according to different scenes to balance and improve the image quality.

- Histogram: Choose for scene with obvious WDR and high temperature difference, can improve image contrast and enhance image. E.g. the scene contains both indoor and outdoor scenes.
- Linear: Choose for scene with low temperature difference and the target is not obvious, can improve image contrast and enhance image. E.g. the bird in forest.
- Self-Adaptive: Choose AGC mode automatically according to current scene.

5.2.3 Exposure Settings

Exposure is controlled by the combination of iris, shutter, and photo sensibility. You can adjust image effect by setting exposure parameters.

In manual mode, you need to set Exposure Time, Gain and Slow Shutter.

5.2.4 Day/Night Switch

Day/Night Switch function can provide color images in the day mode and turn on fill light in the night mode. Switch mode is configurable.

Day

The image is always in color.

Night

The supplement light will be enabled to ensure clear live view image at night.

Auto

The camera switches between the day mode and the night mode according to the illumination automatically. The higher the **Sensitivity** is, the easier the mode switches.

The **Filtering Time** refers to the time interval between the mode switches.

Scheduled-Switch

Set the Start Time and the End Time to define the duration for day mode.

\sim	\sim	1
1	<u>-</u>	
		Note
_		14016

Day/Night Switch function varies according to models.

5.2.5 Set Supplement Light

Steps

- 1. Go to Configuration > Maintenance > System Service .
- 2. Check Enable Supplement Light.
- 3. Click Save.
- 4. Go to Configuration > Image > Display Settings > Day/Night Switch to set supplement light parameters.

Smart Supplement Light


This feature uses smart image processing technology to reduce overexposure caused by supplement light.

Smart Supplement Light Mode

Enable or disable the smart supplement light.

Brightness Limit

Thermal & Optical Bi-spectrum Network Camera User Manual

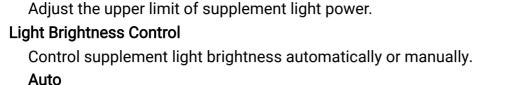

The brightness adjusts according to the actual environment automatically. Manual

You can drag the slider or set value to adjust the brightness.

Note
The function varies according to device models.

5.2.6 BLC

If you focus on an object against strong backlight, the object will be too dark to be seen clearly. BLC (backlight compensation) compensates light to the object in the front to make it clear. If BLC mode is set as **Custom**, you can draw a red rectangle on the live view image as the BLC area.

5.2.7 WDR

The WDR (Wide Dynamic Range) function helps the camera provide clear images in environment with strong illumination differences.

When there are both very bright and very dark areas simultaneously in the field of view, you can enable the WDR function and set the level. WDR automatically balances the brightness level of the whole image and provides clear images with more details.

When WDR is enabled, some other functions may be not supported. Refer to the actual interface for details.



Figure 5-2 WDR

5.2.8 White Balance

White balance is the white rendition function of the camera. It is used to adjust the color temperature according to the environment.



Figure 5-3 White Balance

5.2.9 DNR

Digital Noise Reduction is used to reduce the image noise and improve the image quality. **Normal** and **Expert** modes are selectable.

Normal

Set the DNR level to control the noise reduction degree. The higher level means stronger reduction degree.

Expert

Set the DNR level for both space DNR and time DNR to control the noise reduction degree. The higher level means stronger reduction degree.

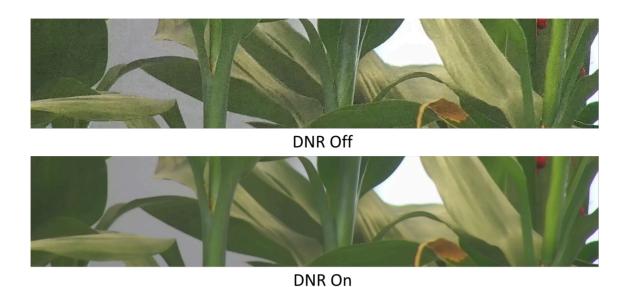


Figure 5-4 DNR

5.2.10 Defog

You can enable the defog function when the environment is foggy and the image is misty. It enhances the subtle details so that the image appears clearer.



Figure 5-5 Defog

5.2.11 Gray Scale

This section introduces the gray scale function in optical channel.

You can choose the range of the grey scale as [0-255] or [16-235].

5.2.12 Set Palette

You can select the palette mode to display the thermal grayscale image to colored image.

Steps

- 1. Go to Configuration > Image > Display Settings .
- 2. Select the thermal channel.
- 3. Select a palette mode in Image Enhancement according to your need.

Result

The live view displays the image with palette.

5.2.13 Set Target Enhancement

You can set the color of the targets in different temperature ranges to identify the target quickly.

Steps

- 1. Go to Configuration > Image > Display Settings .
- 2. Select the thermal channel.
- 3. Click Image Enhancement, select Palette as White Hot or Black Hot.
- Set the temperature value and color of High Temperature, Interval Temperature, or Low Temperature targets.

Above (be colored)

When the target of high temperature needs to be colored, you can set the high temperature color. Target above the setting temperature will be displayed in setting color.

Between (be colored)

When the target of an interval temperature needs to be colored, you can set the interval temperature color. Target between the minimum and the maximum temperatures will be displayed in setting color.

Below (be colored)

When the target of low temperature needs to be colored, you can set the low temperature color. Target below the setting temperature will be displayed in setting color.

5. Click Save.

5.2.14 DDE

Digital Detail Enhancement is used to adjust the details of the image. **OFF** and **Normal** modes are selectable.

OFF

Disable this function.

Normal

Set the DDE level to control the details of the image. The higher the level is, the more details shows, but the higher the noise is.

5.2.15 Brightness Sudden Change

When the brightness of target and the background is hugely different (the temperature difference of target and background is huge), the system reduces the difference for viewing.

5.2.16 Enhance Regional Image

You can select the desired area of image to improve the coding quality. The regional image will be more detailed and clear.

Steps

- 1. Go to Configuration > Image > Display Settings > Image Enhancement .
- 2. Select the area of regional image enhancement. You can select OFF to disable this function, or select Custom Area to draw a desired area.
 A red rectangle shows on the display, in which the image quality is improved.

5.2.17 Mirror

When the live view image is the reverse of the actual scene, this function helps to display the image normally.

Select the mirror mode as needed.



The video recording will be shortly interrupted when the function is enabled.

5.2.18 Video Standard

Video standard is an ability of a video card or video display device that defines the amount of colors that are shown and the resolution. The two most common video standard used are NTSC and PAL. In NTSC, 30 frames are transmitted each second. Each frame is made up of 525 individual scan lines. In PAL, 25 frames are transmitted each second. Each frame is made up of 625 individual scan lines. Select video signal standard according to the video system in your country/region.

5.2.19 Digital Zoom

You can zoom in the image. The larger the zoom size is, the more blurred the image is.

5.2.20 Scene Mode

There are several sets of image parameters predefined for different installation environments. Select a scene according to the actual installation environment to speed up the display settings.

5.2.21 Local Output

Some camera models support CVBS, SDI, or HDMI output. Set the local output ON or OFF according to the actual device. This is the start of your concept.

5.3 OSD

You can customize OSD (On-screen Display) information such as device name, time/date, font, color, and text overlay displayed on video stream.

Go to OSD setting page: **Configuration > Image > OSD Settings** . Set the corresponding parameters, and click **Save** to take effect.

Character Set

Select character set for displayed information. If Korean is required to display on screen, select **EUC-KR**. Otherwise, select **GBK**.

Displayed Information

Set camera name, date, week, and their related display format.

Text Overlay

Set customized overlay text on image.

OSD Parameters

Set OSD parameters, such as Display Mode, OSD Size, Font Color, and Alignment.

5.4 VCA Rule Display Settings

The VCA rule display refers to the function that you can customize the displayed overlay information of the VCA rule, which includes the font size and line and frame color.

You can go to **Configuration > Image > VCA Rule Display** to select the desired font size, and set the line and frame color.

5.5 Set Privacy Mask

The function blocks certain areas in the live view to protect privacy. No matter how the device moves, the blocked scene will never be seen.

Steps

- 1. Go to privacy mask setting page: Configuration > Image > Privacy Mask.
- 2. Select the channel No.
- 3. Check Enable Privacy Mask.
- 4. Click Draw Area. Drag the mouse in the live view to draw a closed area.

Drag the corners of the area Adjust the size of the area.

Drag the area Adjust the position of the area.

Click Clear All Clear all the areas you set.

5. Click Stop Drawing.

6. Click Save.

5.6 Overlay Picture

Overlay a customized picture on live view.

Before You Start

The picture to overlay has to be in BMP format with 24-bit, and the maximum picture size is 128 × 128 pixel.

Steps

- 1. Go to picture overlay setting page: Configuration > Image > Picture Overlay.
- 2. Select a channel to overlay picture.
- 3. Click **Browse** to select a picture, and click **Upload**.

The picture with a red rectangle will appear in live view after successfully uploading.

- 4. Check Enable Picture Overlay.
- 5. Drag the picture to adjust its position.
- 6. Click Save.

5.7 Set Manual DPC (Defective Pixel Correction)

If the amount of defective pixels in the image is comparatively small and accurate correction is needed, you can correct these pixels manually.

Steps

- 1. Go to Configuration > Image > DPC.
- 2. Select the thermal channel.

- 3. Select manual mode.
- 4. Click the defective pixel on the image, then a cursor shows on the live view.
- 5. Click **Up**, **Down**, **Left**, **Right** to adjust the cursor position to the defective pixel position.
- 6. Click

 , then click

 to correct defective pixel.

 $\widehat{\perp_{\mathbf{i}}}$ Note

- If multiple defective pixels need to be corrected, click

 after locating a defective pixel. Then after locating other pixels, click

 to correct them simultaneously.
- This function is only supported by certain camera models.
- 7. Optional: Click to cancel defective pixel correction.

5.8 Set Picture in Picture

You can overlay the images of two channels and view the image of two channels at the same time.

Steps

- 1. Select a channel number.
- 2. Select the picture in picture mode.

Overlap Mode Partial image of thermal channel is displayed on the full screen of

optical channel. This mode is only supported in Camera 01.

Details Overlay The device displays the details of optical channel on thermal

channel. This mode is only supported in Camera 02.

Optimized
Details Overlay

The device displays more optical details on thermal channel with less palettes color which mainly focuses on the high temperature

target. This mode is only supported in Camera 02.

Note

The function varies according to different models

- 3. In **Details Overlay** or **Optimized Details Overlay**, set the **Fusion Distance** of the target to get the best view of bi-spectrum fusion. It is recommended to use the default value.
- **4. Optional:** In **Optimized Details Overlay**, set the **Image Fusion Ratio** to adjust the ratio of optical details displayed on thermal channel.
- 5. Select a Fusion Type.

Central Fusion The device displays the bi-spectrum fusion of scene center. The

fusion area is 70% of the whole scene.

Full Screen Fusion The device displays the bi-spectrum fusion of the whole scene.

6. Click Save.

Thermal & Optical Bi-spectrum Network Camera User Manual			
Note			
Not all models support this function. Please take the actual product for reference.			

Chapter 6 Video Recording and Picture Capture

This part introduces the operations of capturing video clips and snapshots, playback, and downloading captured files.

6.1 Storage Settings

This part introduces the configuration of several common storage paths.

6.1.1 Set Memory Card

If you choose to store the files to memory card, make sure you insert and format the memory card in advance.

Before You Start

Insert the memory card to the camera. For detailed installation, refer to *Quick Start Guide* of the camera.

Steps

- 1. Go to storage management setting page: Configuration > Storage > Storage Management > HDD Management .
- 2. Select the memory card, and click **Format** to start initializing the memory card. The **Status** of memory card turns to **Normal** from **Uninitialized**, which means the memory card can be used normally.
- **3. Optional:** Define the **Quota** of the memory card. Input the quota percentage for different contents according to your need.
- **4. Optional:** Check to enable **POS Information Storage**, then the device will record the POS information of reflect light filter and forklift filter.

$\overline{}$	\sim			
	•			
		N	~1	٠.
_		IN	OI	ıe

The function is supported when your memory card capacity is 32 GB or above. Formatting the memory card manually is required to reserve 16 GB for POS information.

5. Click Save.

6.1.2 Set NAS

Take network server as network disk to store the record files, captured images, etc.

Before You Start

Get the IP address of the network disk first.

Steps

- 1. Go to NAS setting page: Configuration > Storage > Storage Management > Net HDD.
- 2. Click HDD No.. Enter the server address and file path for the disk.

Server Address

The IP address of the network disk.

File Path

The saving path of network disk files.

Mounting Type

Select file system protocol according to the operation system.

Enter user name and password of the net HDD to guarantee the security if **SMB/CIFS** is selected.

- 3. Click **Test** to check whether the network disk is available.
- 4. Click Save.

6.1.3 Set FTP

You can configure the FTP server to save images which are captured by events or a timed snapshot task.

Before You Start

Get the FTP server address first.

Steps

- 1. Go to Configuration > Network > Advanced Settings > FTP.
- 2. Configure FTP settings.

FTP Protocol

FTP and SFTP are selectable. The files uploading is encrypted by using SFTP protocol.

Server Address and Port

The FTP server address and corresponding port.

User Name and Password

The FTP user should have the permission to upload pictures.

If the FTP server supports picture uploading by anonymous users, you can check **Anonymous** to hide your device information during uploading.

•	
	Note
-	INCHE

If SFTP is used, logging into the FTP server anonymously is now allowed.

Directory Structure

The saving path of snapshots in the FTP server.

- **3.** Click **Upload Picture** or **Upload Video** to enable uploading snapshots or videos to the FTP server.
- 4. Click Test to verify the FTP server.
- 5. Click Save.

6.1.4 Set Cloud Storage

It helps to upload the captured pictures and data to the cloud. The platform requests picture directly from the cloud for picture and analysis. The function is only supported by certain models.

Steps



If the cloud storage is enabled, the pictures are stored in the cloud video manager firstly.

- 1. Go to Configuration > Storage > Storage Management > Cloud Storage .
- 2. Check Enable Cloud Storage.
- 3. Set basic parameters.

Protocol Version The protocol version of the cloud video manager.

Server IP The IP address of the cloud video manager. It supports IPv4

address.

Serve Port The port of the cloud video manager. You are recommended to

use the default port.

AccessKey The key to log in to the cloud video manager.

SecretKey The key to encrypt the data stored in the cloud video manager.

User Name and

Password

The user name and password of the cloud video manager.

Picture Storage

Pool ID

The ID of the picture storage region in the cloud video manager.

Make sure storage pool ID and the storage region ID are the

same.

- 4. Click **Test** to test the configured settings.
- 5. Click Save.

6.2 Video Recording

This part introduces the operations of manual and scheduled recording, playback, and downloading recorded files.

6.2.1 Record Automatically

This function can record video automatically during configured time periods.

Before You Start

Select **Trigger Recording** in event settings for each record type except **Continuous**. See *Event and Alarm* for details.

Steps

\sim	\sim	
1	•	
1		Note
1		INCHE

The function varies according to different models.

- 1. Go to Configuration > Storage > Schedule Settings > Record Schedule .
- 2. Select channel No.
- 3. Check Enable.
- **4.** Select a record type.

$\overline{}$	\sim		
	•		
	-		
		N	AT C
_	_	11.4	ote

The record type is vary according to different models.

Continuous

The video will be recorded continuously according to the schedule.

Motion

When motion detection is enabled and trigger recording is selected as linkage method, object movement is recorded.

Alarm

When alarm input is enabled and trigger recording is selected as linkage method, the video is recorded after receiving alarm signal from external alarm input device.

Motion | Alarm

Video is recorded when motion is detected or alarm signal is received from the external alarm input device.

Motion & Alarm

Video is recorded only when motion is detected and alarm signal is received from the external alarm input device.

Event

The video is recorded when configured event is detected.

- **5.** Set schedule for the selected record type. Refer to <u>Set Arming Schedule</u> for the setting operation.
- **6.** Click **Advanced** to set the advanced settings.

Overwrite

Enable **Overwrite** to overwrite the video records when the storage space is full. Otherwise the camera cannot record new videos.

Pre-record

The time period you set to record before the scheduled time.

Post-record

The time period you set to stop recording after the scheduled time.

Stream Type

Select the stream type for recording.



When you select the stream type with higher bitrate, the actual time of the pre-record and post-record may be less than the set value.

Recording Expiration

The recordings are deleted when they exceed the expired time. The expired time is configurable. Note that once the recordings are deleted, they can not be recovered.

7. Click Save.

6.2.2 Record Manually

Steps

- 1. Go to Configuration > Local.
- 2. Set the **Record File Size** and saving path to for recorded files.
- 3. Click Save.
- 4. Click in the live view interface to start recording. Click if to stop recording.

6.2.3 Playback and Download Video

You can search, playback and download the videos stored in the local storage or network storage.

Steps

- 1. Click Playback.
- 2. Select channel No.
- 3. Set search condition and click Search.

The matched video files showed on the timing bar.

- 4. Click ▶ to play the video files.
 - Click * to clip video files.
 - Click to play video files in full screen. Press ESC to exit full screen.

Thermal & Optical Bi-spectrum Network Camera User Manual

iNote

Go to **Configuration > Local**, click **Save clips to** to change the saving path of clipped video files.

- 5. Click **±** on the playback interface to download files.
 - 1) Set search condition and click Search.
 - 2) Select the video files and then click Download.

Note

Go to **Configuration > Local**, click **Save downloaded files to** to change the saving path of downloaded video files.

6.3 Capture Configuration

The device can capture the pictures manually or automatically and save them in configured saving path. You can view and download the snapshots.

6.3.1 Capture Automatically

This function can capture pictures automatically during configured time periods.

Before You Start

If event-triggered capture is required, you should configure related linkage methods in event settings. Refer to *Event and Alarm* for event settings.

Steps

- 1. Go to Configuration > Storage > Schedule Settings > Capture > Capture Parameters .
- 2. Set the capture type.

Timing

Capture a picture at the configured time interval.

Event-Triggered

Capture a picture when an event is triggered.

- 3. Set the Format, Resolution, Quality, Interval, and Capture Number.
- 4. Refer to Set Arming Schedule for configuring schedule time.
- 5. Click Save.

6.3.2 Capture Manually

Steps

- 1. Go to Configuration > Local.
- 2. Set the **Image Format** and saving path to for snapshots.

Thermal & Optical Bi-spectrum Network Camera User Manual

JPEG

The picture size of this format is comparatively small, which is better for network transmission.

BMP

The picture is compressed with good quality.

- 3. Click Save.
- 4. Click near the live view or play back window to capture a picture manually.

6.3.3 View and Download Picture

You can search, view and download the pictures stored in the local storage or network storage.

Steps

- 1. Click Picture.
- 2. Select channel No.
- 3. Set search condition and click Search.

The matched pictures showed in the file list.

4. Select the pictures then click **Download** to download them.

i Note

Go to **Configuration > Local**, click **Save snapshots when playback** to change the saving path of pictures.

Chapter 7 VCA Resource

VCA resource is a collection of smart functions supported by the device.

7.1 Temperature Measurement

When you enable this function, the device measures the actual temperature of the scene. It alarms when temperature exceeds the temperature threshold value.

7.1.1 Thermography Configuration Flow Chart

This part introduces the process of configuring temperature measurement.

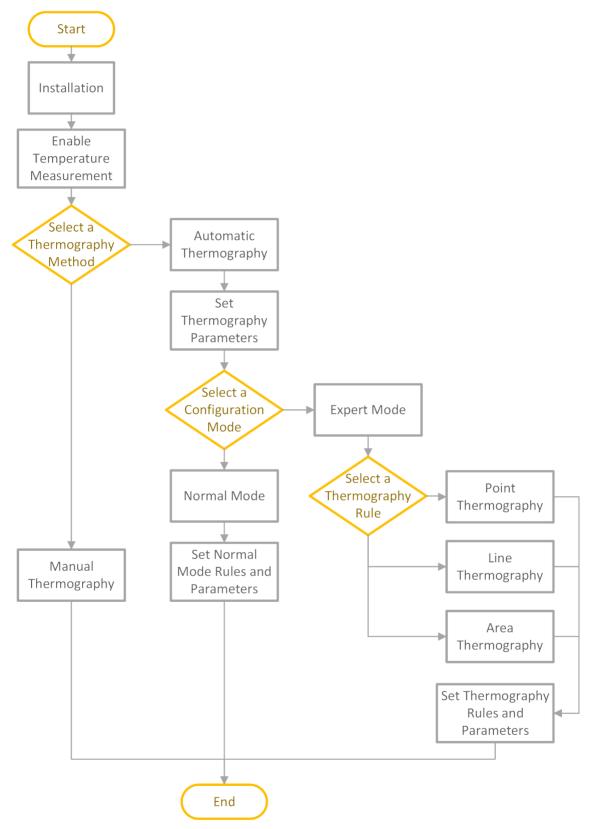


Figure 7-1 Thermography Configuration Flow Chart

Thermal & Optical Bi-spectrum Network Camera User Manual



Please refer to the *Quick Start Guide* for detailed information of Installation part in the flow chart.

7.1.2 Automatic Thermography

Configure the temperature measurement parameters and temperature measurement rules. The device can measure the actual temperature and output alarms when temperature exceeds the alarm threshold value.

Set Thermography Parameters

Configure the parameters of temperature measurement.

Steps

1. Go to Configuration > Local, enable Display Temperature Info.

Display Temperature Info.

Select **Yes** to display temperature information on live view.

Enable Rules to display the rules information on live view.

- 2. Click Save.
- **3.** Go to **Configuration > Temperature Measurement & Fire Prevention > Basic Settings** to configure parameters.

Enable Temperature Measurement

Check to enable temperature measurement function.

Enable Color-Temperature

Check to display Temperature-Color Ruler in live view.

Display Temperature Info. on Stream

Check to display temperature information on the stream.

Display Temperature in Optical Channel

Check to display thermal channel temperature information in the optical channel.

Display Max./Min./Average Temperature

Check to display maximum/minimum/average temperature information on liveview when the temperature measurement rule is line or area.

Rule Name

Display the rule name rather than the rule ID on the live view. You can set the name in expert temperature measurement mode for the rule.

Position of Thermometry Info

Select the position of temperature information showed on the live view.

Near Target

Display the information beside the temperature measurement rule.

Top Left

Display the information on the top left of screen.

Add Original Data on Capture

Check to add data on alarm triggered capture of thermal channel.

Add Original Data on Stream

Add and save original raw data to stream. The function requires higher network bandwidth.

Picture Quality

Set picture quality as high, medium, or low.

Data Refresh Interval

It means the refresh interval of original data.

Display Pixel-to-Pixel Thermometry Data on Stream

Add and save real-time pixel-to-pixel thermometry data to stream. The function requires higher network bandwidth.

The function varies according to different camera models.

Pixel-to-Pixel Thermometry Data Refresh Interval

It means the refresh interval of thermometry data added to the stream.

Unit

Display temperature with Degree Celsius ($^{\circ}$ C)/Degree Fahrenheit ($^{\circ}$ F)/Degree Kelvin (K).

Temperature Range

Select the temperature measurement range. The device can adjust the temperature range automatically if you select **Auto**.

Atmospheric Temperature

Set the atmospheric temperature.

Atmospheric Humidity

Set the atmospheric humidity.

Atmospheric Transmissivity

Set the atmospheric transmissivity from 0 to 1.

Distance Mode

Select the distance mode for temperature measurement.

Self-Adaption

This mode is suitable for moving objects. In this mode, device automatically adjusts parameters according to the distance to objects, so as to ensure temperature measurement accuracy.

Fixed Distance

This mode is suitable for fixed objects or objects moving in a very small area.

Optical Transmissivity

Set the optical transmissivity of external optical material (e.g.: germanium window) to improve the temperature measuring accuracy. This parameter varies according to different camera models.

Calibration Coefficient

Check to enable it and set the value of calibration coefficient to get the temperature of the external window or optical material automatically. The setting range is 0 to 30. This parameter varies according to different camera models.



You can get the setting value from SDK software.

External Optics/Window Correction

Set the temperature of the external window or optical material (e.g.: germanium window) to correct the measured temperature. This parameter varies according to different camera models.

Version

View the version of current algorithm.

Calibration File Version

View the version of calibration file.

Alarm Interval

Set the alarm interval between two alarms.

4. Go to **Temperature Measurement > Advanced Settings > Algorithm Filter** to filter false alarm.

Reflect Light Filter

Enable this function if there is strong reflected light from sun, or it may cause false alarm. The filter sensitivity can be adjusted.

Forklift Filter

Enable this function when there are forklifts or high temperature moving objects, or it may cause false alarm. You can select the filter level to filter out different kinds of objects and set the filtering temperature.

Low

In this level, it only filters the complete forklift.

Medium

In this level, it filters the complete forklift and all moving objects, such as a partially covered but moving forklift in operation.

High

In this level, it filters the complete forklift, all moving objects, and still objects after movement whose temperature are higher than the pre-alarm temperature.

Smoking Filter

Enable this function to filter out high temperature alarms triggered by smoking.

Display Filtering Status

An OSD will be displayed when the function is enabled.

Restart Algorithm Library

Click **Restart** to restart the algorithm library of the corresponding filter function.

ો Note

- The Smoking Filter and Forklift Filter vary according to different camera models.
- Perimeter Protection, Smoke Detection and Forklift Filter are mutually exclusive.

5. Click Save.

Set Normal Mode

This function is used to measure the temperature of the whole scene and alarm.

Steps

- 1. Go to Configuration > Temperature Measurement & Fire Prevention > Basic Settings , and check Enable Temperature Measurement.
- 2. Refer to **Set Thermography Parameters** to set the parameters.
- 3. Go to Configuration > Temperature Measurement & Fire Prevention > Advanced Settings, and select Normal.
- **4.** Configure the parameters of normal mode.

Emissivity

Set the emissivity of your target. The emissivity of each object is different.

Distance

The distance between the target and the device.

Pre-Alarm Threshold and Filtering Time

When the temperature of target exceeds the **Pre-Alarm Threshold** and this status lasts not shorter than the **Filtering Time**, the pre-alarm is triggered.

Alarm Threshold and Filtering Time

When the temperature of target exceeds the **Alarm Threshold**, and this status lasts not shorter than the **Filtering Time**, the alarm is triggered.

Pre-Alarm Output and Alarm Output

Check **Pre-Alarm Output** and **Alarm Output** to link the pre-alarm or alarm with the connected alarm device.

Temperature Sudden Change Alarm

When the temperature change exceeds the set sudden change alarm value within the set cycle, the camera triggers an alarm.

Note

Temperature sudden change alarm is only supported by certain device models.

- 5. Refer to <u>Set Arming Schedule</u> for setting scheduled time. Refer to <u>Linkage Method</u> Settings for setting linkage method.
- **6. Optional:** Set the offsite pre-alarm/alarm specially during off-hours when there are less causes of false alarms. You can set the lower alarm threshold to improve the efficiency of quick alarm.

iNote

The function varies according to different camera models.

- 1) Check Enable Offsite.
- 2) Set the offsite pre-alarm/alarm and follow step 4~5 to adjust the pre-alarm/alarm threshold and arming schedule during working hours.

Note

The same parameters and linkage method apply to the two kinds of pre-alarm/alarm, only the threshold and arming schedule vary.

Offsite Pre-Alarm Threshold

When the temperature of target exceeds the **Offsite Pre-Alarm Threshold** during the **Offsite Arming Schedule**, and this status lasts not shorter than the **Filtering Time**, the pre-alarm is triggered.

Offsite Alarm Threshold

When the temperature of target exceeds the **Offsite Alarm Threshold** during the **Offsite Arming Schedule**, and this status lasts not shorter than the **Filtering Time**, the alarm is triggered.

Offsite Arming Schedule

Click and drag the time bar to select the arming off-hours for offsite pre-alarm and alarm.

7. Click Save.

The maximum and minimum temperature will be displayed on the live view.



Go to **Image > VCA Rules Display** to adjust the fonts size and the temperature color of normal, alarm and pre-alarm.

Set Expert Mode

Select the temperature measurement rules from **Point**, **Line**, or **Area** and configure parameters, the device alarms if the alarm rules are met.

Steps

- 1. Go to Configuration > Temperature Measurement & Fire Prevention > Basic Settings , check Enable Temperature Measurement.
- 2. Refer to **Set Thermography Parameters** to set the parameters.
- 3. Go to Configuration > Temperature Measurement & Fire Prevention > Advanced Settings, select Expert.
- **4.** Select and enable the temperature measurement rules. Please refer to <u>Set</u> <u>Thermography Rule</u> for setting the rule.
- **5. Optional:** Click **Area's Temperature Comparison** to set the alarm rules and the temperature.
- 6. Click Save.

The maximum temperature and thermography rules will be displayed on the live view.

Note

Go to **Image > VCA Rules Display** to adjust the font size and the temperature color of normal, alarm and pre-alarm.

7. Enable the scan function of device, such as linear scan to monitor the scene.

Set Thermography Rule

Steps

- 1. Customize the rule name.
- 2. Select the rule **type** to Point, Line, or Area. Then draw a point, line, or area on the interface where the position to be measured.

Point Please refer to *Point Thermography* for detailed configuration.

Line Please refer to *Line Thermography* for detailed configuration.

Area Please refer to *Area Thermography* for detailed configuration.

3. Configure the temperature measurement parameters.

Emissivity

Set the emissivity of the target. The emissivity of the surface of a material is its effectiveness in emitting energy as thermal radiation. Different objects have different emissivity. Refer to *Common Material Emissivity Reference* to search for the target emissivity.

Distance

The distance between the target and the device.

Reflective Temperature

If there is any object with high emissivity in the scene, check and set the reflective temperature to correct the temperature. The reflective temperature should be set the same as the temperature of the high emissivity object.

4. Click and set the Alarm Rule.

Alarm Temperature and Pre-Alarm Temperature

Set the alarm temperature and pre-alarm temperature. E.g., select Alarm Rule as Above (Average Temperature), set the Pre-Alarm Temperature to 50 °C, and set the Alarm Temperature to 55 °C. The device pre-alarms when its average temperature is higher than 50 °C and alarms when its average temperature is higher than 55 °C.

Filtering Time

It refers to the duration time after the target temperature reaches or exceeds the prealarm temperature/alarm temperature.

Tolerance Temperature

Set the tolerance temperature to prevent the constant temperature change to affect the alarm. E.g., set tolerance temperature as 3 °C, set alarm temperature as 55 °C, and set pre-alarm temperature as 50 °C. The device sends pre-alarm when its temperature reaches 50 °C and it alarms when its temperature reaches 55 °C and only when the device temperature is lower than 52 °C will the alarm be cancelled.

Pre-Alarm Output and Alarm Output

When the temperature of target exceeds the pre-alarm or alarm threshold, it triggers the pre-alarm or alarm output of the connected device.

Area's Temperature Comparison

Select two areas and set the comparison rule, and set the temperature difference threshold. The device alarms when the temperature difference meets the setting value.

- 5. Optional: Check Enable Reflect Light Filter and Enable Forklift Filter.
- 6. Refer to <u>Set Arming Schedule</u> for setting scheduled time. Refer to <u>Linkage Method</u> <u>Settings</u> for setting linkage method.
- 7. Optional: Shield certain area from being detected. Refer to <u>Set Temperature</u> <u>Measurement Shield Region</u> for detailed settings.
- **8. Optional:** Set the offsite pre-alarm/alarm specially during off-hours when there are less causes of false alarms. You can set the lower alarm temperature to improve the efficiency of quick alarm.

Note

The function varies according to different camera models.

- 1) Click 🌣 .
- 2) Check Enable Offsite.
- 3) Set the offsite pre-alarm/alarm and follow step 4~5 to adjust the pre-alarm/alarm temperature and arming schedule during working hours.

iNote

The same parameters and linkage method apply to the two kinds of pre-alarm/alarm, only the threshold temperature and arming schedule vary.

Offsite Pre-Alarm Temperature

When the temperature of target exceeds the **Offsite Pre-Alarm Temperature** during the **Offsite Arming Schedule**, and this status lasts not shorter than the **Filtering Time**, the pre-alarm is triggered.

Offsite Alarm Temperature

When the temperature of target exceeds the **Offsite Alarm Temperature** during the **Offsite Arming Schedule**, and this status lasts not shorter than the **Filtering Time**, the alarm is triggered.

Offsite Arming Schedule

Click and drag the time bar to select the arming off-hours for offsite pre-alarm and alarm.

9. Click Save.

Click **Live View**, and select thermal channel to view the temperature and rules information on live view.

Point Thermography

Configure the temperature measurement rule and click any point in live view to monitor the temperature.

Steps

- 1. Click in the live view and a cross cursor shows on the interface.
- 2. Drag the cross cursor to desired position.

Go to **Live View** interface to view the temperature and rule of the point in thermal channel.

Line Thermography

Configure the temperature measurement rule and monitor the maximum temperature of the line.

Steps

- 1. Click and drag the mouse to draw a line in the live view interface.
- 2. Click and move the line to adjust the position.
- 3. Click and drag the ends of the line to adjust the length.

Go to **Live View** interface to view the maximum temperature and rule of the line in thermal channel.

Area Thermography

Configure the temperature measurement rule and monitor the maximum temperature of the area.

Steps

- 1. Click and drag the mouse in the live view to draw the area and right click to finish drawing.
- 2. Click and move the area to adjust the position.
- 3. Drag the corners of the area to adjust the size and shape.

Go to **Live View** interface to view the maximum temperature and rule of the area in thermal channel.

Set Temperature Measurement Shield Region

You can configure areas from being detected.

Steps

- 1. Go to Configuration > Local, and enable Display Shield Area.
- 2. Check Enable Shield Area.
- 3. Click O.
- **4.** Drag the mouse in the live view to draw the area. You can drag the corners of the red rectangle area to change its shape and size.
- **5.** Right click the mouse to stop drawing.
- 6. Optional: Select one area and click x to delete it.
- 7. Click Save.

7.1.3 Manual Thermography

After enable the manual thermography function of the device, you can click any position on the live view to show the real temperature.

Steps

- 1. Go to Configuration > Local and select Display Temperature Info. as Yes.
- 2. Go to Configuration > Temperature Measurement & Fire Prevention > Basic Settings .
- 3. Check Enable Temperature Measurement.
- 4. Click Save.
- **5.** Go to live view interface and select thermal channel, click ③ . Click any position on the interface to show the real temperature.

7.2 Fire and Smoke Detection

The device will trigger and upload alarm when detect the fire source or smoke.

The detection is applied to fire-prevention purposes in scenic region, forest, tunnel and so on. You can configure the detection parameters. When fire source or smoke is detected, the alarm actions will be triggered.



Not all models support the function. Please take the actual product for reference.

7.2.1 Recommended Scene

This part introduces the recommended scenes of fire source detection and helps you select the appropriate scene.

Fire source detection can be applied to indoor and outdoor monitoring with a large detection radius. To achieve the best monitoring effect, please set the installation place as requirements below.

- The installation place should be the highest position within the detection area. The lens should not be covered during movement to detect the maximum area.
- It is better to choose the installation place with convenient traffic, well-equipped power and internet facilities (e.g., communication tower, watchtower and high-rise roof).

7.2.2 Set Fire and Smoke Detection

To avoid the potential fire source and smoke damage simultaneously, you can configure the function for certain areas. The detail configuration steps show as below.

Before You Start

Go to Configuration > System > Maintenance > VCA Resource Type , select Temperature Measurement + Fire and Smoke Detection.

Steps

- 1. Go to Configuration > Event > Smart Event , select Fire and Smoke Detection.
- 2. Check Enable Fire and Smoke Detection.
- 3. Select Fire and Smoke Detection Mode.

Detection Mode	Mode Description	Configuration Description
Fire or Smoke	The system alarms when device is triggered either by Fire Source Detection or Smoke Detection.	Set Fire Source Detection and Smoke Detection, see step 4.
Fire and Smoke	The system alarms when device is triggered both by Fire Source Detection and Smoke Detection or either of them.	
Double Confirm	The system alarms when device is triggered both by Fire Source Detection and Smoke Detection.	
Specified Fire Source	The system alarms when device is triggered only by Fire Source Detection.	Set Fire Source Detection, see step 4.
Specified Smoke	The system alarms when device is triggered only by Smoke Detection.	Set Smoke Detection , see step 4.

Note

Fire or Smoke, Fire and Smoke and Double Confirm are mutually exclusive with temperature measurement function.

4. Set Fire Source Detection and Smoke Detection.

Detection

Parameter Description

Function

Fire Source Alarm Interval

Detection

Set the alarm interval between two alarms. The smaller the value is,

the higher the detection frequency is.

Picture Quality

Set quality of the alarm capture. The better the quality is, the sharper the image is, and the larger the file size is.

Fire Source Detection

Dynamic Fire detects the dynamic fire source and **Smoking Mode** detects the smoking behavior in the scene.

Note

Smoking Mode is not supported in Fire and Smoke and Double Confirm.

Display Fire Source Frame on Stream

Display a red frame around the fire source on stream when fire occurs.

Sensitivity

The higher the value is, the more easily the fire source of lower temperature can be detected, and the higher the false alarm rate is.

Smoke Detection

Display Smoke Source Frame on Stream

Display a red frame around the smoke source on stream when smoke occurs.

Sensitivity

The higher the value is, the more easily the smoke can be detected, and the higher the false alarm rate is.

Verification Sensitivity

The higher the value is, the more quickly the device can double-check and identify the smoke, and the higher the false alarm rate is.

- **5. Optional:** Go to **Smart Event > Smoke Detection Shield**. You can shield certain areas from being detected in smoke detection, refer to **Set Detection Shield Region**.
- Refer to <u>Set Arming Schedule</u> for setting scheduled time. Refer to <u>Linkage Method</u> <u>Settings</u> for setting linkage method.
- 7. Click Save.

7.2.3 Set Dynamic Fire Source Detection

To avoid the potential fire damage, you can configure the fire detection function for certain areas. The detail configuration steps show as below.

Before You Start

Go to Configuration > System > Maintenance > VCA Resource Type , select Temperature Measurement + Perimeter Protection.

Steps

- 1. Go to Configuration > Local.
- 2. Check Locate Highest Temperature Point to display the position of highest temperature. Check Frame Fire Point to frame the fire source on live view.
- 3. Go to Configuration > Event > Smart Event , select Dynamic Fire Source Detection.
- 4. Check Enable Dynamic Fire Source Detection.
- 5. Set the parameters of fire detection.

Fire Source Detection

Smoking Mode

Detect smoking behavior in the scene.

Sensitivity

The sensitivity of fire detection. The bigger the value is, more easily the fire source can be detected, and the false rate is higher.

Alarm Interval

Set the alarm interval between two alarms.

Picture Quality

Set picture quality as high, medium, or low.

iNote

When VCA Resource Type is selected as Temperature Measurement + Perimeter Protection, only Smoking Mode is supported in Fire Source Detection. When VCA Resource Type is selected as Temperature Measurement + Fire and Smoke Detection, Dynamic Fire is also supported in Fire Source Detection.

- **6.** Check **Display Fire Source Frame on Stream** to display a red frame around the fire source on stream when fire occurs.
- **7. Optional:** Go to **Smart Event > Fire Source Region Shield**. You can shield certain areas from being detected in fire source detection, refer to **Set Detection Shield Region**.
- 8. Refer to <u>Set Arming Schedule</u> for setting scheduled time. Refer to <u>Linkage Method</u> <u>Settings</u> for setting linkage method.
- 9. Click Save.

7.2.4 Set Detection Shield Region

Steps

- 1. Go to Configuration > Local, and enable Display Shield Area.
- 2. Check to enable the function.
- 3. Click **Draw Area** and drag the mouse in the live view to draw the area. Release the mouse to finish drawing. You can drag the corners of the red rectangle area to change its shape and size or drag the rectangle to the position on your demand.
- 4. Click Stop Drawing. You can click Clear All to clear all of the setting areas.

- 5. Check **Display Shield Area** to show the shield area on the live view.
- **6.** Click **Add** to save the fire detection shield, and it will be listed in the list. You can select a region and click **Delete** to delete it from the list. You can also enable the region or not.
- 7. Click Save.

7.3 Perimeter Protection

The function is used to detect whether there is any target breaking the perimeter protection rules. The device will track the target and alarm when the perimeter protection rule is triggered.

7.3.1 Set Perimeter Protection Rules

The device can detect whether there is any target breaking the perimeter protection rules. The device will alarm when the rule is triggered.

Before You Start

Go to Configuration > System > Maintenance > VCA Resource Type , select Temperature Measurement + Perimeter Protection.

Steps

- 1. Go to Configuration > Perimeter Protection > Rule.
- 2. Check Intelligent Analysis.
- 3. Optional: Check Enable Fusion to view optical and thermal image.
- 4. Set perimeter protection rules.
 - 1) Click + to add a new rule.
 - 2) Enter the rule name, and click the drop down menu to select **Rule Type**.

Line Crossing

If any target moves across the setting line, the alarm will be triggered. You can set the crossing direction.

Intrusion

If any target intrudes into the pre-defined region longer than the set duration, the alarm will be triggered.

Region Entrance

If any target enters the pre-defined region, the alarm will be triggered.

Region Exiting

If any target exits the pre-defined region, the alarm will be triggered.

3) Draw the detection rule.

Line Crossing

- a. Click / to draw a line in the live view.
- b. You can drag end points of the line to adjust the position and length.
- c. Set the crossing direction. Bidirectional, A-to-B, or B-to-A are selectable.
- d. Set **Sensitivity**. The higher the value is, the easier the target can be detected.

Intrusion

- a. Click O to draw an area in the live view. Right click the mouse to finish drawing.
- b. Set **Duration**. When a target intrudes into the set area and stays in the area for more than the set duration, the device triggers an intrusion alarm.
- c. Set **Sensitivity**. The higher the value is, the easier the target can be detected.

Region Entrance and Region Exit

a. Click O to draw an area in the live view. Right click the mouse to finish drawing. It is recommended to draw three different areas covering the whole detection scene from near to far.

iNote

The recommended drawing is optional for some camera models, refer to the pop-up operation guide after you checked **Intelligent Analysis**.

- b. Target that enters or exits the set area triggers the region entrance or region exit alarm.
- 4) Set other parameters for the rule.

Target Detection

You are recommended to select the target as Human & Vehicle.

Scene Mode

The scene mode is set to be **General** by default. Select **Distant View** when you are far from the targets. Select **Leaves Interfered View** when there are shaking targets in the scene, such as leaves.

Note

In distance view, the device cannot classify the target with pixels less than 10*10. The target will be recognized as human directly. So the selection of this item will increase trigger false alarm rate but decrease missing alarm rate.


Background Interference Suppression

Eliminate the environment interference to reduce the false alarm. For example, the false alarms caused by wind blowing grass.

☑i≀Note

The parameter is available in optical channel.

Filter by Pixel

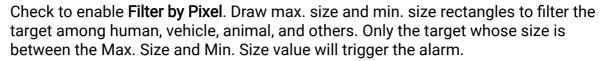

iNote

- The filter configuration is optional for some camera models, refer to the pop-up operation guide after you checked Intelligent Analysis.
- You can draw the max. size and min. size rectangles according to the real target in the scene. The recommended size is 1.2 times of the target.
- 5) Repeat steps above to configure other rules.

iNote

You can click lit to copy the same settings to other rules.

- 6) Click Save.
- **5. Optional:** Add more rules and set combined event. This function is used to combine multiple events as alarm conditions of the rule and it only triggers alarm when the rule and all the conditions are triggered simultaneously.
 - 1) Check Alarm Trigger Condition.
 - 2) Select the condition type. Enable an event first then you can select it as the alarm condition.
 - 3) Select the event according to the selected condition type. Click Save.

iNote

- Once a rule has been set as the alarm trigger condition of other rules, it is not supported to set its own trigger condition.
- Alarm trigger conditions cannot be the same of one rule.
- 6. Set Arming Schedule and Linkage Method Settings for each rule.
- 7. Optional: You can shield certain areas from being detected. Refer to <u>Set Perimeter</u> <u>Protection Shield Region</u> for detailed settings.
- **8. Optional:** Set displayed VCA information on stream or picture. Refer to <u>Set Overlay & Capture Parameters</u> for detailed settings.
- **9. Optional:** Calibrate the camera to improve the accuracy. Refer to <u>Calibration</u> for detailed settings.

7.3.2 Set Perimeter Protection Shield Region

You can configure areas from being detected.

Steps

- 1. Go to Configuration > Local, and enable Display Shield Area.
- 2. Go to Configuration > Perimeter Protection > Shield Region.
- 3 Click O.

- **4.** Drag the mouse in the live view to draw the area. You can drag the corners of the red rectangle area to change its shape and size.
- 5. Right click the mouse to stop drawing.
- 6. Optional: Select one area and click x to delete it.
- 7. Click Save.

7.3.3 Set Overlay & Capture Parameters

Steps

1. Go to Configuration > Perimeter Protection > Overlay & Capture .

Display VCA Info. on Stream

Select to display target info and rule on stream, the information will be added to the video stream, and the overlay will be displayed if you get live view or play back by the VS Player.

Display Trajectory

The target's moving path will be shown in live view.

Display Target Info. on Alarm Picture

Select to display the target information on the alarm picture.

Display Rule Info. on Alarm Picture

Select to display the rule information on the alarm picture.

Display Size Info. on Alarm Picture

Select to display the size information of the target on the alarm picture.

Snapshot Settings

Select to upload the picture to the surveillance center when the alarm occurs. You can also set the quality and resolution of the picture separately.

2. Click Save.

Go to **Configuration > Local**, check **Enable** rules to display rules information on the live view.

7.3.4 Calibration

You can calibrate the camera first to improve the detection accuracy of perimeter protection. The calibration is optional, take the actual condition for reference.

\sim	\sim	
	•	
1		Note
١ ـ	_	inote

The function and the path to the calibration page vary according to different camera models.

Calibrate the Camera

Steps

1. Go to Configuration > Perimeter Protection > Camera Calibration or Configuration > Perimeter Protection > Advanced Configuration .

 $\widehat{\perp_{\mathbf{i}}}$ Note

The path varies according to different camera models.

- 2. Check Camera Calibration.
- 3. Select Calibration Mode.
 - For Self-Learning Calibration, see Self-Learning Calibration.
 - For Traditional Calibration, see Calibrate Automatically and Calibrate Manually.

i Note

The function varies according to different camera models. If **Calibration Mode** is not supported, see *Calibrate Automatically* and *Calibrate Manually*.

Self-Learning Calibration

The self- learning calibration allows a camera calibration based on the automatic analysis of people height data.

Steps

- 1. Select Filter Level. The higher the level is, the more easily the alarm can be triggered.
- **2.** Check **Camera Calibration**. The device will automatically record and analyze the height range of people at different positions, filtering out the target out of the range.
- 3. The calibration area is divided into 20 rows. There needs to be a person walking back and forth twice in the white area (uncalibrated) until all the lines turn to green (calibrated). You can pause the calibration process or recalibrate.

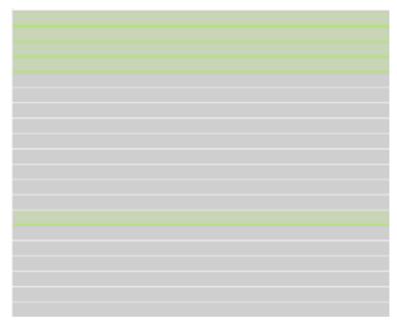


Figure 7-2 Calibration Area Lines

4. Optional: Check Manual Correction and adjust the height range manually.

ાંNote

Manual correction requires enough self-learning calibration time or targets.

- 1) Select Fig N (1~4).
- 2) You can click Previous or Next to change the target of each figure.
- 3) Input the actual height of the target. Click Save.

Calibrate Automatically

Before You Start

- Make sure that you have known the actual height of the target person in the scene.
- Make sure there is no moving objects in the view except for the person.

Steps

1. Go to Configuration > Perimeter Protection > Camera Calibration or Configuration > Perimeter Protection > Advanced Configuration.

iNote

The path varies according to different camera models.

- 2. Check Camera Calibration.
- 3. When the person is totally seen in live view, enter the height of person in Target Height.

	Note
	You can set a maximum of two decimal places.
4.	Click ▶ to start calibration.
	 Caution The auto calibration starts when the person is totally seen in live view, and ends when the person is in the endpoint. The endpoint-to-camera distance (m) equals 4 times the lens focal length (mm). E.g, for 7mm lens, the recommended endpoint is 28m (7*4). The person should walk in zigzag path. And two zigzag paths are required. Make sure the walking route covers the left, middle, right of image. The auto calibration duration should be no shorter than 10 sec, and no longer than 10 min. The device will stop calibration automatically if the duration is too long. If there is moving object such as leave or tree in the scene, you can set the shielded area. Refer to Set Temperature Measurement Shield Region for detail settings.
5.	When the person exits, click to stop calibration.
	After auto calibration, refer to <u>Verify the Calibration Result</u> to verify if the calibration is successful. Set manual calibration if the auto calibration failed, or the verified result turns bad.
R	esult
A [.]	fter calibration, the height and angle of camera will be shown in live view.
	alibrate Manually
	teps Go to Configuration > Perimeter Protection > Camera Calibration or Configuration > Perimeter Protection > Advanced Configuration.
	Note
	The path varies according to different camera models.
3. 4.	Check Manual Calibration. Click Fig 1. Click and drag the vertical line until it fits the target. Enter the actual length of the calibration line. Repeat steps above to set Fig 2, Fig 3, and Fig 4.
	Note
	Draw a calibration line in each figure, and the four calibration lines should be evenly distributed in the same horizontal plane from left to right.

In the four figures, the calibrated object doesn't need to be the same. Select a proper object in each figure.

- 6. Optional: Click x to delete the calibration line.
- 7. Click Save.



- Separate 4 vertical lines in the optical-axis direction at the close site, middle and far site respectively.
- Separate 4 vertical lines at the left, middle and right of the image respectively.
- If manual calibration's result is incorrect, select another target to recalibrate.
- After manual calibration, refer to <u>Verify the Calibration Result</u> to verify if the calibration is successful.

Result

After calibration, the height and angle of camera will be shown in live view.

Verify the Calibration Result

The function can verify whether the calibrated value is consistent with the actual value.

Steps

- 1. Click .
- 2. Click , and drag a vertical line in the view.
- 3. Move the line to the target, then click to calculate the length.

 Compare the calculated line length to the actual length to verify the calibration settings.
- 4. Click + to exit.



Verify not only person, but also other objects appeared in the view. Such as car, street lamp, etc.

7.3.5 Set Advanced Configuration Parameters


Go to **Configuration > Perimeter Protection > Advanced Configuration** and configure the parameters.

Detection Parameters

Single Alarm

The system only sends alarm once for one target triggering. Otherwise, the alarm will be triggered continuously until the target disappears.

Activation Period

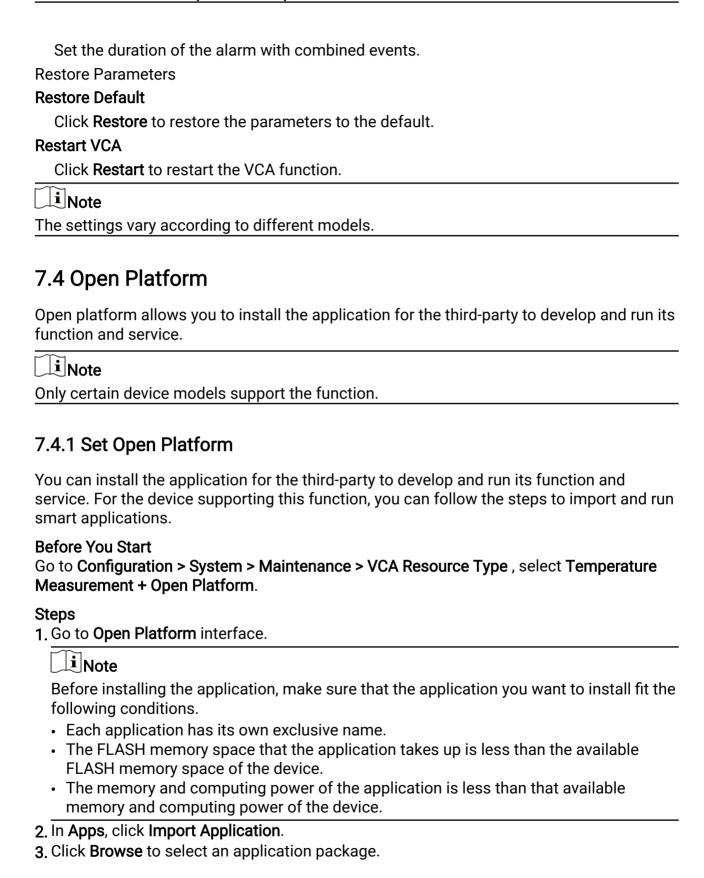

- **4.** Click **Import** to import the package. You can click the APP to view relevant details.
- 5. Optional: Set application.

Click C	Enable or disable the application.
Click X	Delete the application.
Click Download Logs	Export log.
Click Update	Browse a local path and import an application package to update the application.



Figure 7-3 Set VCA Resource

Chapter 8 Event and Alarm

This part introduces the configuration of events. The device takes certain response to triggered alarm. Certain events may not be supported by certain device models.

8.1 Set Motion Detection

It helps to detect the moving objects in the detection region and trigger the linkage actions.

Steps

- 1. Go to Configuration > Event > Basic Event > Motion Detection .
- 2. Select the channel No.
- 3. Check Enable Motion Detection.
- **4. Optional:** Highlight to display the moving object in the image in green.
 - 1) Check Enable Dynamic Analysis for Motion.
 - 2) Go to Configuration > Local.
 - 3) Set Rules to Enable.
- 5. Select Configuration Mode, and set rule region and rule parameters.
 - For the information about normal mode, see *Normal Mode*.
 - For the information about expert mode, see *Expert Mode*.
- **6.** Set the arming schedule and linkage methods. For the information about arming schedule settings, see <u>Set Arming Schedule</u>. For the information about linkage methods, see <u>Linkage Method Settings</u>.
- 7. Click Save.

8.1.1 Normal Mode

You can set motion detection parameters according to the device default parameters.

Steps

- 1. Select normal mode in **Configuration**.
- **2.** Set the sensitivity of normal mode. The higher the value of sensitivity is, the more sensitive the motion detection is. If the sensitivity is set to *0*, motion detection and dynamic analysis do not take effect.
- **3**. Set **Detection Target**. Human and vehicle are available. If the detection target is not selected, all the detected targets will be reported, including the human and vehicle.
- **4.** Click **Draw Area**. Click and drag the mouse on the live video, and then release the mouse to finish drawing one area.

Stop Drawing Stop drawing one area.

Clear All Clear all the areas.

5. Optional: You can set the parameters of multiple areas by repeating the above steps.

8.1.2 Expert Mode

You can configure the motion detection parameters of day/night switch according to the actual needs.

Steps

- 1. Select expert mode in Configuration.
- 2. Set parameters of expert mode.

Scheduled Image Settings

OFF: Switch is disabled.

Auto-Switch: The system switches day/night mode automatically according to environment. It displays colored image at day and black and white image at night. Scheduled-Switch: The system switches day/night mode according to the schedule. It switches to day mode during the set periods and switches to night mode during the other periods.



This function is not supported in the expert mode of thermal channel.

Sensitivity

The higher the value of sensitivity is, the more sensitive the motion detection is. If the sensitivity is set to θ , motion detection and dynamic analysis do not take effect.

3. Select an **Area** and click **Draw Area**. Click and drag the mouse on the live video, then release the mouse to finish drawing one area.

Stop Drawing Finish drawing one area.

Clear All Delete all the areas.

4. Optional: Repeat the above steps to set multiple areas.

8.2 Set Video Tampering Alarm

When the configured area is covered and cannot be monitored normally, the alarm is triggered and the device takes certain alarm response actions.

Steps

- 1. Go to Configuration > Event > Basic Event > Video Tampering .
- 2. Select the channel number.
- 3. Check Enable.
- **4.** Set the **Sensitivity**. The higher the value is, the easier to detect the area covering.
- 5. Click **Draw Area** and drag the mouse in the live view to draw the area.

Stop Drawing Finish drawing.



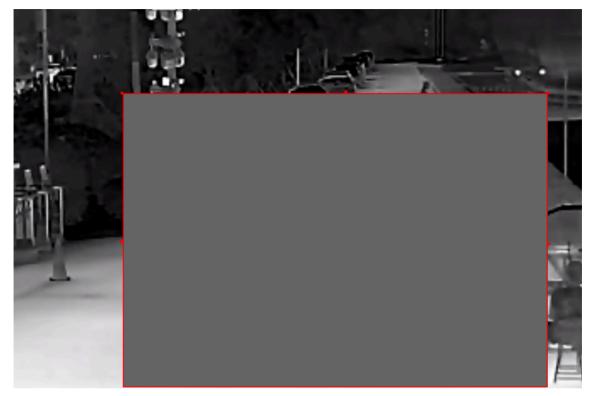


Figure 8-1 Set Video Tampering Area

- 6. Refer to <u>Set Arming Schedule</u> for setting scheduled time. Refer to <u>Linkage Method</u> <u>Settings</u> for setting linkage method.
- 7. Click Save.

8.3 Set Alarm Input

Alarm signal from the external device triggers the corresponding actions of the current device.

Before You Start

Make sure the external alarm device is connected. See *Quick Start Guide* for cable connection.

Steps

- 1. Go to Configuration > Event > Basic Event > Alarm Input.
- 2. Check Enable Alarm Input Handling.
- 3. Select Alarm Input NO. and Alarm Type from the dropdown list. Edit the Alarm Name.
- **4.** Refer to <u>Set Arming Schedule</u> for setting scheduled time. Refer to <u>Linkage Method</u> <u>Settings</u> for setting linkage method.
- **5.** Click **Copy to...** to copy the settings to other alarm input channels.

6. Click Save.

8.4 Set Exception Alarm

Exception such as network disconnection can trigger the device to take corresponding action.

Steps

1. Go to Configuration > Event > Basic Event > Exception .

2. Select Exception Type.

HDD Full The HDD storage is full.HDD Error Error occurs in HDD.Network Disconnected The device is offline.

IP Address Conflicted The IP address of current device is same as that of other

device in the network.

Illegal Login Incorrect user name or password is entered.

3. Refer to Linkage Method Settings for setting linkage method.

4. Click Save.

8.5 Detect Audio Exception

Audio exception detection function detects the abnormal sound in the scene, such as the sudden increase/decrease of the sound intensity, and some certain actions can be taken as response.

Steps

- 1. Go to Configuration > Event > Smart Event > Audio Exception Detection .
- 2. Select one or several audio exception detection types.

Audio Loss Detection

Detect sudden loss of audio track.

Sudden Increase of Sound Intensity Detection

Detect sudden increase of sound intensity. **Sensitivity** and **Sound Intensity Threshold** are configurable.



- The lower the sensitivity is, the more significant the change should be to trigger the detection.
- The sound intensity threshold refers to the sound intensity reference for the detection. It is recommended to set as the average sound intensity in the environment. The louder the environment sound, the higher the value should be. You can adjust it according to the real environment.

Sudden Decrease of Sound Intensity Detection

Detect sudden decrease of sound intensity. **Sensitivity** is configurable.

- 3. Refer to <u>Set Arming Schedule</u> for setting scheduled time. Refer to <u>Linkage Method</u> <u>Settings</u> for setting linkage methods.
- 4. Click Save.

$\overline{}$	\sim		
	•		
	-		
		NI	ote
_	_	IИ	ULE

The function varies according to different models.

8.6 Detect Scene Change

Scene change detection function detects the change of the scene. Some certain actions can be taken when the alarm is triggered.

Steps

- 1. Go to Configuration > Event > Smart Event > Scene Change Detection .
- 2. Click Enable.
- **3.** Set the **Sensitivity**. The higher the value is, the more easily the change of scene can be detected. But the detection accuracy is reduced.
- **4.** Refer to <u>Set Arming Schedule</u> for setting scheduled time. Refer to <u>Linkage Method</u> <u>Settings</u> for setting linkage method.
- 5. Click Save.

_	\sim	1
	•	
		Note
		NOTA
$\overline{}$	\sim	1106

The function varies according to different models.

Chapter 9 Arming Schedule and Alarm Linkage

Arming schedule is a customized time period in which the device performs certain tasks. Alarm linkage is the response to the detected certain incident or target during the scheduled time.

9.1 Set Arming Schedule

Set the valid time of the device tasks.

Steps

- 1. Click Arming Schedule.
- 2. Drag the time bar to draw desired valid time.

Note

Up to 8 periods can be configured for one day.

- 3. Adjust the time period.
 - Click on the selected time period, and enter the desired value. Click Save.
 - Click on the selected time period. Drag the both ends to adjust the time period.
 - Click on the selected time period, and drag it on the time bar.
- **4. Optional:** Click **Copy to...** to copy the same settings to other days.
- 5. Click Save.

9.2 Linkage Method Settings

You can enable the linkage functions when an event or alarm occurs.

9.2.1 Trigger Alarm Output

If the device has been connected to an alarm output device, and the alarm output No. has been configured, the device sends alarm information to the connected alarm output device when an alarm is triggered.

Steps

- 1. Go to Configuration > Event > Basic Event > Alarm Output.
- 2. Set alarm output parameters.

Automatic Alarm For the information about the configuration, see Automatic Alarm.

Manual Alarm For the information about the configuration, see <u>Manual Alarm</u>.

3. Click Save.

4. Go to **Live View**. You can click **■** for a quick alarm output configuration and check to enable **Manual Alarm** or turn it off.

Automatic Alarm

Set the automatic alarm parameters, then the device triggers an alarm output automatically in the set arming schedule.

Steps

1. Set automatic alarm parameters.

Alarm Output No.

Select the alarm output No. according to the alarm interface connected to the external alarm device.

Alarm Name

Custom a name for the alarm output.

Delay

It refers to the time duration that the alarm output remains after an alarm occurs.

- 2. Set the alarming schedule. For the information about the settings, see <u>Set Arming</u> Schedule.
- 3. Click Copy to... to copy the parameters to other alarm output channels.
- 4. Click Save.

Manual Alarm

You can trigger an alarm output manually.

Steps

1. Set the manual alarm parameters.

Alarm Output No.

Select the alarm output No. according to the alarm interface connected to the external alarm device.

Alarm Name

Edit a name for the alarm output.

Delay

Select Manual.

- 2. Click Manual Alarm to enable manual alarm output.
- 3. Optional: Click Clear Alarm to disable manual alarm output.

Alarm Output Self-check

You can enable the function to regularly self-check the connection between the device and the alarm server.

Steps

- 1. Check Enable Auto Trigger.
- 2. Set **Trigger Time**, and the device will trigger an alarm output to the alarm server automatically in the set time.
- **3.** Set **Auto Trigger Delay**. It refers to the time duration that the alarm output remains in effect after the auto trigger.
- 4. Click Save.

9.2.2 FTP/NAS/Memory Card Uploading

If you have enabled and configured the FTP/NAS/memory card uploading, the device sends the alarm information to the FTP server, network attached storage and memory card when an alarm is triggered.

Refer to Set FTP to set the FTP server.

Refer to **Set NAS** for NAS configuration.

Refer to **Set Memory Card** for memory card storage configuration.

9.2.3 Send Email

Check **Send Email**, and the device sends an email to the designated addresses with alarm information when an alarm event is detected.

For email settings, refer to Set Email.

Set Email

When the email is configured and **Send Email** is enabled as a linkage method, the device sends an email notification to all designated receivers if an alarm event is detected.

Before You Start

Set the DNS server before using the Email function. Go to **Configuration > Network > Basic Settings > TCP/IP** for DNS settings.

Steps

- 1. Go to email settings page: Configuration > Network > Advanced Settings > Email .
- 2. Set email parameters.
 - 1) Input the sender's email information, including the **Sender's Address**, **SMTP Server**, and **SMTP Port**.

- 2) **Optional**: If your email server requires authentication, check **Authentication** and input your user name and password to log in to the server.
- 3) Set the E-mail Encryption.
 - When you select **SSL** or **TLS**, and disable STARTTLS, emails are sent after encrypted by SSL or TLS. The SMTP port should be set as 465.
 - When you select **SSL** or **TLS** and **Enable STARTTLS**, emails are sent after encrypted by STARTTLS, and the SMTP port should be set as 25.

Note

If you want to use STARTTLS, make sure that the protocol is supported by your email server. If you check the **Enable STARTTLS** while the protocol is not supported by your email sever, your email is sent with no encryption.

- 4) **Optional:** If you want to receive notification with alarm pictures, check **Attached Image**. The notification email has 3 attached alarm pictures about the event with configurable image capturing interval.
- 5) Configure Alarm E-mail Attachment Settings.

Image

Select the number of captures of the corresponding channel.

- 0: It will not upload the image of the selected channel.
- 1: It will only upload the image captured when the alarm is triggered.
- 3: It will upload the images captured about 1 s before and after the alarm is triggered, as well as the image captured when the alarm is triggered.

Video

Select the video channel and video duration as required.

- 0 s: It will not upload the video of the selected channel.
- 3 s: Upload the video that is recorded about 1 s before and 2 s after the alarm is triggered.
- 5 s: Upload the video that is recorded about 2 s before and 3 s after the alarm is triggered.
- 7 s: Upload the video that is recorded about 2 s before and 5 s after the alarm is triggered.
- 6) Input the receiver's information, including the receiver's name and address.
- 7) Click **Test** to see if the function is well configured.
- 3. Click Save.

9.2.4 Notify Surveillance Center

Check **Notify Surveillance Center**, the alarm information is uploaded to the surveillance center when an alarm event is detected.

9.2.5 Trigger Recording

Check **Trigger Recording**, and the device records the video about the detected alarm event. For device with more than one camera channels, you can set one or more channels to take recordings if needed.

For recording settings, refer to *Video Recording and Picture Capture*.

9.2.6 External Alarm Module

You can connect the device with the external alarm module to send alarm to the external device.

Steps

- 1. Go to Configuration > Event > Basic Event > External Alarm Module .
- 2. Click Add to add an external device.
- **3.** Select the protocol, and enter **Device IP**, **Management Port**, **Transfer Protocol**. For Arteco protocol, you should enter extra **User Name** and **Password**.
- 4. Click OK.
- **5. Optional:** Select the added device, click **Modify** to edit the device information, or click **Delete** to delete it from the list.
- 6. Click to add alarm input and output rules.

9.2.7 Module Order

You can connect the device with the third-party alarm host based on the customized module order, such as HTTP order.

Steps

- 1. Go to Configuration > Event > Basic Event > Module Order.
- 2. Go to HTTP Order and check Enable.
- **3**. Select the HTTP order from the list and input URL to configure the HTTP server. Up to 10 HTTP orders are supported.
- 4. Optional: Input the username and password if required.
- 5. Click **Test** to test the HTTP server connection.

You can select configured HTTP orders as the linkage method of smart events including **Alarm Input, Perimeter Protection**, and **Temperature Measurement**. The alarm or prealarm information will upload to the selected HTTP server.

iNote	
HTTP order linkage is only supported when you check Enable .	

9.2.8 Set Audible Alarm Output

When the device detects targets in the detection area, audible alarm can be triggered as a warning.

Steps

- 1. Go to Configuration > Event > Basic Event > Audible Alarm Output.
- 2. Select an Alarm Type.
- 3. Select **Sound Type** and set related parameters.
 - Select **Warning** and its contents. Set the alarm times you need.
 - Select **Custom Audio**. You can select a custom audio file from the drop-down list. If no file is available, you can click **Add** to upload an audio file that meets the requirement. Up to six audio files can be uploaded, and each audio file shall not exceed 512 KB.
- 4. Optional: Click Test to play the selected audio file on the device.
- 5. Set arming schedule for audible alarm. See Set Arming Schedule for details.
- 6. Click Save.

	\sim	1	
l	•		
		N.	ote
		IN	OTE
	_		-

The function is only supported by certain device models.

9.2.9 Set Flashing Alarm Light Output

Steps

- 1. Go to Configuration > Event > Basic Event > Flashing Alarm Light Output .
- 2. Select a White Light Mode.

Mode Description

Flashing Alarm triggers the light to flash for a certain duration. Set the flashing speed in **Flashing Frequency**.

Solid Alarm triggers the light to turn on for a certain duration.

3. Set the light action duration and the brightness.

Flashing Duration

The time period of light on or light flashing when one alarm happens.

Brightness

The brightness of the light.

- 4. Edit the arming schedule.
- 5. Click Save.

\sim	\sim		
	i -	I N I	ote
	■	IN	NTO
_	_		ULC

Only certain camera models support the function.

Chapter 10 System and Security

It introduces system maintenance, system settings and security management, and explains how to configure relevant parameters.

10.1 View Device Information

You can view device information, such as Device No., Model, Serial No. and Firmware Version.

Enter Configuration > System > System Settings > Basic Information to view the device information.

10.2 Search and Manage Log

Log helps locate and troubleshoot problems.

Steps

- 1. Go to Configuration > System > Maintenance > Log.
- 2. Set search conditions Major Type, Minor Type, Start Time, and End Time.
- 3. Click Search.

The matched log files will be displayed on the log list.

4. Optional: Click Export to save the log files in your computer.

10.3 Import and Export Configuration File

It helps speed up batch configuration on other devices with the same configuration.

Steps

- 1. Export configuration file.
 - 1) Go to Configuration > System > Maintenance > Upgrade & Maintenance .
 - 2) Click **Device Parameters** and input the encryption password to export the current configuration file.
 - 3) Click **Device Common Parameters**, check desired common parameters and input the encryption password to export the current configuration file.
 - 4) Optional: Set the saving path to save the configuration file in local computer.
- 2. Import configuration file.
 - 1) Access the device that needs to be configured via web browser.
 - 2) Go to Configuration > System > Maintenance > Upgrade & Maintenance .
 - 3) Select the imported file type from the drop-down list.

_	_	
	\sim	1
	•	
	▮▮	Nota

You can import the exported **Device Common Parameters** to devices of the same series.

- 4) Click **Browse** to select the saved configuration file.
- 5) Input the encryption password you have set when exporting the configuration file.
- 6) Click Import.

10.4 Export Diagnose Information

Diagnose information includes running log, system information, hardware information.

Go to Configuration > System > Maintenance > Upgrade & Maintenance , and click Diagnose Information to export diagnose information of the device.

You can check **Additional Perimeter Protection Calibration Record** to generate the calibration file with the diagnosis file. The function varies according to different camera models.

10.5 Reboot

You can restart the device via browser.

Go to Configuration > System > Maintenance > Upgrade & Maintenance , and click Reboot.

10.6 Device Auto Maintenance

Set the auto maintenance schedule and the device will automatically restart on schedule, which helps avoid problems such as network anomaly and outage during continuous operation, etc.

Steps

- 1. Go to Configuration > System > Maintenance > Upgrade & Maintenance.
- 2. Check Enable Auto Maintenance.
- 3. Read the prompt information and click **OK**.
- **4.** Select the date and time when the device automatically restart.
- 5. Click Save.

		N	_		_
		IVI	n	П	9
$\overline{}$	\sim		v		·

This function is only available for Administrator.

10.7 Restore and Default

Restore and Default helps restore the device parameters to the default settings.

Steps

- 1. Go to Configuration > System > Maintenance > Upgrade & Maintenance .
- 2. Click Restore or Default according to your needs.

Restore Reset device parameters, except user information, IP parameters and video

format to the default settings.

Default Reset all the parameters to the factory default.

Note

Be careful when using this function. After resetting to the factory default, all the parameters are reset to the default settings.

10.8 Upgrade

Before You Start

You need to obtain the correct upgrade package.



DO NOT disconnect power during the process, and the device restarts automatically after upgrade.

Steps

- 1. Go to Configuration > System > Maintenance > Upgrade & Maintenance .
- 2. Choose one method to upgrade.

Firmware Locate the exact path of the upgrade file.

Firmware Directory Locate the directory which the upgrade file belongs to.

- 3. Click **Browse** to select the upgrade file.
- 4. Click Upgrade.

10.9 View Open Source Software License

Go to Configuration > System > System Settings > About , and click View Licenses.

10.10 Time and Date

You can configure time and date of the device by configuring time zone, time synchronization and Daylight Saving Time (DST).

10.10.1 Synchronize Time Manually

Steps

- 1. Go to Configuration > System > System Settings > Time Settings .
- 2. Select Time Zone.
- 3. Click Manual Time Sync..
- 4. Choose one time synchronization method.
 - Select **Set Time**, and manually input or select date and time from the pop-up calendar.
 - Check Sync. with computer time to synchronize the time of the device with that of the local PC.
- 5. Click Save.

10.10.2 Set NTP Server

You can use NTP server when accurate and reliable time source is required.

Before You Start

Set up a NTP server or obtain NTP server information.

Steps

- 1. Go to Configuration > System > System Settings > Time Settings .
- 2. Select Time Zone.
- 3. Click NTP.
- 4. Set Server Address, NTP Port and Interval.



Server Address is NTP server IP address.

- 5. Click **Test** to test server connection.
- 6. Click Save.

10.10.3 Set DST

If the region where the device is located adopts Daylight Saving Time (DST), you can set this function.

Steps

1. Go to Configuration > System > System Settings > DST.

- 2. Check Enable DST.
- 3. Select Start Time, End Time and DST Bias.
- 4. Click Save.

10.11 Set RS-232

RS-232 can be used to debug device or access peripheral device. RS-232 can realize communication between the device and computer or terminal when the communication distance is short.

Before You Start

Connect the device to computer or terminal with RS-232 cable.

Steps

- 1. Go to Configuration > System > System Settings > RS-232.
- 2. Set RS-232 parameters to match the device with computer or terminal.
- 3. Click Save.

10.12 Set RS-485

RS-485 is used to connect the device to external device. You can use RS-485 to transmit the data between the device and the computer or terminal when the communication distance is too long.

Before You Start

Connect the device and computer or terminal with RS-485 cable.

Steps

The function varies according to different camera models.

- 1. Go to Configuration > System > System Settings > RS-485.
- 2. Set the RS-485 parameters.



- You should keep the parameters of the device and the computer or terminal all the same.
- If the PTZ Protocol is selected as modbus-RTU, the temperature information can be transferred by RS-485 interface.
- In modbus-RTU, you can select CRC Response Transmission as Big-Endian or Little-Endian.
- 3. Click Save.

10.13 Set Same Unit

Set the same temperature unit and distance unit. When you enable this function, the unit cannot be configured separately in other setting pages

Steps

- 1. Go to Configuration > System > System Settings > Unit Settings .
- 2. Check Use Same Unit.
- 3. Set the temperature unit and distance unit.
- 4. Click Save.

10.14 Security

You can improve system security by setting security parameters.

10.14.1 Authentication

You can improve network access security by setting RTSP and WEB authentication.

Go to **Configuration > System > Security > Authentication** to choose authentication protocol and method according to your needs.

RTSP Authentication

Digest and digest/basic are supported, which means authentication information is needed when RTSP request is sent to the device. If you select **digest/basic**, it means the device supports digest or basic authentication. If you select **digest**, the device only supports digest authentication.

RTSP Digest Algorithm

MD5, SHA256 and MD5/SHA256 encrypted algorithm in RTSP authentication. If you enable the digest algorithm except for MD5, the third-party platform might not be able to log in to the device or enable live view because of compatibility. The encrypted algorithm with high strength is recommended.

WEB Authentication

Digest and digest/basic are supported, which means authentication information is needed when WEB request is sent to the device. If you select **digest/basic**, it means the device supports digest or basic authentication. If you select **digest**, the device only supports digest authentication.

WEB Digest Algorithm

MD5, SHA256 and MD5/SHA256 encrypted algorithm in WEB authentication. If you enable the digest algorithm except for MD5, the third-party platform might not be able to

log in to the device or enable live view because of compatibility. The encrypted algorithm with high strength is recommended.
iNote
Refer to the specific content of protocol to view authentication requirements.
10.14.2 Security Audit Log
The security audit logs refer to the security operation logs. You can search and analyze the security log files of the device so as to find out the illegal intrusion and troubleshoot the security events.
Security audit logs can be saved on device internal storage. The log will be saved every half hour after device booting. Due to limited storage space, you can also save the logs on a log server.
Search Security Audit Logs
You can search and analyze the security log files of the device so as to find out the illegal intrusion and troubleshoot the security events.
Steps
iNote
This function is only supported by certain camera models.
 Go to Configuration > System > Maintenance > Security Audit Log . Select log types, Start Time, and End Time. Click Search.
The log files that match the search conditions will be displayed on the Log List. 4. Optional: Click Export to save the log files to your computer.
10.14.3 Set IP Address Filter
IP address filter is a tool for access control. You can enable the IP address filter to allow or forbid the visits from the certain IP addresses.
IP address refers to IPv4.
Steps
iNote
IP Address Filter is mutually exclusive with MAC Address Filter.
1. Go to Configuration > System > Security > IP Address Filter .

- 2. Check Enable IP Address Filter.
- 3. Select the type of IP address filter.

Forbidden IP addresses in the list cannot access the device.

Allowed Only IP addresses in the list can access the device.

4. Edit the IP address filter list.

Add a new IP address or IP address range to the list.

Modify Modify the selected IP address or IP address range in the list.

Delete Delete the selected IP address or IP address range in the list.

5. Click Save.

10.14.4 Set MAC Address Filter

MAC address filter is a tool for access control. You can enable the MAC address filter to allow or forbid the visits from the certain MAC addresses.

Steps

☐iNote

MAC Address Filter is mutually exclusive with IP Address Filter.

- 1. Go to Configuration > System > Security > MAC Address Filter .
- 2. Check Enable MAC Address Filter.
- 3. Select the type of MAC address filter.

Forbidden MAC addresses in the list cannot access the device.

Allowed Only MAC addresses in the list can access the device.

4. Edit the MAC address filter list.

Add Add a new MAC address to the list.

Modify Modify the selected MAC address in the list.

Delete Delete the selected MAC address in the list.

5. Click Save.

10.14.5 Certificate Management

It helps to manage the server/client certificates and CA certificate, and to send an alarm if the certificates are close to expiry date, or are expired/abnormal.

Ŭi≀Note

The function is only supported by certain device models.

Create Self-signed Certificate

Steps

- 1. Click Create Self-signed Certificate.
- 2. Follow the prompt to enter **Certificate ID**, **Country/Region**, **Hostname/IP**, **Validity** and other parameters.

Note

The certificate ID should be digits or letters and be no more than 64 characters.

- 3. Click OK.
- **4. Optional:** Click **Export** to export the certificate, or click **Delete** to delete the certificate to recreate a certificate, or click **Certificate Properties** to view the certificate details.

Create Certificate Request

Before You Start

Select a self-signed certificate.

Steps

- 1. Click Create Certificate Request.
- 2. Enter the related information.
- 3. Click OK.

Import Certificate

Steps

- 1. Click Import.
- 2. Click Create Certificate Request.
- 3. Enter the Certificate ID.
- 4. Click Browser to select the desired server/client certificate.
- 5. Select the desired import method and enter the required information.
- 6. Click OK.
- **7. Optional:** Click **Export** to export the certificate, or click **Delete** to delete the certificate to recreate a certificate, or click **Certificate Properties** to view the certificate details.

iNote

- Up to 16 certificates are allowed.
- If certain functions are using the certificate, it cannot be deleted.

- You can view the functions that are using the certificate in the functions column.
- You cannot create a certificate that has the same ID with that of the existing certificate and import a certificate that has the same content with that of the existing certificate.



Note

The device has default self-signed server/client certificate installed. The certificate ID is *default*.

Install CA Certificate

Steps

- 1. Click Import.
- 2. Enter the Certificate ID.
- 3. Click Browser to select the desired server/client certificate.
- **4.** Select the desired import method and enter the required information.
- 5. Click OK.

ાં Note

Up to 16 certificates are allowed.

Enable Certificate Expiration Alarm

Steps

- 1. Check Enable Certificate Expiration Alarm. If enabled, you will receive an email or the camera links to the surveillance center that the certificate will expire soon, or is expired or abnormal.
- 2. Set the Remind Me Before Expiration (day), Alarm Frequency (day) and Detection Time (hour).

Note

- If you set the reminding day before expiration to 1, then the camera will remind you the
 day before the expiration day. 1 to 30 days are available. Seven days is the default
 reminding days.
- If you set the reminding day before expiration to 1, and the detection time to 10:00, and the certificate will expire in 9:00 the next day, the camera will remind you in 10:00 the first day.
- 3. Click Save.

10.14.6 Control Timeout Settings

If this function is enabled, you will be logged out when you make no operation (not including viewing live image) to the device via web browser within the set timeout period.

Go to Configuration > System > Security > Advanced Security to complete settings.

10.14.7 Set SSH

SSH is a protocol to ensure security of remote login. This setting is reserved for professional maintenance personnel only.

Steps

- 1. Go to Configuration > System > Security > Security Service.
- 2. Check Enable SSH.
- 3. Click Save.

10.14.8 Set HTTPS

HTTPS is a network protocol that enables encrypted transmission and identity authentication, which improves the security of remote access.

Steps

- 1. Go to Configuration > Network > Advanced Settings > HTTPS.
- 2. Check Enable.
- 3. Optional: Check HTTPS Browsing to access the device only via HTTPS protocol.
- 4. Select a server certificate.
 - **i**Note
 - Complete certificate management before selecting server certificate. Refer to <u>Certificate Management</u> for detailed information.
 - If the function is abnormal, check if the selected certificate is abnormal in Certificate Management.
- 5. Click Save.

10.14.9 Set QoS

QoS (Quality of Service) can help improve the network delay and network congestion by setting the priority of data sending.

iNote

QoS needs support from network device such as router and switch.



- 1. Go to Configuration > Network > Advanced Configuration > QoS.
- 2. Set Video/Audio DSCP, Alarm DSCP and Management DSCP.

Note

Network can identify the priority of data transmission. The bigger the DSCP value is, the higher the priority is. You need to set the same value in router while configuration.

3. Click Save.

10.14.10 Set IEEE 802.1X

You can authenticate user permission of the connected device by setting IEEE 802.1X.

Go to **Configuration > Network > Advanced Settings > 802.1X**, and enable the function. Select protocol and version according to router information. User name and password of server are required.

iNote

- If you set the Protocol to EAP-TLS, select the Client Certificate and CA Certificate.
- If the function is abnormal, check if the selected certificate is abnormal in **Certificate**Management.

10.15 User and Account

10.15.1 Set User Account and Permission

The administrator can add, modify, or delete other accounts, and grant different permission to different user levels.



To increase security of using the device on the network, please change the password of your account regularly. Changing the password every 3 months is recommended. If the device is used in high-risk environment, it is recommended that the password should be changed every month or week.

Steps

- 1. Go to Configuration > System > User Management > User Management .
- Click Add. Enter User Name, select Level, and enter Password. Assign remote permission to users based on needs.

Administrator

The administrator has the authority to all operations and can add users/operators and assign permission.

User

Users can be assigned permission of viewing live video, setting parameters, and changing their own passwords, but no permission for other operations.

Operator

Operators can be assigned all permission except for operations on the administrator and creating accounts.

Modify Select a user and click **Modify** to change the password and permission.

Delete Select a user and click **Delete**.

	\sim		
	_		
		N	ote
_		шч	OI C

The administrator can add up to 31 user accounts.

3. Click General to set the allowed number of multi-user simultaneous login.

$\overline{}$	\sim		
	i -		
		N	ote
_	_	11.4	ULC

Only the administrator has the authority to the operation.

4. Click OK.

10.15.2 Online Users

The information of users logging into the device is shown.

Go to **Configuration > System > User Management > Online Users** to view the list of online users.

Chapter 11 Appendix

11.1 Common Material Emissivity Reference

Material	Emissivity
Human Skin	0.98
Printed Circuit Board	0.91
Concrete	0.95
Ceramic	0.92
Rubber	0.95
Paint	0.93
Wood	0.85
Pitch	0.96
Brick	0.95
Sand	0.90
Soil	0.92
Cloth	0.98
Hard Paperboard	0.90
White Paper	0.90
Water	0.96

