How to use a single door license with a MinMoe terminal connected as an RS485 reader to a DS-K260X series controller

Preparation

1. 2 x MinMoe terminals
2. DS-K260X series controller
3. HCP 2.4 and above

Application scenario.

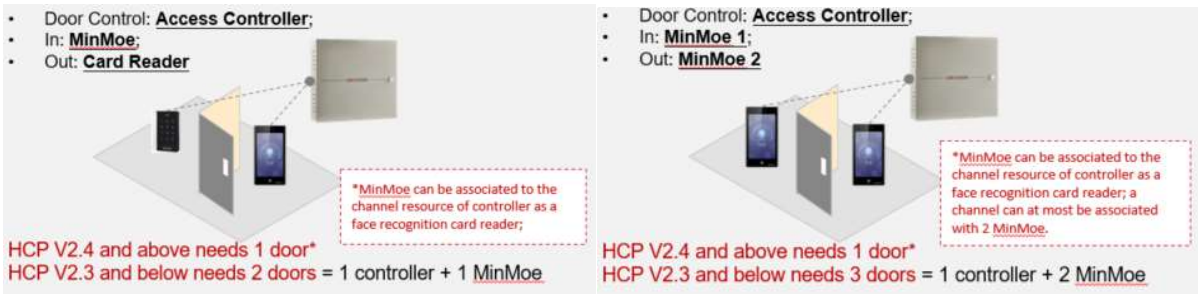

Note: Only applies to DS-K260X series controllers and Minmoe terminals.

Step 1: Configuration:

- Add only the **DS-K260X** series controller in the HCP **Device Tab**.

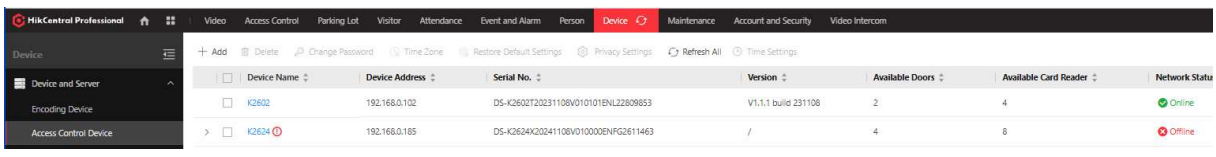

➢ Go to **Area.**

1. Select **Controller Area;**
2. Then **Door;**
3. Double click on door settings**.**

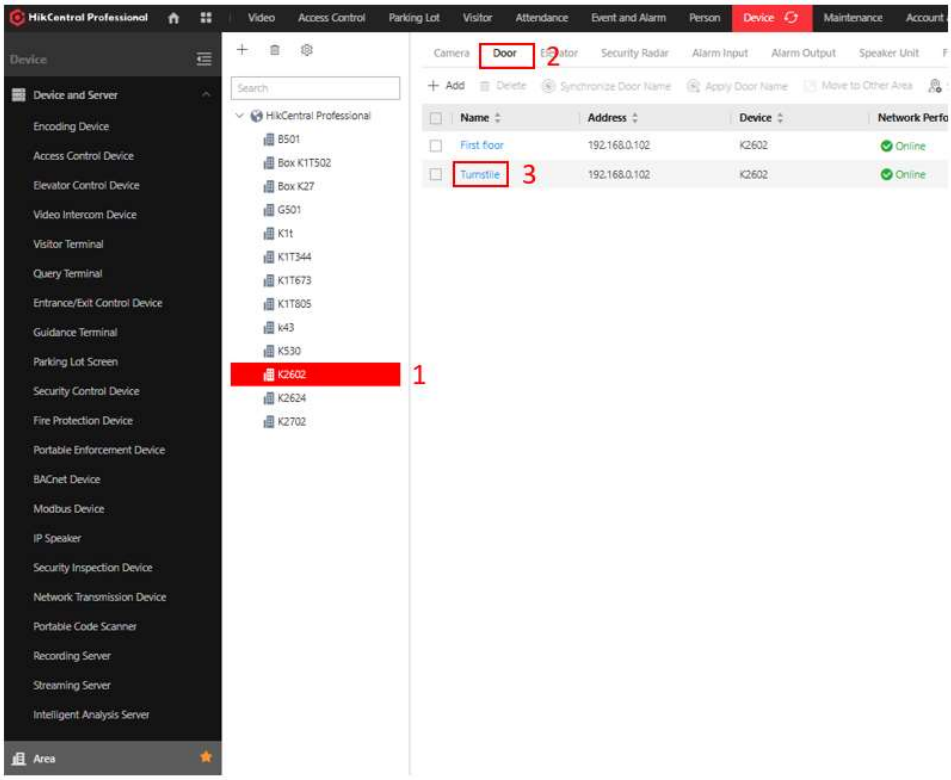

➢ Select **Face Recognition Terminal** settings.

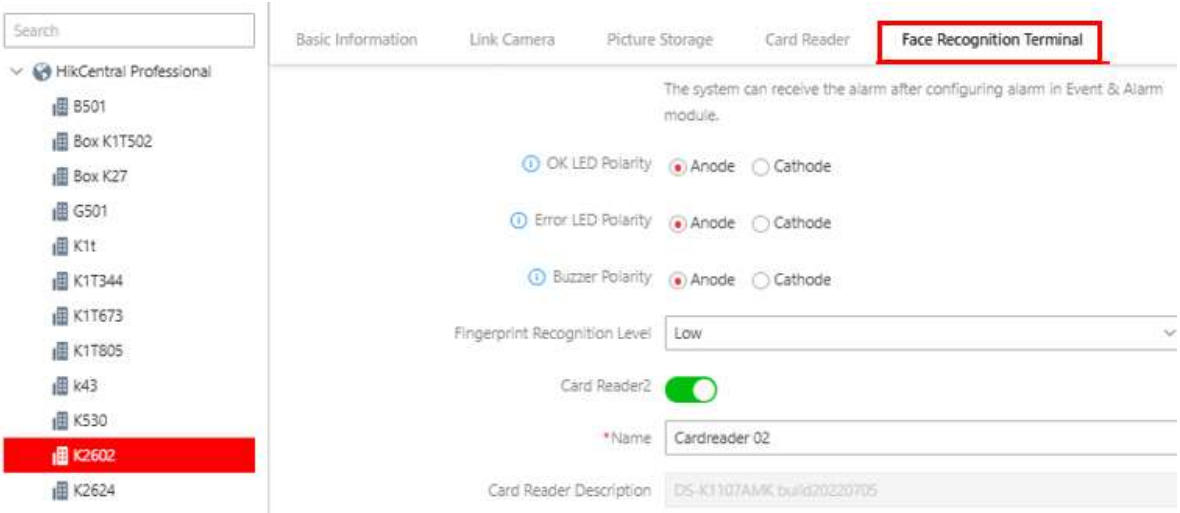

- Enable Face Recognition option and select **Add terminal** from the list.

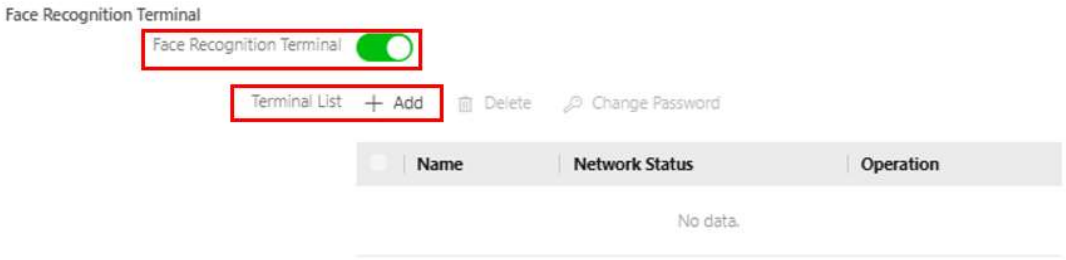

- Adding a face terminal.

1. Select a terminal from the list;
2. Enter **device name**;
3. Enter **Username**;
4. Enter admin **Password**;
5. Select **Add** Device;

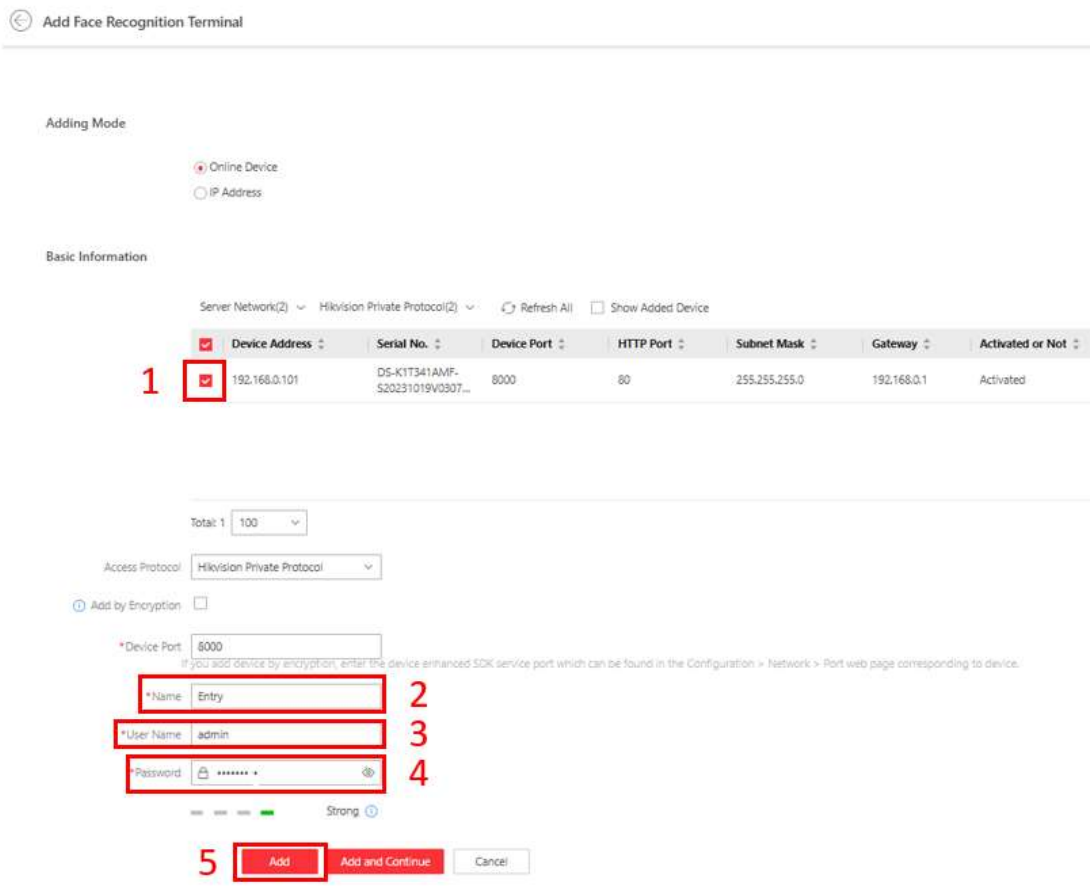

6. Don't forget to **Save** the configuration.

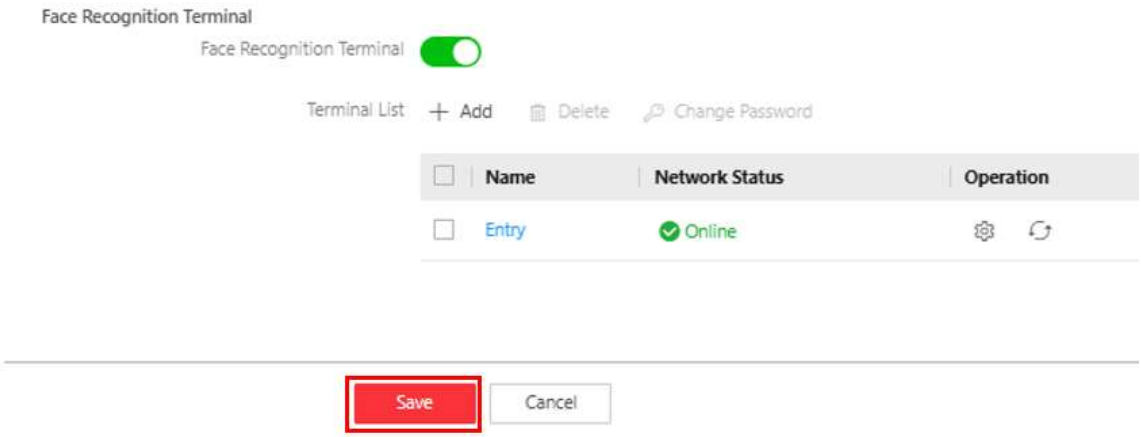

Note: The setting for the second exit terminal is the same as the entry terminal.

Step 2: Verification:

1. Select **Maintenance and Management** tab;
2. Select **License Details**;
3. Check the information of the used Access Points before and after adding the terminal. It should be the same.

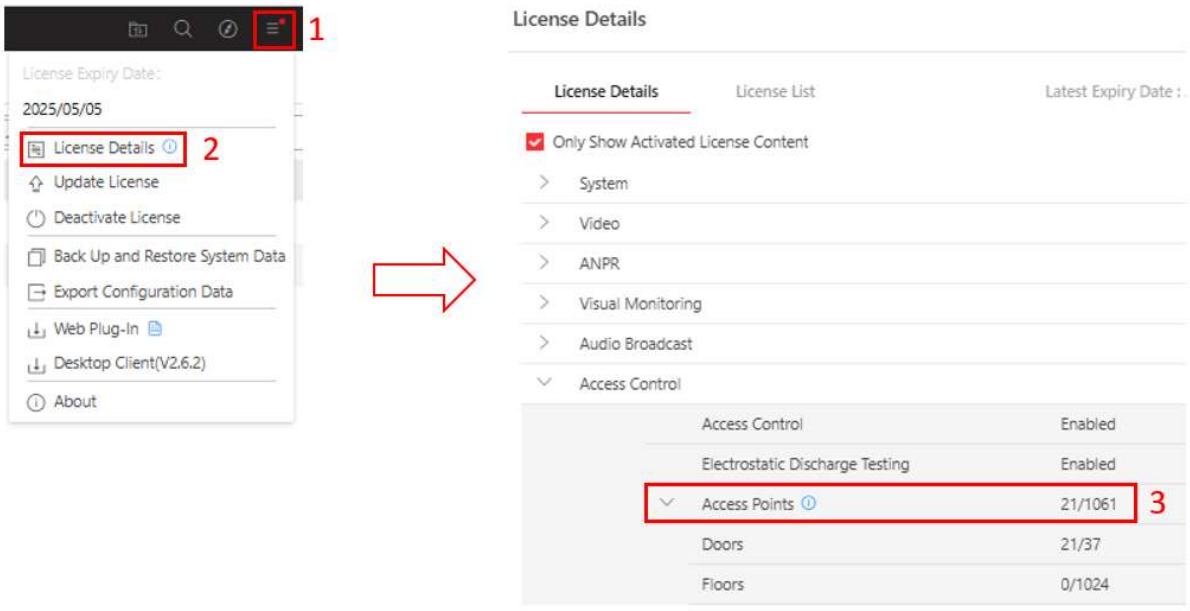

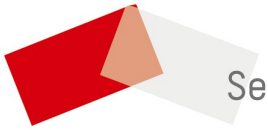
See Far, Go Further