



# Wireless Bridge (Web)

User Manual

## Legal Information

### About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<https://www.hikvision.com>). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

### About this Product

This product can only enjoy the after-sales service support in the country or region where the purchase is made.

### Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

### LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.
- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY

RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

**© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.**




# Preface

## Applicable Models

This manual is applicable to the wireless bridge for web operation.

## Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 <b>Danger</b>	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
 <b>Caution</b>	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 <b>Note</b>	Provides additional information to emphasize or supplement important points of the main text.

## Safety Instructions

### **Danger**

- This is a class A product and may cause radio interference in which case the user may be required to take adequate measures.
- No naked flame sources, such as lighted candles, should be placed on the equipment.
- The serial port of the equipment is used for debugging only.
- Install the equipment according to the instructions in Quick Start Guide.
- To prevent injury, this equipment must be securely attached to the installation surface in accordance with the installation instructions.
- Keep vertical downward when moving or using the equipment.

### **Caution**

- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Do not connect several devices to one power adapter as adapter overload may cause overheating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket.

# Contents

<b>Chapter 1 Introduction .....</b>	<b>1</b>
<b>Chapter 2 Activation and Login .....</b>	<b>2</b>
2.1 Activate the Device .....	2
2.2 Log in to the Device .....	2
<b>Chapter 3 Network Configuration .....</b>	<b>4</b>
3.1 Network Settings .....	4
3.1.1 Network Connection Settings .....	4
3.1.2 LAN Settings .....	5
3.1.3 Data Forwarding Settings.....	6
3.2 Wireless Network Settings.....	7
3.2.1 Basic Settings .....	8
3.2.2 Advanced Settings.....	10
<b>Chapter 4 System Maintenance .....</b>	<b>11</b>
4.1 Check Device Information.....	11
4.1.1 Device Information .....	11
4.1.2 Device Status.....	12
4.1.3 Network Status .....	12
4.1.4 Connected Device Information .....	13
4.2 Edit Device Name.....	13
4.3 Reboot the Device .....	13
4.4 Restore Defaults .....	13
4.5 Enable Intelligent Power Management .....	14
4.6 Save Debug Information .....	14
4.7 Import and Export Files.....	15
4.8 Upgrade the Device .....	15
4.9 Set Time .....	15
4.9.1 Manual Settings .....	15
4.9.2 NTP Setting .....	16
4.10 Manage Safety .....	17
4.10.1 HTTP Service .....	17
4.10.2 HTTPS Service.....	18
4.10.3 SSH Service.....	19
4.10.4 SADP Service .....	19
4.11 Manage Log.....	20
4.12 Diagnose Network .....	20
4.13 Ping Watchdog.....	21
4.14 Test Wireless Bandwidth .....	22
4.15 Change Password.....	22
4.16 View Open Source Software Licenses .....	23
<b>Chapter 5 FAQs .....</b>	<b>24</b>
5.1 Why the device cannot start up?.....	24
5.2 Why devices pairing failed? .....	24
5.3 Why the wireless connection rate is relatively low? .....	24
5.4 Why the signal intensity is too low? .....	25
5.5 Why the throughput is inadequate even with high signal quality? .....	25
5.6 Why there are excessive packet loss and time delay when PC pings the device IP address? .....	25

# Chapter 1 Introduction

You can manage and configure the wireless bridge (hereinafter referred to as the device) through the web browser, including network settings, wireless network settings, and system management.

---

 **Note**

Functions vary with device models. Pictures used for illustration here are for example purposes. The actual interface prevails.

---

## Chapter 2 Activation and Login

### 2.1 Activate the Device

For the security of your privacy and system data, you are required to set a password for your first use. After the password is set, you can log in to the web for further configuration.

#### Before You Start

Ensure that your PC and the device are on the same network segment.

#### Steps

1. Run the web browser.
2. Enter the IP address of the device in the address bar, and press **Enter**.
3. Set your password and confirm.



#### Caution

- The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: uppercase letters, lowercase letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system. Changing the password monthly or weekly can better protect your product.
- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

- 
4. Select the desired **Country/Region Code** and confirm.



#### Note

Only when **Country/Region Code** is set, can the device work normally.


---

### 2.2 Log in to the Device

Log in to the device to check device information and configure related parameters.

#### Steps

1. Enter the IP address in the address bar of the web browser, and press **Enter**.

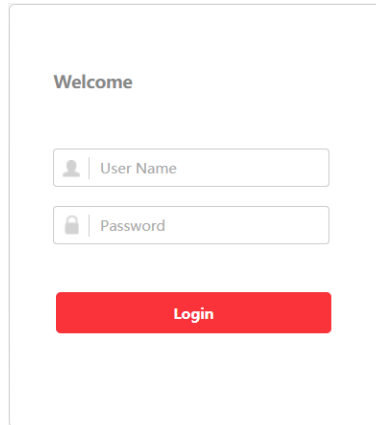

The image shows a login form within a white rectangular border. At the top left, the word "Welcome" is displayed in a bold, dark grey font. Below this, there are two input fields. The first field is labeled "User Name" and has a small person icon to its left. The second field is labeled "Password" and has a small lock icon to its left. Below these fields is a prominent red button with the word "Login" written in white text.

Figure 2-1 Log In

2. Enter the user name and password.
3. Click **Login**.



## Chapter 3 Network Configuration

### 3.1 Network Settings


Click **Network Settings** to set relevant network parameters for the device.

#### 3.1.1 Network Connection Settings

##### Note

The function is available for some models only when **AP** is set as the working scene.

When the device is working in AP mode, you can enable WAN port and set relevant parameters, such as **Network Connection Method** and **WAN IPv4**, to suit your needs.

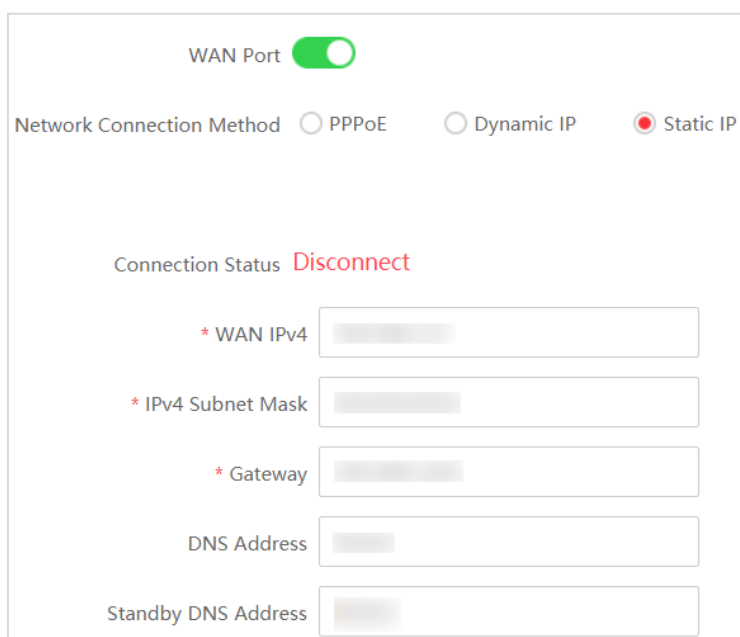

The screenshot shows the WAN Port Settings interface. At the top, the 'WAN Port' is toggled on (green). Below it, the 'Network Connection Method' is set to 'Static IP' (selected with a red radio button). The 'Connection Status' is 'Disconnect' (in red). There are five input fields: '\* WAN IPv4', '\* IPv4 Subnet Mask', '\* Gateway', 'DNS Address', and 'Standby DNS Address'. The first three fields have red asterisks indicating they are required.

Figure 3-1 WAN Port Settings

Table 3-1 Parameter Description

Parameter	Description
<b>PPPoE</b>	Select this mode if your ISP (Internet Service Provider) has provided a broadband account and password.
<b>Dynamic IP</b>	No additional configuration is required if you choose this mode.

Parameter	Description
Static IP	Select this mode if your ISP has provided an IP address and other information related.


### 3.1.2 LAN Settings

After configuring the network connection parameters, you can go to **Network Setting** → **LAN Settings** to configure detailed network parameters.

#### Note

The function varies with models. Devices with WAN port function and devices without WAN port function may have different sets of parameters to be configured. The actual interface prevails.

For devices without WAN port function or devices with WAN port function disabled, you can set **Network Connection Method**, **IPv4**, **IPv4 Subnet Mask**, **Gateway**, **DNS Address**, and **Standby DNS Address**.

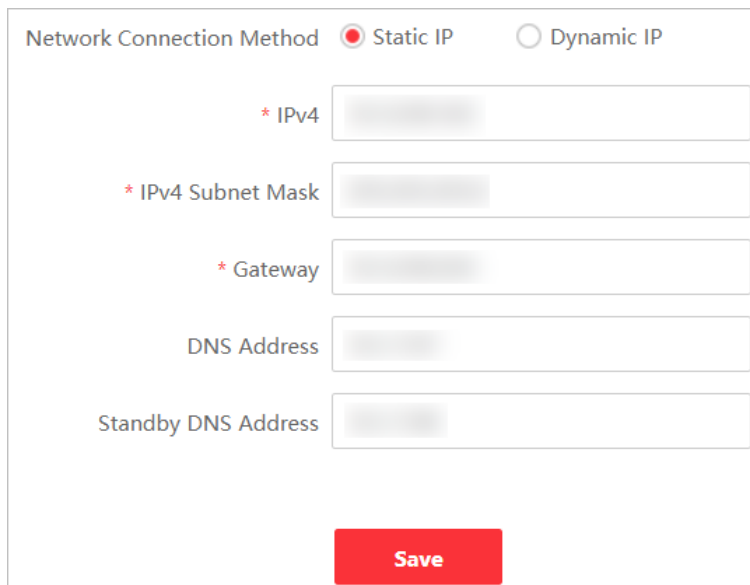

The screenshot shows a web interface for LAN settings. At the top, there is a section for 'Network Connection Method' with two radio buttons: 'Static IP' (which is selected) and 'Dynamic IP'. Below this, there are five input fields, each with a label and an asterisk indicating it is required: '\* IPv4', '\* IPv4 Subnet Mask', '\* Gateway', 'DNS Address', and 'Standby DNS Address'. At the bottom of the form is a red 'Save' button.

Figure 3-2 LAN Settings (Without WAN Port Function/With WAN Port Function Disabled)

For devices with WAN port function enabled, you can configure the LAN port and DHCP server respectively.

**LAN Settings**

**IP Settings of LAN Port**

\* IP Address

\* IPv4 Subnet Mask

**DHCP Server**

\* DHCP Server

\* Starting IP Address  ·  ·  ·

\* Ending IP Address  ·  ·  ·

Lease Time

DNS Address

Standby DNS Address

**Save**

Figure 3-3 LAN Settings (With WAN Port Function Enabled)

After the IP address is reset, the web page redirects to the new login interface of the newly set IP address.

---

**Note**

To prevent IP address conflict, it is recommended to use SADP tool when you set the device IP address.

---

### 3.1.3 Data Forwarding Settings

In a complex LAN environment, to reduce the negative impact of certain multicast, broadcast, and unknown unicast packets on the device, you can filter the packets as required. Go to **Network Setting** → **Data Forwarding Settings** to enable/disable the packet filtering features of the device.

---

**Note**

The function is available for some models only when **AP** is set as the working scene.

---

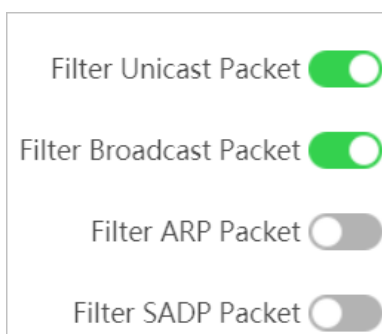



Figure 3-4 Data Forwarding Settings

Table 3-2 Parameter Description

Parameter	Description
<b>Filter Unicast Packet</b>	Enabled by default. Enabling this function helps filter all unknown unicast packets, to minimize the negative influence brought by massive unknown unicast packets in the LAN.
<b>Filter Broadcast Packet</b>	Enabled by default. Enabling this function helps filter all unnecessary broadcast packets, to minimize the negative influence brought by massive broadcast packets in the LAN.
<b>Filter ARP Packet</b>	Disabled by default. Enabling this function helps filter ARP packets sent to unknown devices, to minimize the negative influence brought by massive ARP packets in the LAN.
<b>Filter SADP Packet</b>	Disabled by default. Enabling this function helps filter SADP multicast packets, to minimize the negative influence brought by massive SADP multicast packets in the LAN.  <b>Note</b> SADP discovery and related functions will become unavailable after this function is enabled.

## 3.2 Wireless Network Settings

Click **Wireless Network Settings** to set basic and advanced parameters of wireless network.

### Note

Parameters of this function vary with models. The actual interface prevails.

### 3.2.1 Basic Settings

Go to **Wireless Network Setting** → **Basic Settings** to set wireless network basic parameters.


Figure 3-5 Wireless Network Basic Settings

#### Note

The picture used above is an example of a device with DIP switch function. The actual interface varies with device models.

Table 3-3 Parameter Description

Parameter	Description
<b>Enable DIP Switch</b>	<p>Enable/disable the pairing code and scene switching function through the DIP switch.</p> <p>This function is enabled by default.</p> <p> Note</p> <ul style="list-style-type: none"> <li>If the DIP group numbers are not enough for use, you can disable this</li> </ul>

Parameter	Description
	<p>function and set SSID accordingly.</p> <ul style="list-style-type: none"> <li>Enabling or disabling DIP switch makes the wireless connection disconnected. Please operate with caution.</li> <li>This parameter is only available for devices with DIP switch function.</li> </ul>
<b>Dial Group No.</b>	<p>1 to 16, used to indicate different group numbers. This information is only displayed when DIP switch is enabled.</p> <p> Note</p> <p>This parameter is only available for devices with DIP switch function.</p>
<b>Working Scene</b>	<p>You can set <b>Working Scene</b> as desired through the web. Select AP to set <b>AP</b> as <b>Working Scene</b>. Select CPE to set <b>CPE</b> as <b>Working Scene</b>.</p>
<b>SSID</b>	<ul style="list-style-type: none"> <li>By default, the SSID is determined by the dial group number, and the CPE pairs with the AP according to SSID.</li> <li>It is recommended to hide the SSID of APs for security.</li> </ul>
<b>Country/Region Code</b>	<p>Set when activating the device. It is unchangeable after selected, unless you restore all the settings to default settings.</p>
<b>Wireless Mode</b>	<p>It is unconfigurable.</p>
<b>Channel Width</b>	<ul style="list-style-type: none"> <li>For APs: Channel widths are available for selection. The specific value depends on the country/region code.</li> <li>For CPEs: The channel width is automatically changed according to the AP. It is unconfigurable.</li> </ul>
<b>Channel</b>	<ul style="list-style-type: none"> <li>For APs: <b>Auto</b> is set by default. You can select a desired one.</li> <li>For CPEs: <b>Auto</b> is set by default. It is unconfigurable.</li> </ul>
<b>Antenna Gain</b>	<p>The power transmitted in the direction of peak radiation to that of an isotropic source.</p>
<b>Transmit Power</b>	<p>A key factor affecting the wireless coverage area and the maximum achievable signal-to-noise ratio.</p>
<b>Security Mode</b>	<ul style="list-style-type: none"> <li><b>WPA2-PSK</b> is set by default, and the encryption method is AES.</li> <li>If <b>Not-Encrypted</b> is selected, there is no need to set <b>PSK Secret Key</b>.</li> </ul>
<b>PSK Secret Key</b>	<p>The pairing password for CPEs and APs. If <b>WPA2-PSK</b> is set as <b>Security Mode</b>, you should configure <b>PSK Secret Key</b>.</p>
<b>EIRP Limit</b>	<p>Check to limit the EIRP (Effective Isotropic Radiated Power) of the device.</p>

 Note

You can select an optimum channel by clicking **Scan Signal** to check the signal intensity of available channels nearby.

### 3.2.2 Advanced Settings

Go to **Wireless Network Setting** → **Advanced Settings**, enable or disable **TDMA** and **Intelligent Frequency Management** as desired.

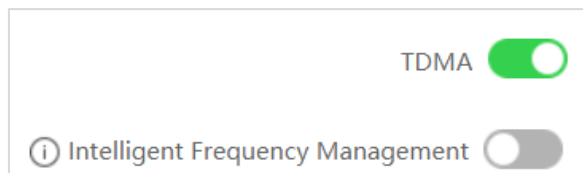




Figure 3-6 Advanced Settings

Table 3-4 Parameter Description

Parameter	Description
<b>TDMA</b>	<p>Enable <b>TDMA</b> to improve the throughput performance of the working scene when an AP is connected to multiple devices.</p> <p> <b>Note</b> The function is available for some models only when <b>AP</b> is set as the working scene.</p>
<b>Intelligent Frequency Management</b>	<p>Enable <b>Intelligent Frequency Management</b> to ensure stable video transmission when interference is detected.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li>● The function is available for some models only when <b>AP</b> is set as the working scene.</li> <li>● With this function, the working channel will be automatically switched to the optimal channel of all the choices except the DFS (Dynamic Frequency Selection) channels and indoor channels.</li> <li>● The function varies with countries. For certain countries, this function is not available.</li> <li>● With this function enabled, you are not able to set the channel and channel width manually. It is recommended that you disable this function if roaming is needed.</li> </ul>

## Chapter 4 System Maintenance


### 4.1 Check Device Information

You can view the basic information, hardware status, network status, and wireless status for routine check or device maintenance.

#### 4.1.1 Device Information

Go to **System Status** → **Device Information** to check device name, device model, serial No., program version, MAC address, etc.

**Device Name** is configurable. See [4.2 Edit Device Name](#).

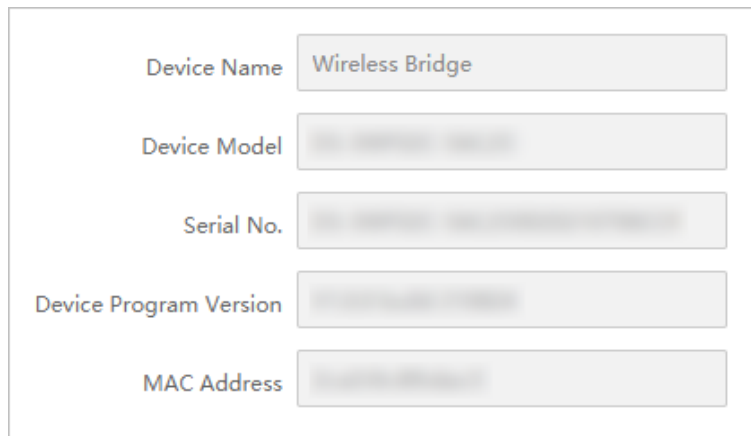

The screenshot shows a web interface for checking device information. It contains five rows, each with a label on the left and a corresponding input field on the right. The first row, 'Device Name', has the value 'Wireless Bridge' entered. The other four rows, 'Device Model', 'Serial No.', 'Device Program Version', and 'MAC Address', have their respective fields blurred out.

Device Name	Wireless Bridge
Device Model	[Blurred]
Serial No.	[Blurred]
Device Program Version	[Blurred]
MAC Address	[Blurred]

Figure 4-1 Check Device Information



## 4.1.2 Device Status

Go to **System Status** → **Basic Status** to check the CPU usage, memory usage, running time, and background noise condition of the device. Click **Refresh** at the upper-right corner to update the overall status.

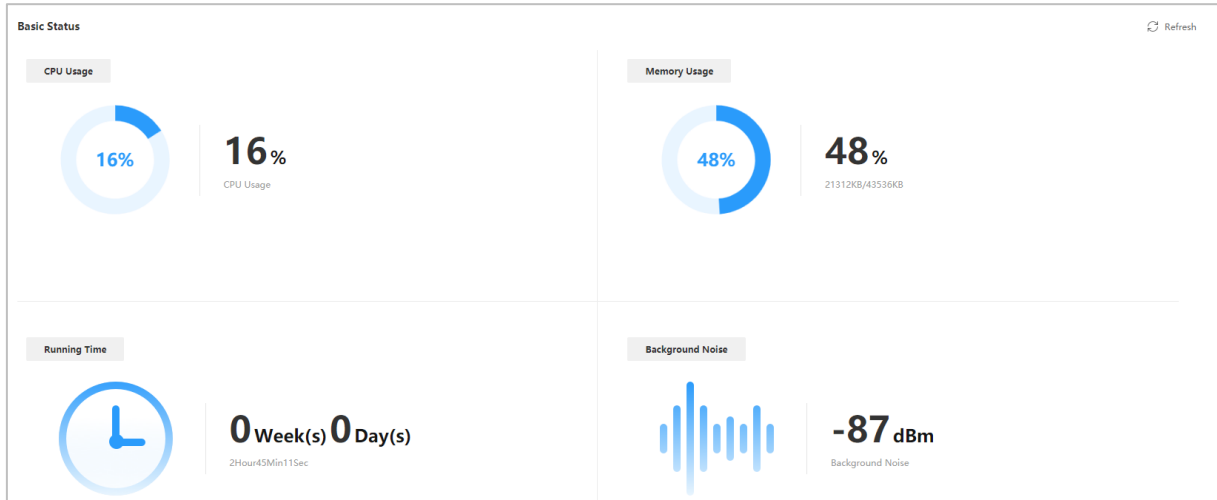


Figure 4-2 Check Device Status

## 4.1.3 Network Status

Go to **System Status** → **Network Status** to check the working mode, IPv4, IPv4 subnet mask, gateway, DNS address, and standby DNS address of the device.

The LAN parameters are configurable. See [3.1 Network Settings](#).

Working Mode	<input type="text" value="Bridge"/>
IPv4	<input type="text" value="192.168.1.1"/>
IPv4 Subnet Mask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.1.1"/>
DNS Address	<input type="text" value="8.8.8.8"/>
Standby DNS Address	<input type="text" value="8.8.4.4"/>

Figure 4-3 Check Network Status

## 4.1.4 Connected Device Information

Go to **System Status** → **Wireless Status** to check wireless parameters and the information of connected devices.

The screenshot shows a web interface with two main sections. The top section, titled "Wireless Parameter", contains several configuration fields: Working Scene (CPE), SSID (blurred), Wireless Mode, Channel Width (Auto), Channel (Auto), Antenna Gain (8dBi), Transmit Power (22dBm), and Security Mode (WPA2-PSK). The bottom section, titled "Connected Device Info", is a table with a header row containing the following columns: MAC Address, IPv4, Signal Intensity(dBm), Rx/Tx Rate(Mbps), Distance (km), Noise (dBm), and Connection Time.

Figure 4-4 Check Connected Device Information

## 4.2 Edit Device Name

Edit the device name for identification.

### Steps

1. Go to **System Management** → **Device Maintenance**.
2. Edit your desired name in **Device Name**.
3. Click **Save**.

## 4.3 Reboot the Device

You can reboot the device remotely through the web page.

### Steps

1. Go to **System Management** → **Device Maintenance**.
2. Click **Reboot** in **Device Maintenance**.
3. Follow the prompts for further operation.

## 4.4 Restore Defaults

Go to **System Management** → **Device Maintenance** for default settings restoration.

- **Restore Default Settings:** Restore the parameters to the default settings, except network settings and user settings.

- **Restore All:** Restore all the parameters to the default settings.
- 

### **Caution**

- Restoring all the parameters will clear all the settings, please operate with caution.
  - It is recommended to export all the configuration files before restoration.
- 

## 4.5 Enable Intelligent Power Management

When the intelligent power management feature is enabled, the device would power off automatically in condition of insolvable device failure.

Go to **System Management** → **Device Maintenance**. Enable **Intelligent Power Management** as needed.

---

### **Note**

This function is only available for some models. The actual interface prevails.

---

## 4.6 Save Debug Information

Save debug information of different levels for restoring specific information when the device reboots. The saved information can be used for technical support professionals to conduct troubleshooting and maintenance.

### **Steps**

1. Go to **System Management** → **Device Maintenance**.
  2. Select **Level** in **Debug Information** as desired.
- 

### **Note**

Three levels are selectable: **Low (Alarm)**, **Medium (Report)**, and **High (Message)**. The higher the level is, the more specific the information will be.

---

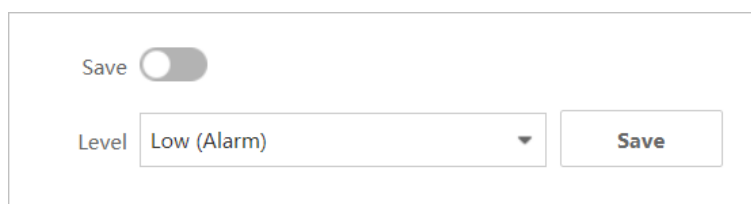


Figure 4-5 Save Debug Information

3. Click **Save**.
  4. Enable **Save** above **Level** to save the debug information in the next 7 days.
- 


### **Note**

After 7 days, this function will be restored to disabled status.

---

## 4.7 Import and Export Files

Go to **System Management** → **Device Maintenance**, you can import or export configuration files for quick configuration or backup. Debug information can also be exported for troubleshooting by professionals.

- **Export Debug Information:** Click **Export** to export debug information in TXT format.
  - **Export Configuration File:** Click **Export**, set the password of configuration file, and click **OK**.
  - **Import Configuration File:** Click  to select the desired configuration file, and click **Import**.
- 

### Note

Importing configuration file requires the password you set when exporting files, and the device will reboot automatically after the file is imported.

---


## 4.8 Upgrade the Device

Use the newest firmware for available upgrades, and upgrade the device through web page remotely.

### **Before You Start**

Copy the upgrade package to the local directory of the PC used for remote access.

### **Steps**

1. Go to **System Management** → **Device Maintenance**.
  2. Click  in **Upgrade Device** to go to the local directory, and select the desired upgrade package.
  3. Click **Upgrade**.
- 

### Note

- The device will reboot automatically after upgrade, and you need to log in again.
  - If upgrade fails and the device cannot work normally, please contact the supplier for restoration.
- 

## 4.9 Set Time

Both manual time synchronization and NTP time synchronization are supported.

### 4.9.1 Manual Settings

You can set a desired specific time, or synchronize the time with that of the computer.

### **Steps**

1. Go to **System Management** → **Time Settings**.
  2. Select a **Time Zone**.
-

---

**Note**

The time zone is automatically selected after you set the country/region code. You can also select the desired time zone as needed.

---

3. Select **Manual Time Sync.** as **Sync Method.**
4. Set the desired time or check **Sync. with computer time.**

The screenshot shows the 'Time Settings' configuration page. It includes a 'Time Zone' dropdown menu currently set to '(GMT-05:00) Eastern Time(US&Can...)'. Below this, under the 'Sync' section, there is a 'Device Time' field showing '2023-01-31 07:18:43'. The 'Sync Method' section has two radio buttons: 'Manual Time Sync.' (which is selected with a red dot) and 'NTP'. Below the radio buttons is a 'Set Time' field with the value '2023-01-31 07:16:51' and a calendar icon. To the right of the 'Set Time' field is a checkbox labeled 'Sync. with computer time' which is currently unchecked. At the bottom center of the form is a red 'Save' button.

Figure 4-6 Manual Setting

5. Click **Save.**

## 4.9.2 NTP Setting

NTP time synchronization is used to synchronize the time with that of a specific NTP server.

### Steps

1. Go to **System Management** → **Time Settings.**
  2. Select a **Time Zone.**
- 

**Note**

The time zone is automatically selected after you set the country/region code. You can also select the desired time zone as needed.

---

3. Select **NTP** as **Sync Method.**

**Time Settings**

**Time Zone**

Time Zone (GMT-05:00) Eastern Time(US&Can: ▾

**Sync**

Device Time 2023-01-31 09:36:02

Sync Method  Manual Time Sync.  NTP

Server Address

NTP Port 123

Interval 60 min

Save

Figure 4-7 NTP Setting

4. Enter NTP server information.

**Server Address**

The IP address of the NTP server.

**NTP Port**

Monitoring port of the NTP server. Default value: 123. Value range: 1 to 65535.

**Interval**

The frequency for the device to synchronize with the NTP server. Value range: 1 to 10080 minutes.

## 4.10 Manage Safety

### 4.10.1 HTTP Service

The port used for HTTP (Hyper Text Transfer Protocol) connection can be set as needed. HTTP service is available on port 80 by default.

---

**Note**

This function is only available for some models. The actual interface prevails.

---

**Steps**

1. Go to **System Management** → **Safety Management**.

2. Enter the server port number for HTTP connection.



Figure 4-8 HTTP Service

---

 **Note**

The server port number for HTTP service can be set as 80 or any number from 2000 to 65535.

---

## 4.10.2 HTTPS Service

The port used for HTTPS (Hypertext Transfer Protocol Secure) connection can be set as needed. HTTPS service is available on port 443 by default when enabled.

---

 **Note**

This function is only available for some models. The actual interface prevails.

---

### Steps

1. Go to **System Management** → **Safety Management**.
2. Enable HTTPS service.
3. Enter the server port number for HTTPS connection.

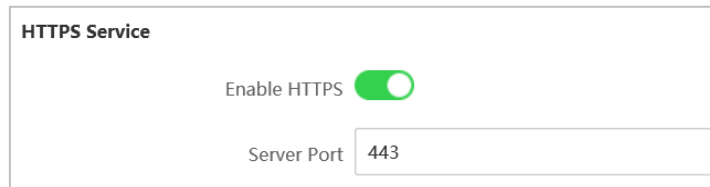


Figure 4-9 HTTPS Service

---

 **Note**

The server port number for HTTPS service can be set as 443 or any number from 2000 to 65535.

---

### 4.10.3 SSH Service

SSH protocol can prevent information leakage caused by remote management. If SSH service is enabled, you can manage the device remotely. SSH service is disabled by default.

#### Steps

1. Go to **System Management** → **Safety Management**.
2. Enable **SSH Service**.

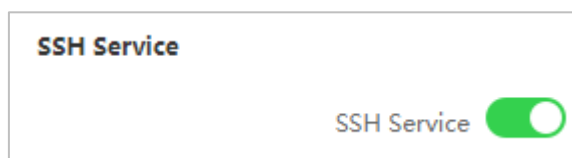


Figure 4-10 SSH Service

---

#### Note

The user name of **SSH Client** is **root**, and the password is the same as that of web login.

---

### 4.10.4 SADP Service

If SADP service is enabled, you can activate the device, change password, and modify IP address through the software. SADP service is enabled by default.

#### Steps

1. Go to **System Management** → **Safety Management**.
2. Enable **SADP Service**.

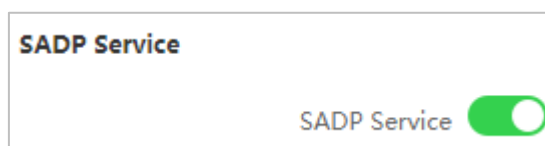


Figure 4-11 SADP Service

---

#### Note

If SADP service is disabled, some of the functions may become unavailable. It is recommended to enable this service.

---



## 4.11 Manage Log

Export desired logs to your local storage.

### Steps

1. Go to **System Management** → **Log Management**.
2. Select **Main Type**, **Subtype**, **Starting Time**, and **End Time**.
3. Click **Search**.

The screenshot shows a web interface for log search. At the top, there are four search filters: 'Main Type' (All Types), 'Subtype' (All Types), 'Starting Time' (2021-08-05 00:00:00), and 'End Time' (2021-08-05 23:59:59). A red 'Search' button is located to the right of the time filters. Below the filters is an 'Export' button with a download icon. The main area contains a table with the following data:

No.	Operation Time	Main Type	Subtype	Local/Remote User	Remote Host IP Address	Description
1	2021-08-05 18:50:18	Operation	Remote Login	admin		Login on the Web
2	2021-08-05 18:30:24	Operation	Wireless Paramete...	admin		Configure wireless parameters on the ...

At the bottom of the interface, there is a pagination bar showing 'Total 2 Items Page 1/1' and navigation controls including arrows, a page number '20', and a 'Jump to' field.

Figure 4-12 Log Search


4. Click **Export** to save the log files.

## 4.12 Diagnose Network

Network diagnosis provides network status information, which would be useful for the technical support.

### Steps

1. Go to **System Management** → **System Tool** → **Network Diagnosis**.
2. Enter the IP address.
3. Click **Ping**.  
Diagnosis results display.

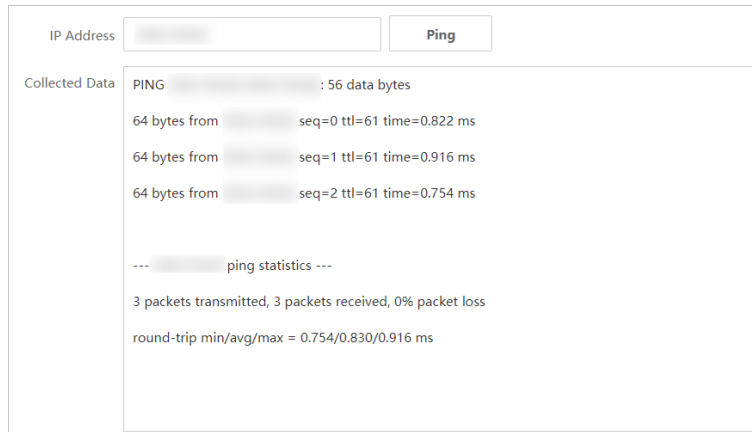

The screenshot shows a web interface for network diagnosis. At the top, there is an input field for 'IP Address' and a 'Ping' button. Below this, a 'Collected Data' section displays the results of a ping test. The data shows three successful ping attempts, each with a 64-byte payload, a TTL of 61, and response times of 0.822 ms, 0.916 ms, and 0.754 ms respectively. A summary section indicates that 3 packets were transmitted and 3 were received, resulting in 0% packet loss. The round-trip times are summarized as min/avg/max = 0.754/0.830/0.916 ms.

```
IP Address [ ] [Ping]

Collected Data
PING [ ] : 56 data bytes
64 bytes from [ ] seq=0 ttl=61 time=0.822 ms
64 bytes from [ ] seq=1 ttl=61 time=0.916 ms
64 bytes from [ ] seq=2 ttl=61 time=0.754 ms

--- [ ] ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max = 0.754/0.830/0.916 ms
```


Figure 4-13 Network Diagnosis

## 4.13 Ping Watchdog

By pinging a specific IP address and check the packet loss, technical support professionals can examine the device working status. If the device is in abnormal status, they may reboot the device.

### Steps

1. Go to **System Management** → **System Tool** → **Ping Watchdog**.
2. Enable **Ping Watchdog**.

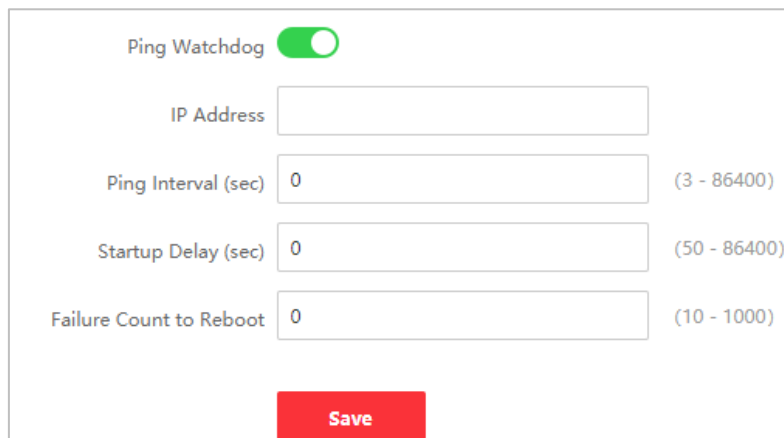

The screenshot shows the configuration page for the Ping Watchdog feature. The 'Ping Watchdog' toggle switch is turned on (green). Below the toggle, there are four input fields: 'IP Address', 'Ping Interval (sec)', 'Startup Delay (sec)', and 'Failure Count to Reboot'. The values entered in these fields are 0. To the right of each input field, the valid range is indicated: (3 - 86400) for Ping Interval, (50 - 86400) for Startup Delay, and (10 - 1000) for Failure Count to Reboot. A red 'Save' button is located at the bottom of the form.

Ping Watchdog

IP Address [ ]

Ping Interval (sec) [ 0 ] (3 - 86400)

Startup Delay (sec) [ 0 ] (50 - 86400)

Failure Count to Reboot [ 0 ] (10 - 1000)

[ Save ]

Figure 4-14 Ping Watchdog

3. Enter related information.

#### **Ping Interval**

The interval of Ping packet.

#### **Startup Delay**

The delay time for reboot when the device is in abnormal status.

#### **Failure Count to Reboot**

The limit for packet loss times. The device is reckoned as abnormal when the packet loss times reach this limit.

4. Click **Save**.

## 4.14 Test Wireless Bandwidth

By testing the wireless bandwidth, technical personnel can judge whether the network is smooth enough.

### Note

This function is only available for some models when the working scene of the device is set as **AP**.

### Steps

1. Go to **System Management** → **System Tool** → **Wireless Bandwidth Test**.
2. Click **Test** to get the test result.


Wireless Bandwidth Test		Test		The testing will occupy bandwidth. Please test when there is no data transmission.	
Testing Results	Source IP Address	Destination IP Address	Average Bandwidth (Mbps)	Minimum Bandwidth (Mbps)	
			7	3	

Figure 4-15 Test Wireless Bandwidth

## 4.15 Change Password

For data security, we highly recommend you to change your password regularly.

### Steps

1. Click  at the upper-right corner.
2. Select **Change Password**.

**Modify Password** ✕

\*Old Password

\* New Password

\*Confirm

Figure 4-16 Change admin Password

3. Enter the original password, new password and confirm.

4. Click **OK**.

The web page redirects to the login interface.

## 4.16 View Open Source Software Licenses

Open source licenses are licenses that allow software to be freely used, modified, and shared. Go to **System Management** → **About Device** and click **View** to read the open source software licenses of this software.

## Chapter 5 FAQs

### 5.1 Why the device cannot start up?

#### Reason

1. The network cable length connecting the wireless bridge to the PoE module exceeds 60 m.
2. The network cable cannot meet the standard of Category 5e.
3. The registered jack of the network cable is not firmly connected, or the connection order is improper.

#### Solution

1. Use a network cable shorter than 60 m.
2. Use a network cable with Category 5e or higher standard.
3. Remake the registered jack.

### 5.2 Why devices pairing failed?

#### Reason

The devices pairing status depends on the distance, direction, SSID name, and PSK password.

#### Solution

You can check as follows:

1. Check distance and direction: Ensure the AP and CPE are directly faced to each other, and the distance between them is within the limit.
2. Check SSID name and PSK password: Ensure the SSID name and PSK password are correct.

### 5.3 Why the wireless connection rate is relatively low?

#### Reason

The wireless system makes connection with its maximum working rate, and the actual rate depends on the distance and environment.

#### Solution

You can check as follows to ensure the highest connection rate:

1. Device position: Adjust the device position and direction.
2. Wireless channel or frequency: Change to another signal channel or frequency to reduce interference.
3. Wireless interference: Adjust, shield, or disable the device causing interference.

## 5.4 Why the signal intensity is too low?

### Reason

1. There is a large-sized obstruction between the CPE and the AP.
2. The CPE is not directly faced to the AP.

### Solution

1. Remove the obstruction or bypass it.
2. Adjust the angle of the CPE and the AP.

## 5.5 Why the throughput is inadequate even with high signal quality?

### Reason

1. Excessive interference or multipath interference.
2. Wired device error.

### Solution

1. Remove the interference or change the device frequency.  
Method of changing frequency: Reboot the AP of wireless bridge to allow auto search of available signal channels.
2. Change a network cable or use another PC.

## 5.6 Why there are excessive packet loss and time delay when PC pings the device IP address?

### Reason

1. The registered jack of the network cable is not firmly connected.
2. The IP addresses of multiple devices conflict.

### Solution

Port isolation should be conducted for APs connected to the same switch.

1. Remake the registered jack.
2. Modify the IP addresses of different devices.



See Far, Go Further