



Security Radar

User Manual

Legal Information

User Manual

©2019 Hangzhou Hikvision Digital Technology Co., Ltd.

About this Manual

This Manual is subject to domestic and international copyright protection. Hangzhou Hikvision Digital Technology Co., Ltd. ("Hikvision") reserves all rights to this manual. This manual cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision.

Please use this user manual under the guidance of professionals.

Trademarks

HIKVISION and other Hikvision marks are the property of Hikvision and are registered trademarks or the subject of applications for the same by Hikvision and/or its affiliates. Other trademarks mentioned in this manual are the properties of their respective owners. No right of license is given to use such trademarks without express permission.

Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THIS MANUAL. HIKVISION DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OF THE MANUAL, OR THE CORRECTNESS, ACCURACY, OR RELIABILITY OF INFORMATION CONTAINED HEREIN. YOUR USE OF THIS MANUAL AND ANY RELIANCE ON THIS MANUAL SHALL BE WHOLLY AT YOUR OWN RISK AND RESPONSIBILITY.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
 Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Note	Provides additional information to emphasize or supplement important points of the main text.

Contents

Chapter 1 Access to Client Software/Web Client	1
Chapter 2 Activation	2
2.1 Activate Device via Client Software	2
2.2 Activate via SADP	2
2.3 Activate Device via Web Browser	4
Chapter 3 Wired Network Settings	5
Chapter 4 Radar Settings	6
4.1 Add Map	6
4.2 Add the Radar to the Map	7
4.3 Add Radar Zone	9
4.4 Add Trigger Line	12
4.5 Other Auxiliary Functions	13
Chapter 5 Camera Linkage Settings	15
5.1 Set Speed Dome Initial Position	15
5.2 Link the Camera to the radar	16
5.3 Link the Camera to the Zone	17
5.4 Enable Alarm Triggered Pop-up Image	18
5.5 Calibrate Camera	20
5.5.1 One Point Calibration	24
5.5.2 Multipoint Calibration	27
5.6 Enable Camera Tracking	29
5.7 Set Park Function for Linked Camera	30
Chapter 6 Set Record and Storage Settings	32
6.1 Set Storage Settings	32
6.1.1 Set Storage Schedule via Storage Server	32
6.1.2 Set Storage Schedule via NVR	33

6.1.3 Set Tracking Strategy	33
Chapter 7 Alarm Settings	34
7.1 Alarm Center	34
7.2 Notification Push	34
7.3 Set Zone	35
7.4 Set Alarm Output	36
7.5 Set Trigger Line	37
7.6 Set Arming/Disarming Schedule	37
7.7 Set Motion Speed	38
7.8 Video Tracking Switch Settings	38
Chapter 8 Set Radar Advanced Function	39
8.1 Set Master-slave Tracking Settings	39
8.2 Set Detection Angle and Range	39
8.3 Set Scene Mode and Sensitivity	40
8.4 Set Frequency Range Settings	41
Chapter 9 View Alarm Information	42
Chapter 10 System Management	43
10.1 Set Time	43
10.2 Manage User	43
10.3 System Maintenance	44
10.4 View Device Information	45
10.5 Search Log	45
10.6 Enabling Remote Debugging	45
Appendix A. Radar Mounting Height Recommendation	46
Appendix B. Formatting Description	47
Appendix C. Indicator Description	48
Appendix D. FAQ	49
D.1 How to Achieve an Optimum Detection Range?	49

D.2 How to Solve the Problem that the Radar is not Shown in the Device List on the Radar Page?	49
D.3 How to Adjust the Sensitivity to Avoid False Alarm?	49
D.4 How to Raise the Precision of Camera Tracking?	50
D.5 How to Solve the Problem that No Reference Point is on the Frame While Setting the Speed Dome Initial Position?	50
D.6 What is the Reason that Failed to Draw a Zone Automatically?	52
D.7 What Makes a Failed Arming?	52
D.8 Why Is It Required to Remove Reflective Objects from the Radar Area?	52
D.9 Why Is the Camera Unable to Track the Target?	52
D.10 Common Mistakes of Calibrating Camera	52

Chapter 1 Access to Client Software/Web Client

You can login the Client Software or the web client to configure the device's parameters. You can also configure the radar's network parameters, alarm, permission, system, log search via the web client.

Note

You should activate the device the first time you access it to the network for safety reasons. For details, see **Device Activation**.

Access to Client Software

Download and install the iVMS-4200 client software. Register to the software and add device in **Control Panel → Device Management → Device for Management** .

Note

- You should set the device port No. as 80.
 - The user name and password when adding device are the activation user name and password.
-

After the device is completely added, click **Remote Configuration** to enter the device configuration page. You can configure the device parameters in this page.

Access to Web Client

After the device is connected to the network, you can search the device IP address via the iVMS-4200 client software and the SADP software. Input the searched IP address in the address bar in the web page and press **Enter**. Use the activation user name and password to login. You can configure the device parameters in the web page.

Chapter 2 Activation

In order to protect personal security and privacy and improve the network security level, you should activate the device the first time you connect the device to a network.

2.1 Activate Device via Client Software

Before You Start

- Get the iVMS-4200 client software from the supplied disk or the official website <http://www.hikvision.com/en/> . Install the software by following the prompts.
- The device and the PC that runs the software should be in the same subnet.

Steps

1. Run the client software.
2. Enter **Device Management** or **Online Device**.
3. Check the device status from the device list, and select an inactive device.
4. Click **Activate**.
5. Create and confirm the admin password of the device.



Caution

STRONG PASSWORD RECOMMENDED-We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

6. Click **OK** to start activation.
Device status will change to **Active** after successful activation.
7. Edit IP address of the device.
 - 1) Select a device and click **Modify Netinfo** at **Online Device**.
 - 2) Change the device IP address to the same subnet with your computer by either modifying the IP address manually or checking **DHCP**.
 - 3) Input the admin password of the device and click **OK** to complete modification.

2.2 Activate via SADP

SADP is a tool to detect, activate and modify the IP address of the device over the LAN.

Before You Start

- Get the SADP software from the supplied disk or the official website <http://www.hikvision.com/en/>, and install the SADP according to the prompts.
- The device and the PC that runs the SADP tool should be within the same subnet.

The following steps show how to activate a device and modify its IP address. For batch activation and IP addresses modification, refer to *User Manual of SADP* for details.

Steps


1. Run the SADP software and search the online devices.
2. Find and select your device in online device list.
3. Input new password (admin password) and confirm the password.



Caution

STRONG PASSWORD RECOMMENDED-We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

4. Click **Activate** to start activation.

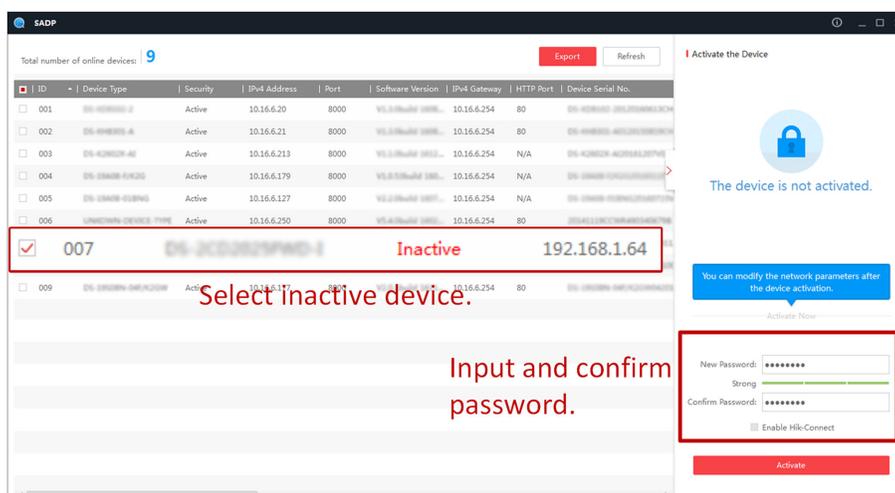

Status of the device becomes **Active** after successful activation.

5. Modify IP address of the device.
 - 1) Select the device.
 - 2) Change the device IP address to the same subnet as your computer by either modifying the IP address manually or checking **Enable DHCP**.
 - 3) Input the admin password and click **Modify** to activate your IP address modification.

2.3 Activate Device via Web Browser

Use web browser to activate the device. Use SADP software or PC client to search the online device to get the IP address of the device, and activate the device on the web page.

Before You Start

Make sure your device and your PC connect to the same LAN.

Steps

1. Open a web browser and input the IP address of the device.



Note

If you connect the device with the PC directly, you need to change the IP address of your PC to the same subnet as the device. The default IP address of the device is 192.0.0.64.

2. Create and confirm the admin password.



Caution

STRONG PASSWORD RECOMMENDED-We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

3. Click **OK** to complete activation.
4. Edit IP address of the device.
 - 1) Enter IP address modification page.
 - 2) Change IP address.
 - 3) Save the settings.

Chapter 3 Wired Network Settings

You can set the device IP address and other network parameters.

Steps



Functions varied depending on the model of the device.

1. In the client software, enter **Device Management** page.
2. Select the device in the Device for Management list, click **Remote Configuration**.
3. Click **Communication Parameters** → **Wired Network Settings** to enter the page.

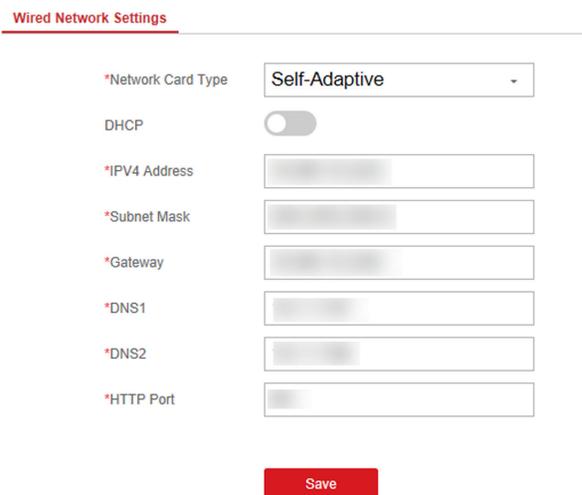


Figure 3-1 Wired Network Settings Page

4. Set the parameters.
 - Automatic Settings: Enable **DHCP** and set the HTTP port.
 - Manual Settings: Disabled **DHCP** and set **IP Address**, **Subnet Mask**, **Gateway Address**, **DNS Server Address**.



By default, the HTTP port is 80, which is not editable.

5. **Optional:** Set correct DNS server address if the device needs to visit Hik-Connect server via a domain name.
6. Set correct DNS server address if the device needs to visit server via a domain name.
7. Click **Save**.

Chapter 4 Radar Settings

You can add zones, and set camera tracking parameters for the radar in the **Radar** module of the client software.

Click **Control Panel** → **Modules Customization** , check **Radar**, and click **OK**.

4.1 Add Map

Steps

1. Click **Control Panel** → **Radar** to enter the radar page.
2. Click **Select Picture** to load a map.

Note

Supported picture formats: jpg/png/bmp.



Figure 4-1 Add a Map

3. Click **OK**.

Note

After the addition is complete, a prompt will pop up: **You need to set the plotting scale. Continue?**

4. Click **OK** in the popup window, or click ... → **Edit The Scale** to enter the page.

 **Note**

Edit the scale will remove all radars on the map.

5. Click on the map to draw a straight line, select the end position and click again to complete the drawing.
 6. Enter the actual distance between two points.
-

 **Note**

The gray word is the predicted distance range of system, for reference only.

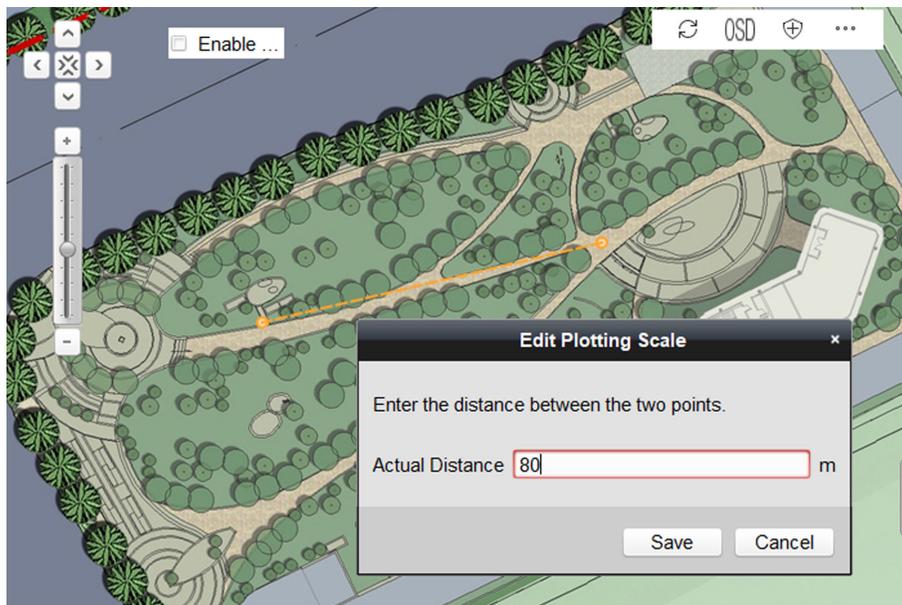


Figure 4-2 Edit Plotting Scale

7. Click **Save**.

4.2 Add the Radar to the Map

After adding the map, you need to add a radar to the map for setting radar zones.

Before You Start

Make sure that you have added the radar (when adding the device, check **Export to Group**) to the client software, and add the map.

Steps

1. Expand the device group in the left list, and then click and drag the radar onto the map.

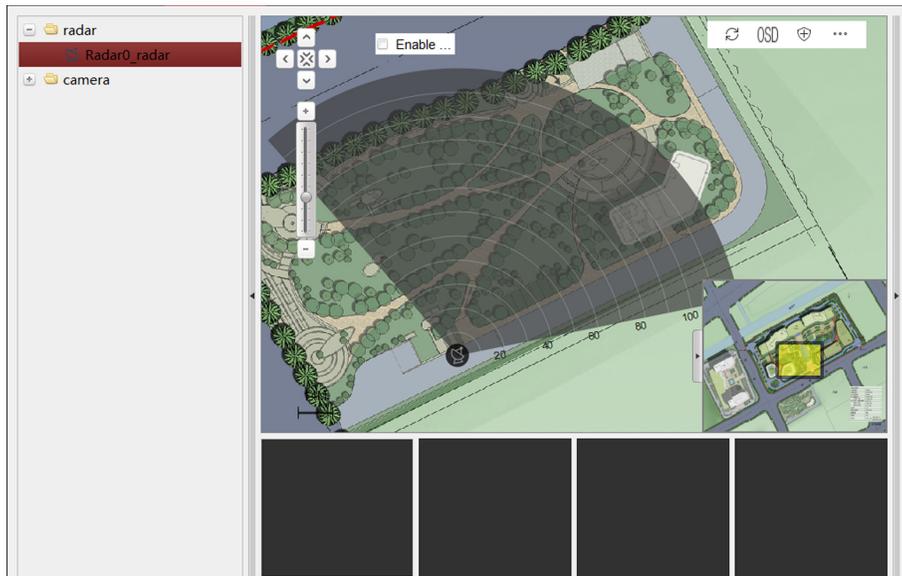


Figure 4-3 Add the Radar to the Map

- Adjust the radar position. Drag the radar to change the position, and rotate and drag  on the arc side of the fan to rotate the direction of the radar detection area.

 **Note**

- You can click the direction buttons in the upper left corner on the map or drag the yellow slider in the lower right corner on the map to adjust the range of displayed map, and slide the block on the zoom in/out bar on the zoom control strip on the left side of the map to adjust the size of displayed map.
- Right click on the radar area (gray sector), you can click **Delete** to delete the radar area, and click **Arm** or **Disarm** to start/stop the arming mode.

- Right click in the radar area, select **pin** to fix the radar area. Try to ensure that the position and direction of the radar on the map are consistent with the actual installation position and direction of the radar.
- Optional:** Right click on the radar area (the fan area) to open the radar settings menu.

Menu	Description
Delete	Delete the radar from the map.
Arm	Open the arming mode of the radar detection area.

 **Note**

If there is a target in the warning zone when arming, a prompt will appear: **There are targets in the zone, enable mandatory arming?**, and click **OK** to arm.

Disarm	Close the arming mode of the radar dectction area.
Pin	Fix the radar on the map.

- Unpin** Unlock the radar location, and then you can move the radar detection area
- On Watch** Set the camera watch point for the radar.
-

 **Note**

For more information, see ***Set Park Function for Linked Camera*** .

After enabling the radar park mode, the main radar will control the camera to return to the set watch point when no target appears within 10 seconds in the radar detection area.

4.3 Add Radar Zone

Before You Start

You need to disarm the radar before the operation. Right-click on the radar detection area, and click **Disarm** to disarm the radar.

Steps

1. In the client software, click **Control Panel** → **Radar** to enter the page.
2. **Optional:** Check **Enable Auxiliary Function** on the upper left corner of the map. The target track will appear on the radar detection area. You can draw a zone with reference to the track. The track cleared when unchecked.
3. Click ... → **Draw Zone Manually** , and click the mouse to draw a zone on the radar detection area.

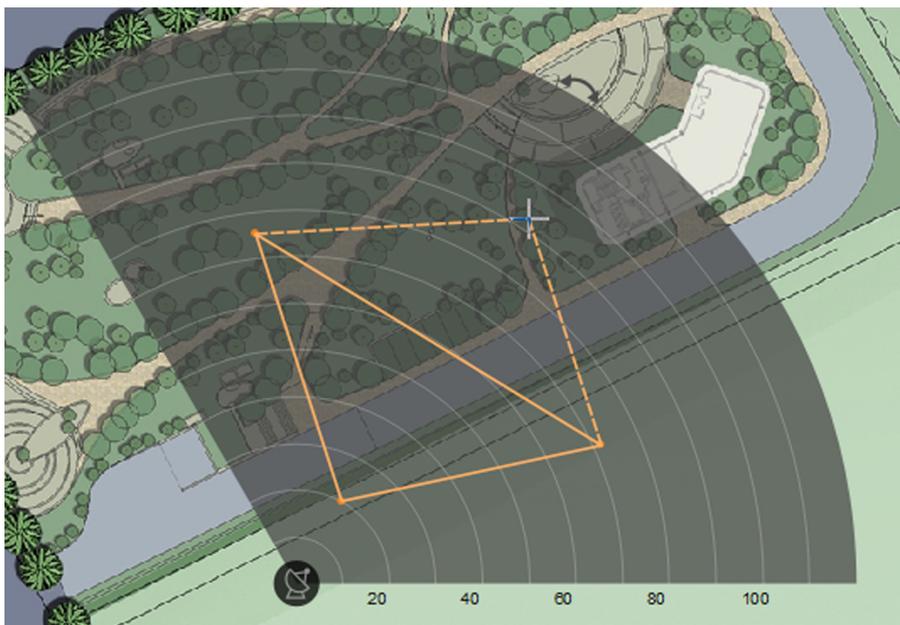


Figure 4-4 Draw a Zone

Note

- Adding zones is a batch operation. If you only add zones to one radar, you need to right-click on the remaining radar detection zones and click **Cancel**.
 - Zones can overlap, but the relationship between low priority and high priority should be satisfied. Priority is: Disabled Zone>Warning Zone>Early Warning Zone. That is, Early Warning Zone can contain Warning Zone and Disabled Zone, and Warning Zone can contain Disabled Zone.
 - If the size of the displayed radar area is too small, you can slide the block on the Zoom in/out bar on the left to adjust the size of the displayed radar area.
-



Figure 4-5 Overlap zones

4. Right-click to complete drawing, and the system will pop up a window. Enter the zone name, and select **Early Warning Zone**, **Warning Zone**, or **Disabled Zone** as the zone type.

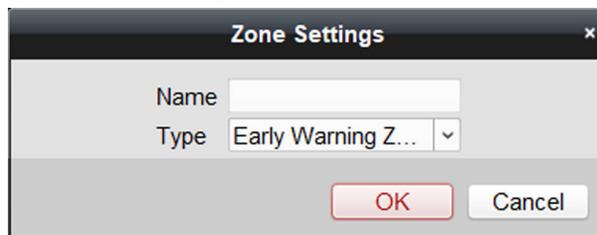


Figure 4-6 Zone Settings

Note

- **Early Warning Zone:** When the zone is an early warning zone, target with potential risks entering the zone will be identified and alarmed, but the alarm track will not be stored. It is green when the warning zone is not alarming and orange when the alarm is triggered.
 - **Warning Zone:** When the zone is a warning zone, the target entering the zone will be identified and alarm occurred. It is displayed in orange.
 - **Disabled Zone:** When the zone is a disabled zone, the track of the target entering the zone will be disabled. It is displayed in grey.
-

5. Click **OK**.

6. **Optional:** Modify or delete the zone.

1) Right-click on the zone, select **Edit**.

2) Hovering over the edge of the zone will change the cursor to a cross, click to add a marker.



Figure 4-7 Add a Marker

3) Drag the marker to change the shape of the zone.



Figure 4-8 Drag a Marker

4) Hold to drag the zone.



Figure 4-9 Drag the Zone

- 5) Right-click on the zone and select **Exit the settings mode**.

 **Note**

To delete a zone, right-click the zone in the edit state and select **Delete**.

4.4 Add Trigger Line

You need to draw at least one trigger line for the radar detection area and set alarm rules.

Before You Start

- The radar is added to the map.
- Right-click on the radar detection area, and click **Disarm** to disarm the radar.

Steps

1. In **Radar** page, click ... → **Draw Trigger Line** .

 **Note**

You can draw trigger line for all radars on the map.

2. Draw the trigger line.
- 1) Click on the radar detection area to draw a trigger line.
 - 2) Select **Left -> Right**, **Left <- Right** or **Left <-> Right** in the pop-up window.

 **Note**

- Direction determination: Set the starting point as the center of the circle, the trigger line is clockwise to the right, and counterclockwise to the left.
 - Up to 4 trigger lines can be drawn.
 - Alarm rules: A single arrow -> indicates that the target triggers an alarm when it crosses the trigger line in the direction of the arrow; a double arrow <-> indicates that the target triggers an alarm when it crosses the trigger line in any direction.
-

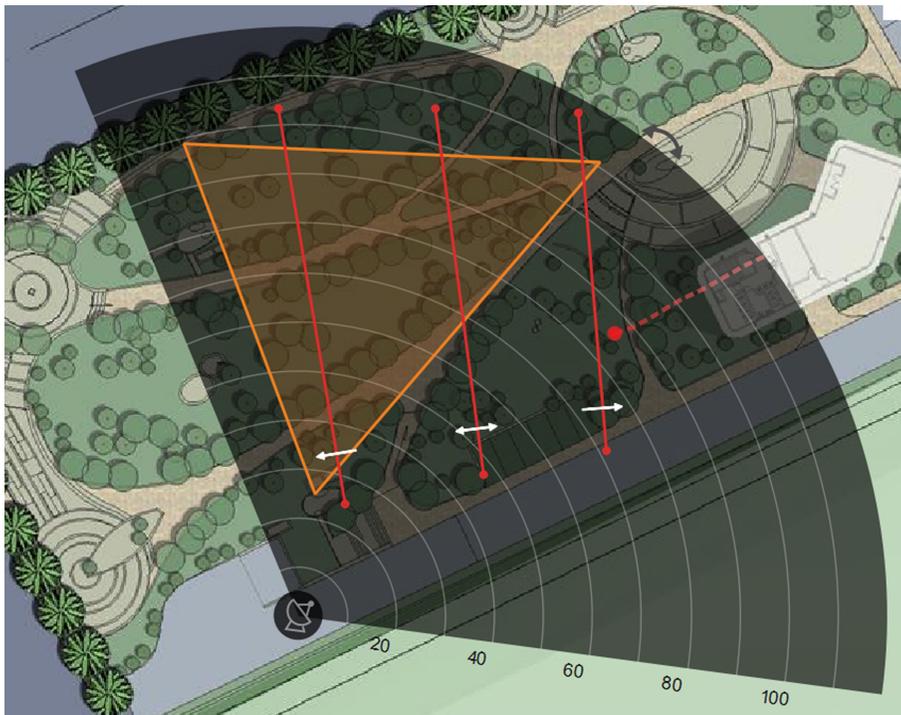


Figure 4-10 Draw a Trigger Line

3. Click **Cancel** to complete the drawing.
4. **Optional:** Edit the trigger line: right-click on the trigger line.
 - **Trigger Line: L1:** Display the name of the trigger line.
 - **Edit:** The cursor hovering over the trigger line will become the palm of the hand. Hold to move the trigger line. The cursor hovering over the end of the trigger line will become a cross. Click to adjust the position of the trigger line.



Figure 4-11 Edit the Trigger Line

- **Set Rule:** Select the trigger rule.
- **Delete:** Delete the trigger line.

4.5 Other Auxiliary Functions

Speed Dome Field of View

Note

Before using this function, you need to confirm that the speed dome has been calibrated and the speed dome has an linked zone.

In **Radar** page, click ... → **Enable Speed Dome Field of View** .

After turning on, you can see the target tracked by the currently linked speed dome.

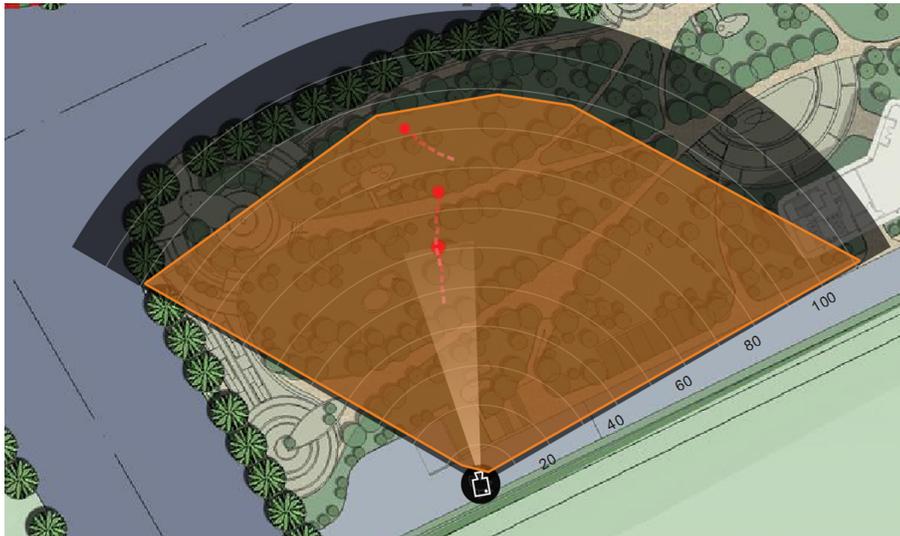


Figure 4-12 Speed Dome Field of View

You can click ... → **Disable Field of View** to close the function.

OSD

In **Radar** page, click **OSD** → **Open** .

After turning on, the speed and distance of the target will be displayed on the radar.

Mandatory Tracking

Select the radar and click Remote Configuration in the client software, or enter the IP address of the radar in the address bar of the web browser. Click **Smart Rule Settings** → **Video Tracking Switch Settings** to enter the page.

After enabled, when you click a target track in the radar detection area, the camera will mandatory track the target.

Chapter 5 Camera Linkage Settings

The radar can work with cameras such as speed dome and box camera for target tracking and video recording.

5.1 Set Speed Dome Initial Position

Set the initial position of the speed dome to ensure the tracking accuracy.

Steps

1. Select a reference object about 50 m away from the speed dome. On the reference object, select a reference point whose altitude is the same as the speed dome's.
2. Enter the IP address of the speed dome in the web browser to enter the web client. Adjust the PTZ buttons to make sure that the reference point is displayed in the live view window. Click  to enable 3D location, click the reference point and the point will be in the middle of the frame.

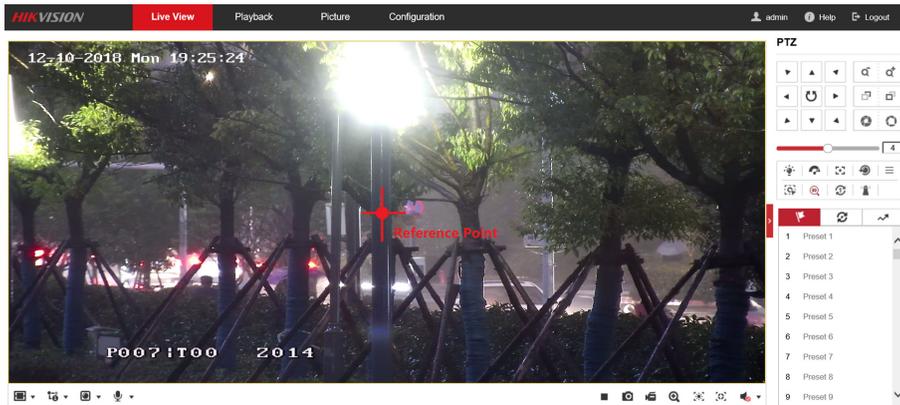


Figure 5-1 Reference Point Position

Note

- If the speed dome is installed tilted, after you click  , you may find the reference point is above the center of the frame or it is outside the frame. In this case, you should adjust the maximum elevation angle of the speed dome. For detail adjustment method, please refer to ***How to Solve the Problem that No Reference Point is on the Frame While Setting the Speed Dome Initial Position?***
- if the maximum elevation angle of the speed dome is adjusted, the reference point needs to be adjusted to the center of the frame again.
- **PTZ:** Pan /tilt /zoom.

3. Enter the **Configuration** → **PTZ** → **Initial Position** page, and click **Set** to set the initial position.

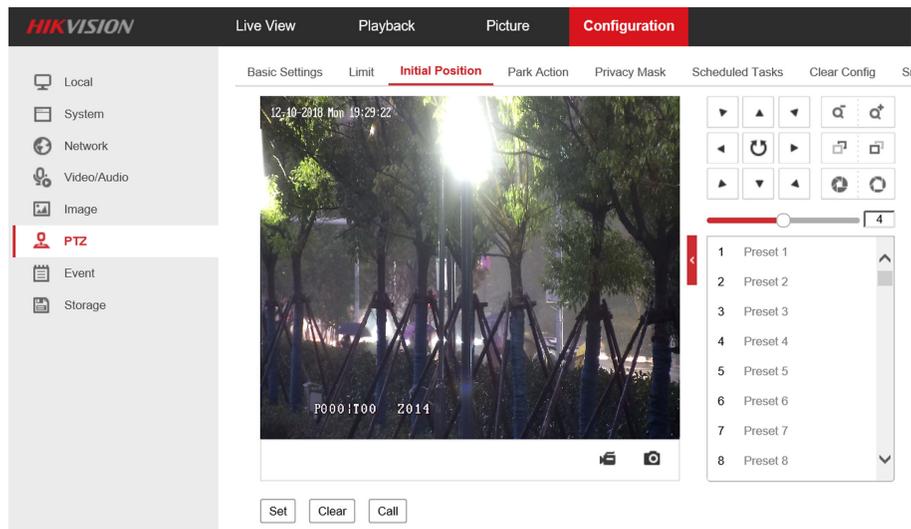


Figure 5-2 Set Initial Position

5.2 Link the Camera to the radar

Before You Start

You need to disarm the radar before the operation. Right-click on the radar detection area, and click **Disarm** to disarm the radar.

Steps

1. In the client software, click **Control Panel** → **Device Management** . Select a radar in the device list. Click **Remote Configuration** → **Smart Rule Settings** → **Camera Linkage Settings** to enter the page.

Note

You can also input IP address of the radar in a browser to enter the web client. Click **Smart Rule Settings** → **Camera Linkage Settings** to enter the page.

2. Add a camera.
 - 1) Click +.
 - 2) Enter the IP address, port, user name, password of the camera, and select whether to link to NVR.

Note

To use the NVR for video storage, you can choose to link the NVR and configure the NVR parameters.

*IP	<input type="text"/>
*Port	<input type="text"/>
*User Name	<input type="text" value="admin"/>
*Password	<input type="password" value="•••••"/>
*Link to NVR?	<input checked="" type="radio"/> Yes <input type="radio"/> No
NVR	
*IP	<input type="text"/>
*Port	<input type="text"/>
*Network Camera No.	<input type="text"/>
	<input type="button" value="OK"/> <input type="button" value="Cancel"/>

Figure 5-3 Add a Camera

- 3) Click **OK**.
3. Link zones and trigger lines to the camera.
 - 1) Select a camera in the camera list.
 - 2) Select zones and trigger lines in the **Linkage Settings**.
 - 3) Click **Save**.

 **Note**

Up to 4 linked cameras can be enabled simultaneously on a single radar.

4. Add the camera to the client software.
 - 1) In the client software, click **Control Panel → Device Management**.
 - 2) Click **Add** in the device list, enter nickname, IP address, port, user name, password of the camera. Check **Export to Group**.
 - 3) Click **Add**.

5.3 Link the Camera to the Zone

Before You Start

- Add the zone to the radar.
- Add the camera to the client software.

Steps

1. In the client software, click **Control Panel → Event Management → Zone Event** to enter the page/
2. Select a zone in the left list.

3. Select cameras to be linked in the **Trigger Camera**.

Note

- Each zone can link to 4 cameras, and up to 50 cameras can be linked.
 - For more details, see *User Manual of iVMS-4200 Client Software*.
-

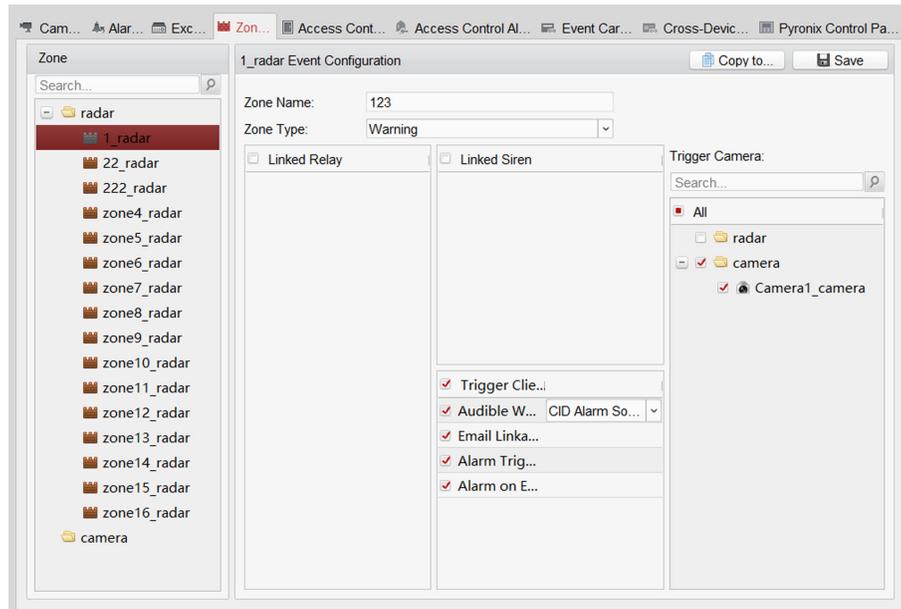


Figure 5-4 Link the Camera to the Zone

4. Click **Save**.

5.4 Enable Alarm Triggered Pop-up Image

Before You Start

- Link the camera to the zone.
- Add the camera, the NVR and the radar to the client software.

Steps

1. In the client software, click **Control Panel** → **Alarm Event** to enter the page.

I...	Alarm Time	Alarm Source	Alarm Details	Alarm Content	Live ...	Send ...	Note
14	2019-07-31 20:1...	Radar Device:radar	CID Code:1103 CID Desc...	CID Alarm	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
13	2019-07-31 20:1...	Radar Device:radar	CID Code:3103 CID Desc...	CID Alarm	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
12	2019-07-31 20:1...	Radar Device:radar	CID Code:1103 CID Desc...	CID Alarm	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
11	2019-07-31 20:1...	Radar Device:radar	CID Code:3103 CID Desc...	CID Alarm	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
10	2019-07-31 20:1...	Radar Device:radar	CID Code:1103 CID Desc...	CID Alarm	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
9	2019-07-31 20:1...	Radar Device:radar	CID Code:3103 CID Desc...	CID Alarm	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
8	2019-07-31 20:1...	Radar Device:radar	CID Code:1103 CID Desc...	CID Alarm	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
7	2019-07-31 20:1...	Radar Device:radar	CID Code:3103 CID Desc...	CID Alarm	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
6	2019-07-31 20:1...	Radar Device:radar	CID Code:1103 CID Desc...	CID Alarm	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
5	2019-07-31 20:1...	Radar Device:radar	CID Code:3408 CID Desc...	CID Alarm	<input type="checkbox"/>	<input type="checkbox"/>	
4	2019-07-31 20:1...	Radar Device:radar	CID Code:1401 CID Desc...	CID Alarm	<input type="checkbox"/>	<input type="checkbox"/>	
3	2019-07-31 20:1...	Radar Device:radar	CID Code:3103 CID Desc...	CID Alarm	<input type="checkbox"/>	<input type="checkbox"/>	
2	2019-07-31 20:1...	Radar Device:radar	CID Code:1103 CID Desc...	CID Alarm	<input type="checkbox"/>	<input type="checkbox"/>	
1	2019-07-31 20:1...	Radar Device:radar	CID Code:3408 CID Desc...	CID Alarm	<input type="checkbox"/>	<input type="checkbox"/>	

Alarm Event Motion Detection Video/Audio Exception Alarm Input Device Exception VCA Alarm Other Alarm

Figure 5-5 Alarm Event

2. Click to enable alarm triggered pop-up image.

Note

You can also double-click the alarm event or click to see details.

3. When the alarm is triggered, the client software will automatically pop up an alarm window.



Figure 5-6 The Alarm Window

- Right-click on the video window and select **Capture**. The captured image will be saved locally.

- Check **Prioritize Display of Latest Alarm**, the screen switches to 4-window mode and the new alarm video will cyclically overlay 4 windows.
- Click **Prev Page** or **Next Page** to view unread alarm messages.
- Click **Configure** to enter **Storage Schedule** page. For detailed configuration, see **Set Storage Schedule via Storage Server** .
- Click **Exit** to exit the alarm window.

4. **Optional:** Click  to disable alarm triggered pop-up image.



Note

For more details, see *User Manual of iVMS-4200 Client Software*.

5.5 Calibrate Camera

Calibrate the linked camera to ensure the accuracy of camera tracking.

Before You Start

- You need to disarm the radar before the operation. Right-click on the radar detection area and click **Disarm** to disarm the radar.
- You need to link the speed dome to the zone before calibration, and set the speed dome initial position.
- The installation height of the linked speed dome should to be more than 3 m.

Steps

1. In the client software, click **Control Panel → Radar** .
2. Click **... → Master-slave Tracking Settings** on the upper-right corner of the page.
3. Double click the radar in the device list on the left. The live view window of the camera will be displayed under the radar field diagram.

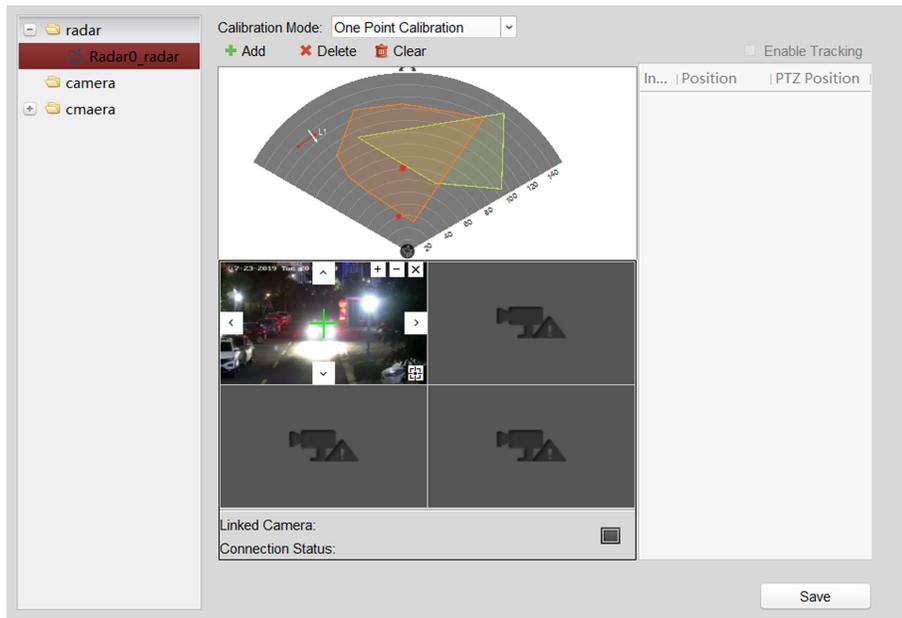


Figure 5-7 Calibration Page

4. Select the live view window of the speed dome needs to be calibrated, click  to maximum the window.



Figure 5-8 Select the camera

5. Select a schedule for calibration point selection.

 **Note**

According to the relative installation position of the radar and the speed dome, it is necessary to select a schedule for the calibration point selection (One point calibration or multipoint calibration).

- One point calibration: Applicable to the scene where the radar and the speed dome are installed on the same pole or the speed dome is installed within a radar-centered range of 2 m (regardless of the altitude difference between the speed dome and the radar).
 - Multipoint calibration: The scene where is not applicable to the one point calibration need to adopt the multipoint calibration method.
-



Figure 5-9 Installation Scene for One Point Calibration



Figure 5-10 Installation Scene for MultiPoint Calibration

6. Calibrate the camera. According to the selected schedule, calibrate the camera by one point calibration or multipoint calibration method.

5.5.1 One Point Calibration

Before You Start

Arrange a staff (Operation staff) to perform the calibration operation in the client software, and a staff (Calibration staff) to cooperate with the calibration.

Steps

1. In calibration page, select **One Point Calibration** as the **Calibration Mode**.
2. Click **Add** to add a calibration point, the PTZ position and the radar position of the calibration staff will be shown in the list on the right.

Note

Click the calibration point in the list on the right, you can click **Delete** to delete the calibration point.

3. Select the track of calibration staff: Ask the calibration staff to move into the radar detection field. Compare the moving object in the live view window of speed dome and the track in the radar field diagram, the operation staff needs to select the track of the calibration staff and click it. The color of the selected track will change from red to white.

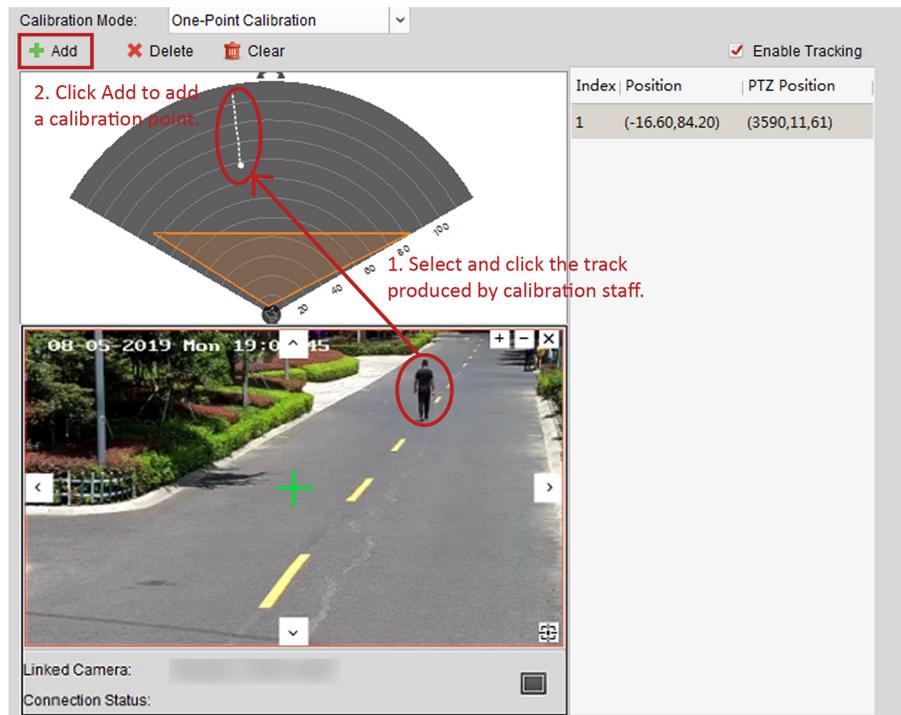


Figure 5-11 Add a Calibration Point and Select the Track

4. Get the radar position and the PTZ position of the calibration staff at the calibration point.
 - 1) Ask the calibration staff to move to the calibration point within 20 to 40 m directly in front of the radar, and then stand at the calibration point.
 - 2) When the calibration staff keeps standing at the calibration point, the operation staff clicks the calibration point in the list on the right to get the radar position of the calibration staff.

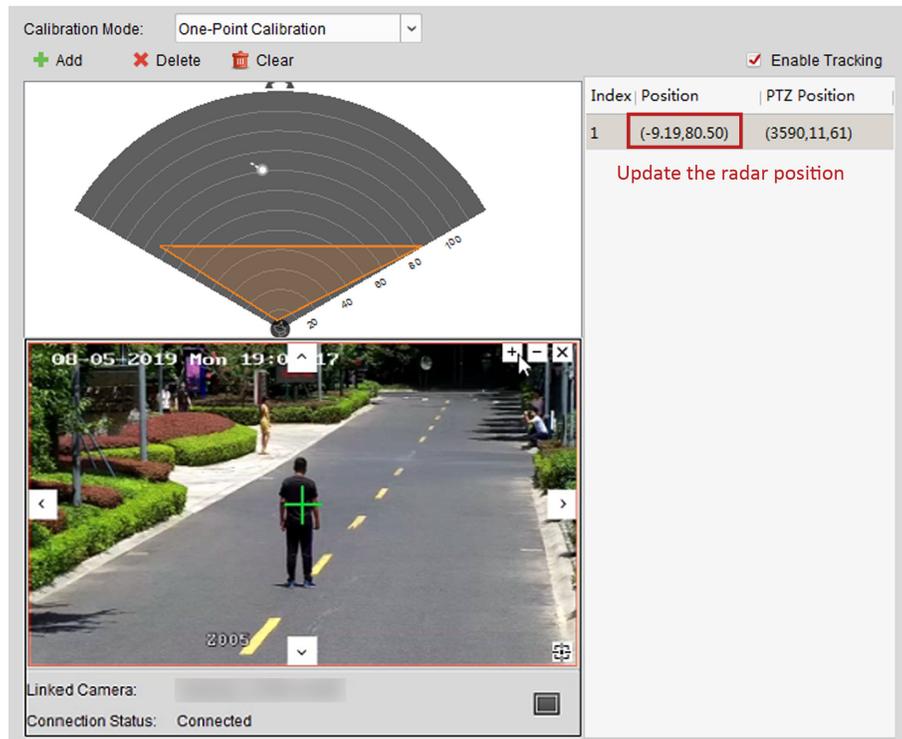


Figure 5-12 Get the Radar Position

Note

The track disappears if the calibration staff is standing in the place for more than 7s. If the calibration staff does not move to the calibration point when the track disappears, you need to ask the calibration staff to move again to produce a track, and click the track to continue the calibration.

- 3) Adjust the PTZ buttons in the live view window to get the PTZ position: Click + and - to adjust the altitude of the calibration staff to two-thirds of the altitude of the window, and click the direction buttons to align the central sign + with the calibration staff (For precise alignment, click  to enable 3D location, and then click on the center of the object).

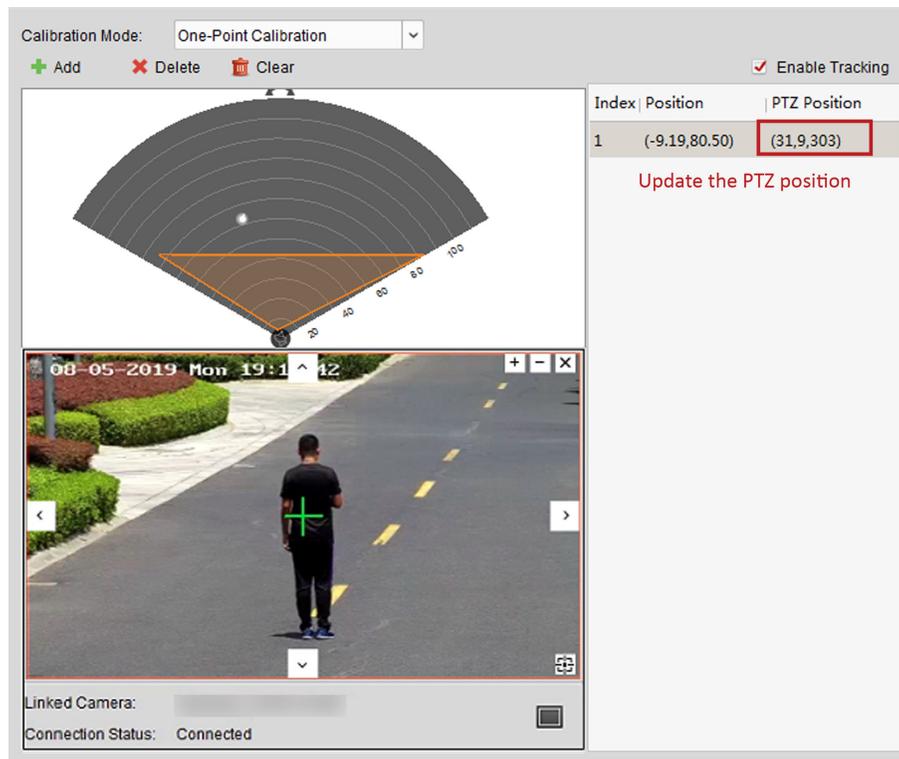


Figure 5-13 Get the PTZ position

Note

When the PTZ position updates, you need to compare the radar position with the radar position updated in step b. If the radar position of the two are inconsistent, go to step 4 again.

Note

- When calibrating, if the white track of the calibration staff moves, click the calibration point in the list on the right, the radar position will update; if you adjust the PTZ buttons in the live view window, the PTZ position of the speed dome will update.
- Before the calibration point is saved, the operation staff is not allowed to adjust the PTZ buttons in the live view window (Adjustment will change the PTZ position, and results in an incorrect calibration).

5. Click **Save**.

5.5.2 Multipoint Calibration

Before You Start

Arrange a staff (Operation staff) to perform the calibration operation in the client software, and a staff (Calibration staff) to cooperate with the calibration.

Steps

1. In calibration page, select **Multipoint Calibration** as the **Calibration Mode**.
2. Select calibration points (equally distributed) in the radar detection field, you can refer to the following figure to select points.



Figure 5-14 Multipoint Distribution Instance

Note

It is required to set at least 4 calibration points (equally distributed) when multipoint calibration.

3. According to the calibration points, ask the calibration staff to move to a calibration point, and refer to step 2 to step 4 in *One Point Calibration* to calibrate the calibration point.
4. When the first calibration point is calibrated completely, let the calibration staff move to the next calibration point after the yellow track disappears. And then refer to step 2 to step 4 in *One Point Calibration* to calibrate the calibration point. Follow this process to complete all calibration point positioning in turn.

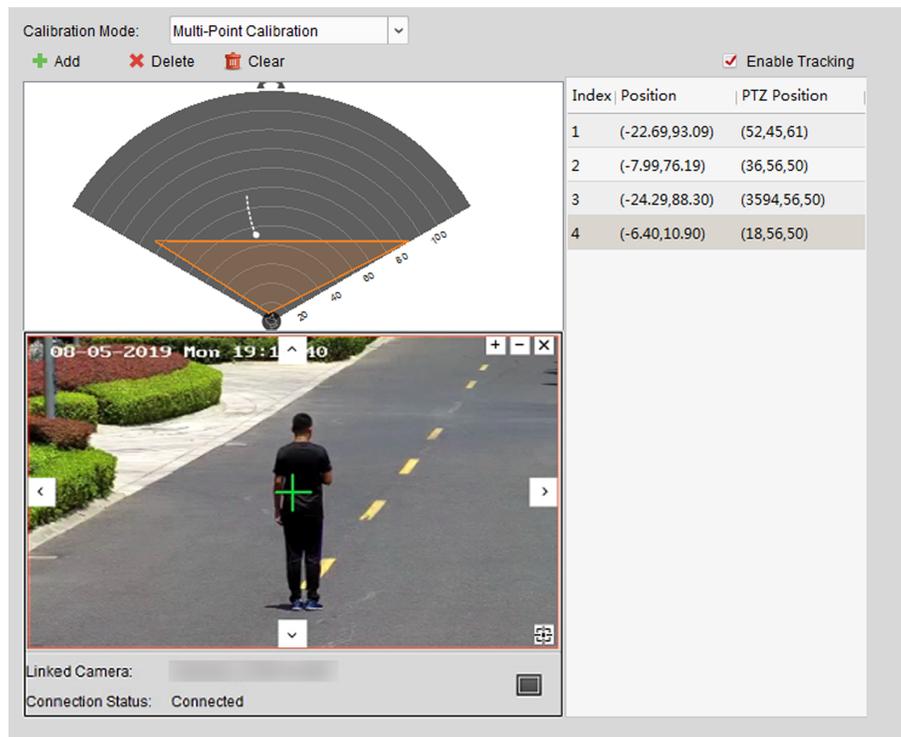


Figure 5-15 Multipoint Calibration

Note

- Every time a calibration point is calibrated completely, the operation staff should not adjust the PTZ buttons in the live view window (Adjustment will change the PTZ position of the current calibration point, and results in an incorrect calibration). You can adjust the PTZ buttons when calibrating the calibration point.
- If you need to delete all calibration points, click **Clear**; If you need to delete a calibration point, click the calibration point in the list on the right, and then click **Delete** to delete the calibration point.

5. After all calibration points is calibrated completely, click **Save**.

Note

You can save the calibration information successfully if there are 4 or more calibration points, otherwise, you cannot save it.

5.6 Enable Camera Tracking

Enable the tracking function after calibration to make the linked camera be able to track with the detected target.

Steps

1. In the client software, click **Control Panel** → **Radar** → ... → **Master-Slave Tracking Settings** to enter the page.
2. Expand the device group in the list on the left and double click the radar.
3. Select and click the live view window of the calibrated speed dome.
4. Check **Enable Tracking**, and click **Save**.

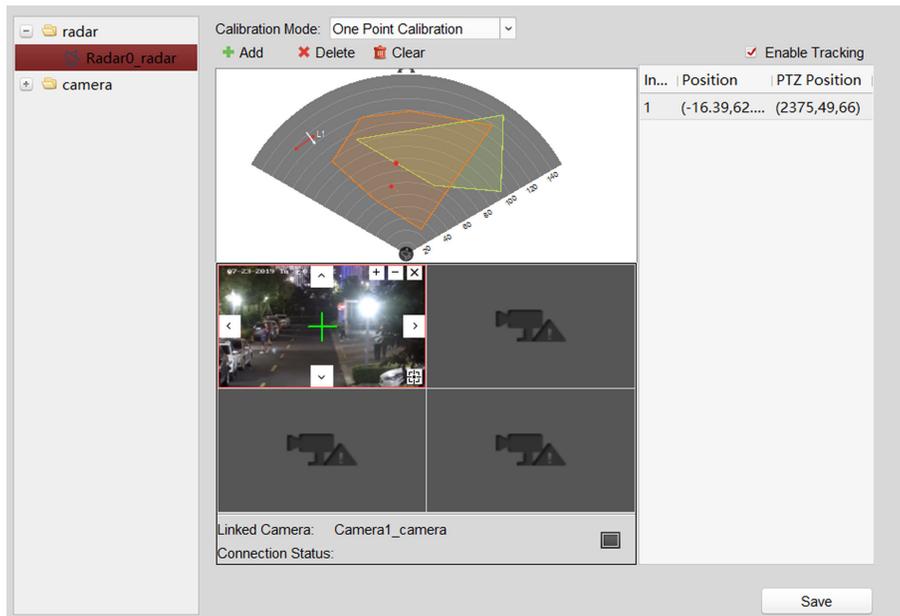


Figure 5-16 Enable Tracking

5.7 Set Park Function for Linked Camera

After enabling the radar park mode, the main radar will control the camera to return to the set watch point, when no target appears within a period of time in the radar detection area.

Before You Start

Note

Only analog cameras with watch point setting are supported.

- Add the radar to the map
- Link the camera to the radar, and add the camera to the client software.
- Calibrate the camera and enable camera tracking.

Steps

1. Enter **Radar** page in the client software.
2. Right-click on the radar detection area. Click **Set Parking Point**.



Figure 5-17 Set Camera Parking Point

3. Select a linked camera in the drop-down list.
4. Use function buttons on the right to adjust the camera screen center position (cross icon position) to the watch point.

Operation	Description
Direction-control Button	Adjust the camera direction. Hold to move the camera direction continuously.
	Rotate the camera horizontally. Hold to continuously rotate the camera horizontally.
Bar	Adjust the rotation speed of the camera. 1 is the slowest and 7 is the fastest.
+/-	Zoom the screen.

5. Click **Set as Parking Point**.
6. Check **Enable Camera Parking Action**.

Chapter 6 Set Record and Storage Settings

6.1 Set Storage Settings

You can use storage server or NVR to store videos.

6.1.1 Set Storage Schedule via Storage Server

Before You Start

- Make sure your computer has already installed the **Storage Server** that should be selected as the component when installing client.
- Activate and add the storage server to the client before setting storage schedule, you can refer to *User Manual of iVMS-4200 Client Software*.

Steps

1. In client software, click **Tool** → **Storage Schedule** to enter the page.
2. Select the camera in the Camera Group list.
3. Select a storage server from the **Storage Server** drop-down list.
4. Check **Recording Schedule** and **Picture Storage** in **Storage Server** module, and set templates.
5. Set quota.
 - 1) Click **Set Quota**.
 - 2) In the pop-up window, click **Storage** → **General**.
 - 3) Set **Quota Ratio For Record**, **Quota Ratio For Picture** **Quota Ratio For Additional Info**.
 - 4) Click **Save**.

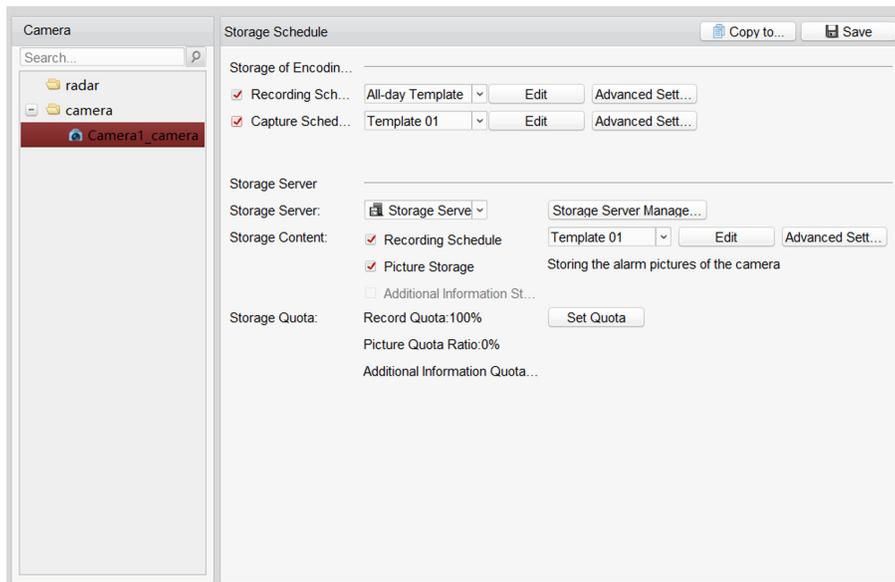


Figure 6-1 Storage Schedule

6. Check **Recording Schedule** and **Capture Schedule** in **Storage of Encoding Server** module.

7. Select a template in the drop-down list (**All-day Template**, **Weekday Template**, **Event Template**, etc.).
8. Click **Edit** and **Advanced Settings** to set the template.
9. Click **Save**.



Note

For detailed settings, please refer to *User Manual of iVMS-4200 Client Software*.

6.1.2 Set Storage Schedule via NVR

Steps

1. In the client software, click **Remote Configuration**, or input the IP address of radar in browser to enter the web client.
2. Click **Smart Rule Settings** → **Camera Linkage Settings** to enter the page.
3. Add NVR.
 - Add an NVR to an existing camera.

Select an existing camera and click edit icon. Choose **Yes** in **Link to NVR?**. Enter IP address, port and network camera No. and click **OK**.
 - Add NVR when adding a camera.

Click **+**. Choose **Yes** in **Link to NVR?**. Enter IP address, port and network camera No. and click **OK**

6.1.3 Set Tracking Strategy

Steps

1. Select the radar and click **Remote Configuration** in client software, or enter the radar IP address in the address bar of the web browser. Click **Smart Rule Settings** → **Video Record Strategy Settings** to enter the page.
2. Select **Time Priority**, **Range Priority**, or **Multi-Target Auto Switch** as the strategy. The camera will record the intrusion till the target leave warning zone.

Time Priority

Record the first target that intrude the zone.

Range Priority

Record the target that has the shortest distance away from the radar.

Multi-Target Auto Switch

Switch the target automatically when there are multiple targets in the zone. You should set **Switch Interval**.

3. Click **Save**.

Chapter 7 Alarm Settings

7.1 Alarm Center

You can set the alarm center's parameters and all alarms will be sent to the configured alarm center.

Steps

1. Click **Communication Parameters** → **Alarm Center Parameters** to enter the Alarm Center Settings page.

Figure 7-1 Alarm Center Parameters

2. Select **Center Group**, and slide the slider to enable the center group. The alarm information will be uploaded to the selected center group.
3. Select **Protocol Type** from the drop-down list, select **Server Address Type** from the drop-down list, enter the server address, port No., and the user name.

Note

The protocol type NAL2300 is the Hikvision private protocol.

4. Click **Save**.

7.2 Notification Push

When an alarm is triggered, if you want to send the alarm notification to the client, alarm center, cloud or mobile client, you can set the notification push parameters.

Steps

1. Click **Communication Parameters** → **Message Notification**.

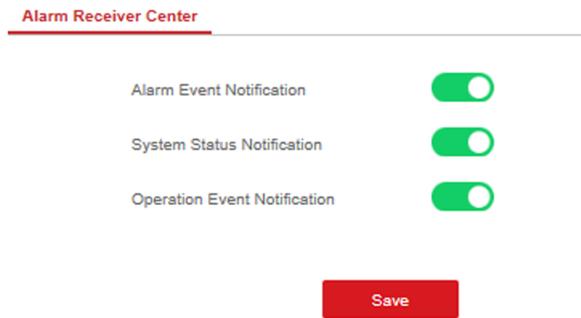


Figure 7-2 Notification Push

2. Enable the target notification.

Alarm Event Notification

The device will push notifications when the zone alarm is triggered or restored.

System Status Notification

The device will push notifications when any status in the system is changed.

Operation Event Notification

The device will push notifications when the user operate the device.

3. Click **Save**.

7.3 Set Zone

Steps

1. Select the radar and click **Remote Configuration** in the client software, or enter the radar IP address in the address bar of the web browser. Click **Alarm Module Parameters** → **Zone** to enter the page.

The screenshot shows the 'Zone Management' interface with a table containing the following data:

Zone	Zone Name	Zone Type	Configuration
5	555	Disabled Zone	
8	Universe~	Disabled Zone	

Figure 7-3 Set Zone

2. Select a zone, and click to edit the zone name and zone type.
3. Click **OK** to complete.

7.4 Set Alarm Output

Steps

1. Select the radar and click **Remote Configuration** in the client software, or enter the IP address of the radar in the address bar of the web browser. Click **Alarm Module Parameters** → **Relay** to enter the page.

Caution

- 3-ch weak current alarm output: 0.5 A/125 VAC, breakdown voltage: 1 KV.
- 1-ch strong current alarm output: 10 A/240 VAC, breakdown voltage: 2.5 KV.

Output

Relay	Relay Name	Output Time	Configuration
1	relay1	60	
2	relay2	60	
3	relay3	60	
4	relay4	60	

Figure 7-4 Relay

Note

You can also click **Control Panel** → **Radar** → → ... → **Alarm Output** to open or close the relay.

2. Select an relay, and click  to enter the page.
3. Edit the relay name, and output time.
4. Set relay linkage. Link the relay with alarm event, system event, and arming/disarming operation.
5. **Optional:** Check **Enable Zone Tracking**. When enabled, after the relay-linked zone is triggered by an alarm, the relay will remain open until the target exits the zone or the alarm is manually closed.

Note

After the zone tracking is turned on, if only the zone is selected in the alarm event, the relay output time is based on the time when the alarm triggered in the zone.

6. Click **OK** to save.
7. Click **Delete** to delete a selected period. Click **Delete All** to delete all periods in the time table.

7.5 Set Trigger Line

Steps

1. Select the radar and click **Remote Configuration** in the client software, or enter the IP address of the radar in the address bar of the web browser. Click **Alarm Module Parameters → Trigger Line** to enter the page.
2. Select an relay, and click  to enter the page. You can edit the name of the trigger line.
3. Click **OK**.

7.6 Set Arming/Disarming Schedule

Steps

1. Select the radar and click **Remote Configuration** in the client software, or enter the IP address of the radar in the address bar of the web browser. Click **Smart Rule Settings → Arming/Disarming Schedule** to enter the page.



Figure 7-5 Arming/Disarming Schedule

2. Drag the mouse to draw the period bar on the time table, or click the period bar and enter the start and end time.

Note

You can set 2 arming/disarming periods each day.

3. Click **OK** to save.
4. Click **Delete** to delete a selected period. Click **Delete All** to delete all periods in the time table.
5. Click **Save**.

7.7 Set Motion Speed

Steps

1. Select the radar and click **Remote Configuration** in the client software, or enter the IP address of the radar in the address bar of the web browser. Click **Smart Rule Settings → Alarm Speed Settings** to enter the page.
2. Check **Motion Speed**.
3. Slide the bar to set **Min. Speed Threshold** and **Max. Speed Threshold**.

Note

After enabled, only the target that move in set speed threshold will trigger the alarm.

4. Click **Save**.

7.8 Video Tracking Switch Settings

Steps

1. Select the radar and click Remote Configuration in the client software, or enter the IP address of the radar in the address bar of the web browser. Click **Smart Rule Settings → Video Tracking Switch Settings** to enter the page.
2. Check **Enable Mandatory Tracking**.
3. Set time of mandatory tracking.

Note

After enabled, when you click a target track in the radar detection area, the camera will mandatory track the target.

4. Click **Save**.

Chapter 8 Set Radar Advanced Function

8.1 Set Master-slave Tracking Settings

If the radar need multiple-radar linkage, you can arrange multiple radars for linkage detection and configure the radar master-slave relationship.

Before You Start

There are at least 2 online radars.

Steps

1. Select the radar and click Remote Configuration in the client software, or enter the IP address of the radar in the address bar of the web browser. Click **Radar Settings → Master-slave Tracking Settings** to enter the page.
2. Set the radar type and parameters.
 - If the current radar is set as master radar, you can add, edit, delete the slave radar, and set the slave radar priority.
 - If the current radar is set as slave radar, you need to set the main radar IP address.

What to do next

When the target is appear on the radar, the target information to be tracked is sent to the main radar, and the main radar arranges linked cameras to track the target according to the set radar priority.

8.2 Set Detection Angle and Range

Steps

1. Select the radar and click **Remote Configuration** in the client software, or Enter the radar IP address in the address bar of the web browser. Click **Radar Settings → Detection Angle and Range** to enter the page.

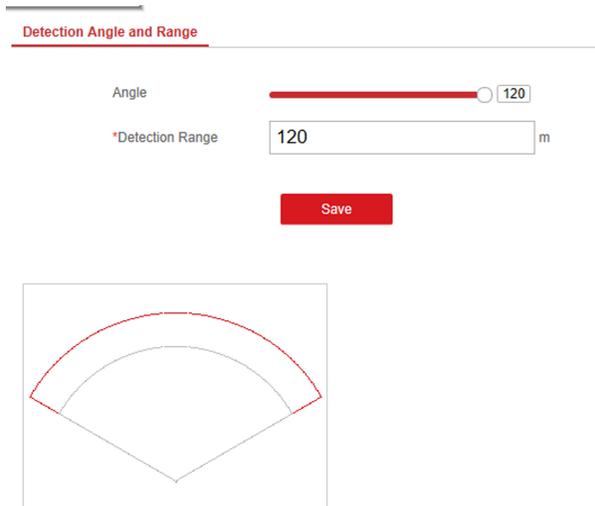


Figure 8-1 Set Detection Angle and Range

2. Slide the bar to set the radar angle, and enter the detection range.
3. Click **Save** to complete.

8.3 Set Scene Mode and Sensitivity

Steps

1. Select the radar and click **Remote Configuration** in the client software, or Enter the radar IP address in the address bar of the web browser. Click **Radar Settings** → **Sensitivity Settings** to enter the page.

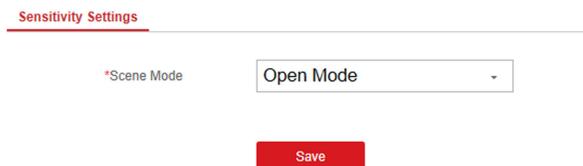


Figure 8-2 Sensitivity

2. Select **Open Mode**, **Shrub Mode**, or **Expert Mode** as the radar sensitivity mode.

Open Mode

There are no large objects in the radar detection area.

Shrub Mode

There are shrubs and other objects that are likely to swing in the radar detection area. The shrub mode can also be used to decrease the interference of rainstorm.

Expert Mode (Custom Mode)

You can set tracking sensitivity, swing sensitivity, signal sensitivity, speed sensitivity and dwell time according to actual scenario requirements.

Note

When adjusting the sensitivity, the higher the value, the higher the detection sensitivity.

3. Click **Save** to complete.

8.4 Set Frequency Range Settings

Steps

1. Select the radar and click Remote Configuration in the client software, or enter the IP address of the radar in the address bar of the web browser. Click **Radar Settings → Frequency Range Settings** to enter the page.
 2. The radar supports 2 frequency bands, you can select one according to needs.
-

Note

- When multiple radars cover the same area, co-frequency interference can be reduced by setting different frequency bands.
 - Try to avoid overlapping radar detection areas.
-

3. Click **Save**.

Chapter 9 View Alarm Information

The device supports alarm information query and alarm event playback.

Before You Start

Record and storage settings are required before searching and playing back alarm events. For details, see *Set Record and Storage Settings*.

Steps

1. In the client software, click **Control Panel** → **Radar**.
2. Select the radar that needs to view in the left list, and then click  on the right side to open the alarm information query page
3. Select the date, and then click **Search**.
4. Double-click an alarm event in the result list. The windows of radar track playback screen and video playback of the selected alarm event will pop up.

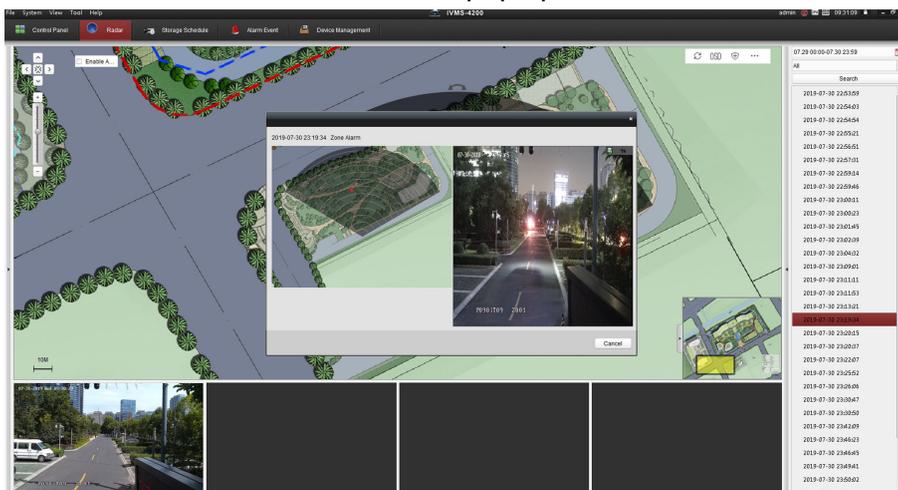


Figure 9-1 Alarm event viewing and playback

Chapter 10 System Management

10.1 Set Time

Steps

1. Select the radar and click **Remote Configuration** in the client software, or enter the radar IP address in the address bar of the web browser. Click **System** → **Time** to enter the page.

Time Management

Time Zone: (GMT+08:00) Beijing, Urumqi, Singapore

Time Sync

Synchronization Method: NTP Manual Time Sync

Device Time: 2018-09-14 13:53:41

Set Time: 2018-09-14 13:53:40 Sync. with computer time

Save

Figure 10-1 Time

2. Set the time zone and synchronization method.
3. Click **Save**.

10.2 Manage User

Steps

1. Select the radar and click **Remote Configuration** in the client software, or enter the radar IP address in the address bar of the web browser. Click **System** → **User** to enter the page.

User Management

 Edit

No.	User Name	User Type
1	admin	Administrator

Figure 10-2 User

2. Select the admin account, and click **Edit** to edit the admin information.

10.3 System Maintenance

You can reboot the device, restore default settings, import/export configuration file, or upgrade the device remotely.

Select the device and click **Remote Configuration** in the client software, or enter the device IP address in the address bar of the web browser. Click **System** → **System Maintenance** to enter the Upgrade and Maintenance page.

Reboot

Click **Reboot** to reboot the device.

Restore Default Settings

Click **Partly Restore** to restore all parameters except for admin user information, wired network, Wi-Fi network, detector information, and peripheral information to default ones.

Click **Restore All** to restore all parameters to the factory settings.

Import Configuration File

Click **View** to select configuration file from the PC and click **Import Configuration File** to import configuration parameters to the device.

Export Parameters

Click **Export Configuration File** to export the device configuration parameters to the PC.

Upgrade File

Click **View** to select an upgrade file from the PC and click **Upgrade** to upgrade the device remotely.



Note

Do not power off when the device is upgrading.

10.4 View Device Information

Select the device and click **Remote Configuration** in the client software, or Enter the device IP address in the address bar of the web browser. Click **System Device → Device Information** to enter the page.

10.5 Search Log

Steps

1. Select the device and click **Remote Configuration** in the client software, or enter the device IP address in the address bar of the web browser. Click **System → Local Log Search** to enter the page.
2. Select Log type and time, and click **Search** to get the log list.

10.6 Enabling Remote Debugging

You are able to enable SSH (Secure Shell). When SSH is enabled, the technical support can log in to the device remotely to view the printing information of the device.

In the client software, click **System → Security** to enter the SSH Settings page and you can enable or disable the SSH function.

Appendix A. Radar Mounting Height Recommendation

The recommended installation height is 2 to 3 m.

The following table shows the detection range at different mounting heights.

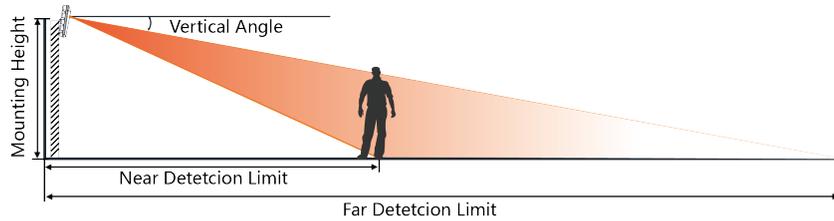


Figure A-1 Radar Mounting Height and Detection Range

Table A-1 Radar Mounting Height and Detection Range

Mounting Height	Vertical Angle	Far Detctcion Limit	Near Detection Limit
2.0 m	0°	102 m	4.2 m
2.0 m	3°	106 m	3.0 m
2.0 m	6°	87 m	2.4 m
2.0 m	9°	85 m	3.2 m
2.5 m	0°	124 m	5.5 m
2.5 m	3°	112 m	5.1 m
2.5 m	6°	89 m	4.2 m
2.5 m	9°	80 m	4.3 m
3.0 m	0°	119 m	7.8 m
3.0 m	3°	110 m	8.2 m
3.0 m	6°	98 m	7.1 m
3.0 m	9°	81 m	6.4 m

Appendix B. Formatting Description

You can restore all parameters to default settings for formatting the security radar by the reset button.

You can format the device as follows.

Steps

1. Power off the radar, and then hold the reset button while powering the radar on.
2. Keep holding until the red and green LED flashes for 6 times, then release the reset button and the radar will restart again.
3. All parameters will be restored to default values after the radar restarts, and you need to reactivate the radar.

Appendix C. Indicator Description

The indicator status description of the radar:

Table C-1 Indicator Description

Indicator	Status
Solid Green	Radar Powered on
Solid Red	Zone Alarm Occurred
Flashing Red and Green	Radar Network Disconnection/Radar Sensor Exception When formatting, the red and green LED flashes for 6 times, indicating that the formatting was successful.

Appendix D. FAQ

D.1 How to Achieve an Optimum Detection Range?

Answer:

You can refer to *Radar Mounting Height Recommendation* for installation of radar, and you should test the radar after installation to make sure it is properly mounted. The test method is as follows:



You need to enable OSD function before testing.

The near detection distance: arrange a tester to move directly from 20 m in front of the radar until the tester track disappear on the radar detection area. The last tester distance that displayed by OSD, is the near detection distance.

The far detection distance: Arrange a tester to move from the directly ahead of the radar and far away from the radar installation position (outside the radar detection area) to the radar detection area. When the target track first appears in the detection area, the tester stops moving. The last tester distance that displayed by OSD, is the far detection distance.



When testing the far detection distance, the tester is required to move along the center normal of the detection area, to ensure optimum far detection distance.

According to the tested near detection distance and far detection distance, and refer to *Table A-1 Radar Mounting Height and Detection Range* to adjust the radar mounting angle.

D.2 How to Solve the Problem that the Radar is not Shown in the Device List on the Radar Page?

Answer:

You should delete the radar and add it to the client software again.



The port number of the radar should be 80. When you add the radar to the client software, set the **Port** as 80.

D.3 How to Adjust the Sensitivity to Avoid False Alarm?

Answer:

- If there are shrubs in the radar filed, set the radar sensitivity mode as **Shrub Mode**, which helps avoid the false alarm caused by gale, storm, or shrub swing.
- If **Shrub Mode** is not satisfied, set the sensitivity mode as **Expert Mode** (Custom Mode). Set the **Signal Sensitivity** less than or equal to two, the **Swing Sensitivity** less than five, and the **Tracking Sensitivity** less than or equal to five.

D.4 How to Raise the Precision of Camera Tracking?

Answer:

- Check if the speed dome initial position is set, if not, please set the speed dome initial position.
- Check if the calibration points are correct. Pay attention to the situation that the target is intercepted when calibrating. If the calibration points are error, please calibrate again.
- Check if the calibration positions is equally distributed when you set the multi-point calibration.
- Do not move the speed dome manually after the calibration. If the speed dome is manually moved, please reset the initial position of the speed dome and then calibrate again.

D.5 How to Solve the Problem that No Reference Point is on the Frame While Setting the Speed Dome Initial Position?

Answer:

If the speed dome is tilted, it may cause that the reference point is above the center of the frame or outside the frame while setting the speed dome initial position. In this case, you should adjust the maximum elevation angle of the speed dome as follows.

Steps

1. Enter the IP address of the speed dome in the web browser to enter the web client.
2. Click  to expand the PTZ list on the **Live View** page, and then click  to enter the main menu of the speed dome.



Figure D-1 The Main Menu of Speed Dome

Note

You can adjust the cursor for menu selection by clicking the up and down direction keys in the PTZ list, and click  to enter the selected item.

- Adjust the cursor to **System Settings** in the main menu and click . And then adjust the cursor to **Motion** and click  to enter the page.



Figure D-2 Motion

- Adjust the cursor to **Next Page** in the sport mode menu and click . And then adjust the cursor to **Max Ele Angle (DEG)** and click  to enter the page.



Figure D-3 Maximum Elevation Angle Adjustment

- Click up and down direction keys in the PTZ list to adjust the maximum elevation angle, and then you need to click  to save the settings.
- Adjust the cursor to **Exit** to exit the menu.

Note

You need to reset the speed dome initial position after the maximum elevation angle adjustment.

D.6 What is the Reason that Failed to Draw a Zone Automatically?

Answer:

- The main reason is that the moving target (with track) does not form a closed-loop. You can check if there is a clear intersection of the track in the zone drawing page. If the track does not closed, the drawn zone will be recognized as an invalid zone.
- When the object is moving for drawing a zone, if the track of the target is lost and then appear again on the zone drawing page, and the distance between lost position and the position the target appeared again is too far, the settings will be failed.

D.7 What Makes a Failed Arming?

Answer:

The following two conditions will make a failed arming:

- In the **Radar** page, if there is a moving target in the warning zone when you click ⊕ → **Arm** to arm radars, it is impossible to enable mandatory arming, resulting in failed arming.
- The current status of radar is offline.

D.8 Why Is It Required to Remove Reflective Objects from the Radar Area?

Answer:

- When there are reflective objects in the radar application scene, such as flat glass or large-area metal objects, the radar will produce multipath effects, that is, the people reflect the signal from the radar to the large-area metal objects or flat glasses, and the large-area metal objects or flat glasses reflect the signal again to the receiving end of the radar, thus there will be a false alarm. Since the glasses are flat and the reflection is concentrated, there may be a false alarm when there are glasses in the radar scene.
- The higher the sensitivity, the more probability to trigger a false alarm.

D.9 Why Is the Camera Unable to Track the Target?

- The camera is not calibrated.
- The camera is not linked to the zone.

D.10 Common Mistakes of Calibrating Camera

Prompt when selecting target: Please select the calibration target trajectory.

Reason: Target not selected or disappeared when acquiring parameters.

Solution: Select the moving target for parameter acquisition.

Prompt when adding calibration points: Error in parameter range, illegal range: $T \leq 0$.

Reason: The angle of pitch, T, of the speed dome is less than or equal to 0.

Solution: Adjust the angle of pitch of the speed dome so that T is greater than 0.

Prompt when adding calibration points: Incorrect Parameters.

Reason: The status of the linked camera device is offline.

Solution: Reconnect the camera. Make the status of the camera is online to continue calibration.



See Far, Go Further