



# Mobile Video Recorder

Quick Start Guide

# Legal Information

## Quick Start Guide

©2019 Hangzhou Hikvision Digital Technology Co., Ltd.

## About this Manual

This Manual is subject to domestic and international copyright protection. Hangzhou Hikvision Digital Technology Co., Ltd. ("Hikvision") reserves all rights to this manual. This manual cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision.

Please use this user manual under the guidance of professionals.

## Trademarks

**HIKVISION** and other Hikvision marks are the property of Hikvision and are registered trademarks or the subject of applications for the same by Hikvision and/or its affiliates. Other trademarks mentioned in this manual are the properties of their respective owners. No right of license is given to use such trademarks without express permission.

## Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THIS MANUAL. HIKVISION DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OF THE MANUAL, OR THE CORRECTNESS, ACCURACY, OR RELIABILITY OF INFORMATION CONTAINED HEREIN. YOUR USE OF THIS MANUAL AND ANY RELIANCE ON THIS MANUAL SHALL BE WHOLLY AT YOUR OWN RISK AND RESPONSIBILITY.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

## Regulatory Information

### FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance 20 cm between the radiator and your body.

### FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

### EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/30/EU, the LVD Directive 2014/35/EU, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For

more information see: **[www.recyclethis.info](http://www.recyclethis.info)**



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: **[www.recyclethis.info](http://www.recyclethis.info)**

## Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 <b>Danger</b>	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
 <b>Caution</b>	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 <b>Note</b>	Provides additional information to emphasize or supplement important points of the main text.

# Contents

<b>Chapter 1 Installation and Connection</b> .....	<b>1</b>
<b>1.1 Before You Start</b> .....	<b>1</b>
<b>1.2 Environment</b> .....	<b>1</b>
<b>1.3 Install SIM Card</b> .....	<b>2</b>
<b>1.4 Install Antenna</b> .....	<b>2</b>
<b>1.5 Install SD Card</b> .....	<b>3</b>
<b>Chapter 2 Device Wiring</b> .....	<b>5</b>
<b>2.1 Power Cord Wiring</b> .....	<b>5</b>
<b>2.1.1 Shutdown Delay</b> .....	<b>5</b>
<b>2.1.2 Scheduled Shutdown</b> .....	<b>6</b>
<b>2.2 Alarm Input Connection</b> .....	<b>7</b>
<b>2.3 Sensor-In Wiring</b> .....	<b>7</b>
<b>2.4 Power on Device</b> .....	<b>8</b>
<b>Chapter 3 Activation</b> .....	<b>9</b>
<b>3.1 Default Information</b> .....	<b>9</b>
<b>3.2 Activate via Web Browser</b> .....	<b>9</b>
<b>Chapter 4 Basic Operation</b> .....	<b>10</b>
<b>4.1 Login</b> .....	<b>10</b>
<b>4.2 Dial</b> .....	<b>10</b>
<b>4.3 Connect to EHome Platform</b> .....	<b>11</b>
<b>4.4 Manage IP Camera</b> .....	<b>11</b>
<b>4.4.1 Activate IP Camera</b> .....	<b>11</b>
<b>4.4.2 Add IP Camera</b> .....	<b>12</b>
<b>4.4.3 Edit IP Camera</b> .....	<b>12</b>
<b>Chapter 5 FAQ</b> .....	<b>14</b>
<b>5.1 Why does my device fail to start up after connecting the power?</b> .....	<b>14</b>
<b>5.2 Why does my device fail to dial?</b> .....	<b>14</b>
<b>5.3 Why does my device make a beeping sound after startup?</b> .....	<b>14</b>

# Chapter 1 Installation and Connection

---

## Note

Device pictures in this section are only for reference. In condition that device pictures conflict with the real devices, the later prevails.

---

## 1.1 Before You Start

Take out the device from the package. Check the device and accessories. Contact us if something is missing or damaged.

## 1.2 Environment

Consider the following environment conditions when installing the device.

### Anti-vibration

Install the device on the part with weak vibration (such as the part behind the driver's seat, the part behind the passenger's seat, etc.) and far away from the engine.

### Heat dissipation

Install the device in the position far away from heat and with good ventilation for good heat dissipation.

### Enough space

Leave enough space for ventilation, heat dissipation, plugging or unplugging dummy HDD, etc.

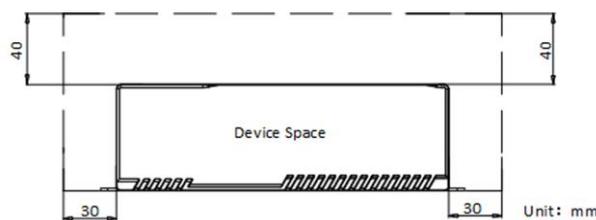


Figure 1-1 Recommended Installation Space

### Placing angle

Place the device horizontally. The other placing angles may damage the device.

### Fixing position

All the screws in the fixing positions must be fastened tightly to avoid device falling during the vibration in driving.

## 1.3 Install SIM Card

Pluggable 3G/4G wireless communication module is designed for the device. Install SIM card to realize wireless communication.

### Before You Start

Prepare SIM card and wrench.

### Steps


---

#### Note

This section is only applicable to the device supporting 3G/4G and Wi-Fi.

---

1. Wear antistatic gloves.
2. Use wrench to unfasten and remove the two screws fixing the 3G/4G and Wi-Fi module.
3. Pull out the 3G/4G and Wi-Fi module.

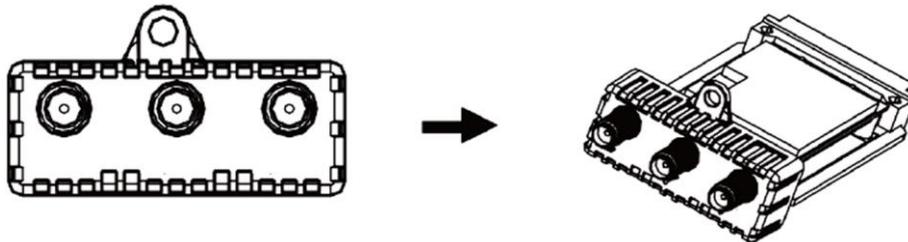

**Figure 1-2 Pull out Module**

4. Press the button on SIM card slot and then pull the SIM card tray out.
5. Place the SIM card on SIM card tray with the metal side facing upwards.
6. Insert the SIM card tray back to SIM card slot.
7. Install the 3G/4G and Wi-Fi module back to the device and fasten the screws.

## 1.4 Install Antenna

Follow the notice below for antenna installation.

---


#### Note

The installations of 3G/4G and Wi-Fi antennas are only applicable to the device supporting 3G/4G and Wi-Fi.

---


- Connect antennas to corresponding antenna interfaces.
- Place antenna vertically with its signal receiving end facing upward.
- If the cable is too long, you can roll them up to prevent signal receiving from being affected.
- Install 3G/4G antenna in car windshield, seat backrest, or other non-metallic objects. Keep away from metal objects for at least 50 cm.

- Vertically install positioning antenna on the automobile roof with no shelter.

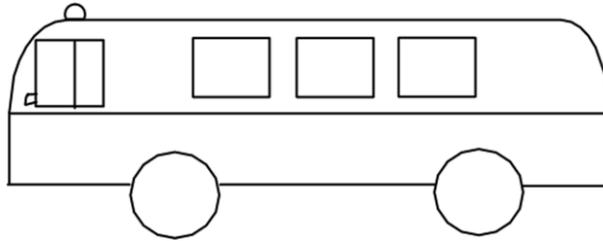

**Figure 1-3 Install Positioning Antenna on Automobile Roof**

- Follow the instructions below in case that you need to install positioning antenna inside your automobile.
  - Install antenna on platform under the front windshield.

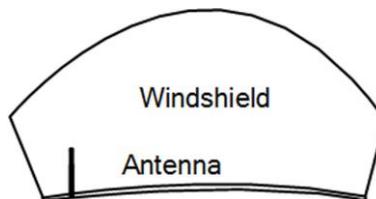

**Figure 1-4 Install Positioning Antenna Inside Automobile**

- Fix antenna with neutral silica gel.
- When adjusting the antenna position, ensure that at least 4 satellites have a signal strength above 35 dB. You can go to **Location Status** interface to view positioning signal status.

## 1.5 Install SD Card


SD card is used for temporary video storage in the condition that HDDs are not installed or failed.

### Before You Start

Prepare the key to dummy HDD (delivered with device) and SD card.

### Steps

1. Wear antistatic gloves.
2. Insert the key and turn counterclockwise to unlock dummy HDD.
3. Unfasten the two screws of dummy HDD and pull it out of device.

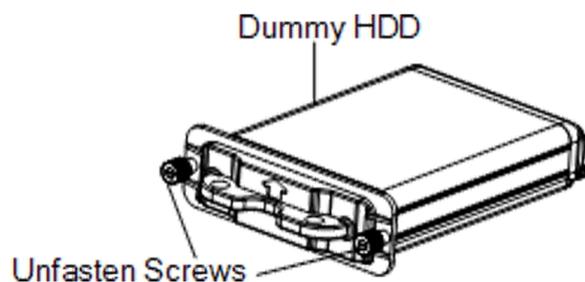

**Figure 1-5 Pull Dummy HDD out**

## Mobile Video Recorder Quick Start Guide

---

4. Open the cover of SD card slot.
5. Insert SD card into SD card slot till you hear a click.
6. Plug the dummy HDD back to the device, close the cover of SD card slot, and then tighten the screws clockwise.
7. Turn the key clockwise to lock dummy HDD.

## Chapter 2 Device Wiring

### 2.1 Power Cord Wiring

---

#### Warning

- In order to ensure the safety of your automobile and device, a fuse is required for wiring of automobile power and device power.
  - Do not connect the power cord to the device before all the cables are connected.
- 

#### 2.1.1 Shutdown Delay

The device starts up when your automobile ignites and shuts down after automobile is off. Automobile ignition startup and shutdown are realized by positive pole ignition switch (providing high level signal when the switch closes). Ignition switch is connected to the positive pole of automobile batteries.

#### Steps

---

##### Note

- The wire connection of the device varies with the automobile ignition models.
  - Make sure the connection of ignition switch is correct.
- 

1. Connect **DC IN +** of the device to the positive pole of automobile batteries, jumping over the switch of normal automobile power.
2. Connect **DC IN -** of the device to the negative pole of automobile batteries.
3. Connect **ACC** of the device to the automobile ignition switch.
4. Place fuse into the fuse holder.

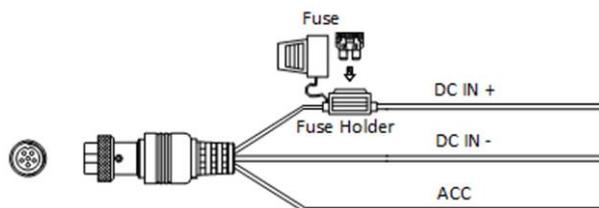


Figure 2-1 Power Cord

## Result

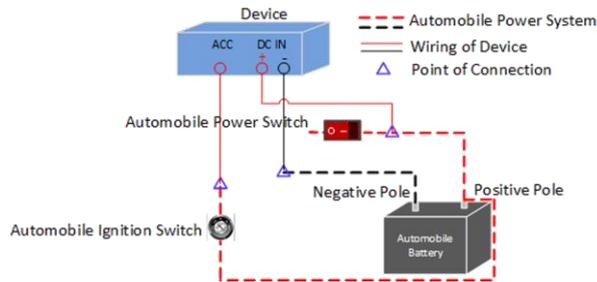


Figure 2-2 Shutdown Delay

## Note

- Contact the automobile manufacturer for the connection information of starting switch.
- The automobile ignition switch, also called car key, controls the startup and shutdown of your automobile. Most of automobiles adopt positive pole ignition switch currently.
- The normal automobile power refers to the main power of the automobile power supply system. After the automobile is off, the normal automobile power still provides direct-current source for the other devices inside and generally a main switch is used to turn on/off it.

## What to do next

Configure parameters of the function. Refer to User Manual for details.

## 2.1.2 Scheduled Shutdown

### Steps

1. Connect **DC IN +** and **ACC** of the device to the positive pole of automobile batteries.
2. Connect **DC IN -** of the device to the negative pole of automobile batteries.
3. Place fuse into the fuse holder.

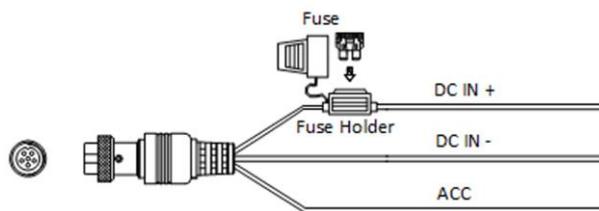


Figure 2-3 Power Cord

## Result

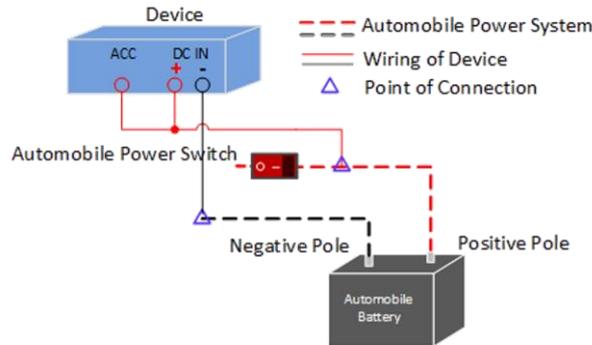


Figure 2-4 Scheduled Shutdown

## What to do next

Configure parameters of the function. Refer to User Manual for details.

## 2.2 Alarm Input Connection

The device adopts the high/low-level electrical signals triggering (high level: 6 to 36 VDC; low level: 0 to 5 VDC) to realize alarm input. And in order to avoid error report caused by voltage fluctuation, no alarm will be triggered by voltage ranging of 5 to 6 VDC.


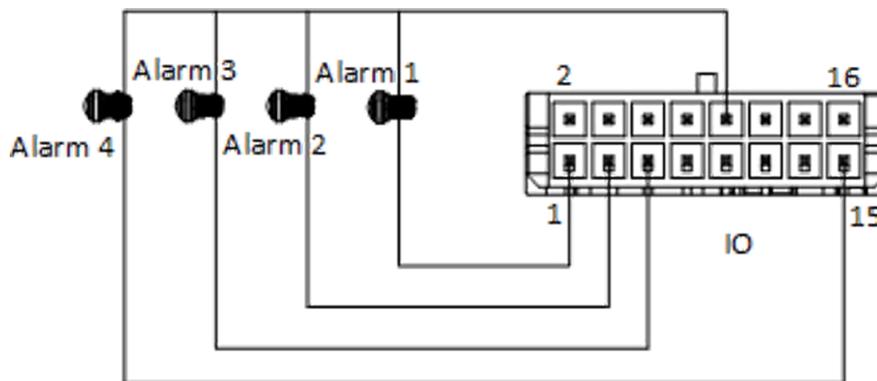


Figure 2-5 Alarm Input Connection

## 2.3 Sensor-In Wiring

### Steps

1. Connect the delivered extension cable to I/O interface.
2. Connect the automobile braking, reversing, left-turn, and right-turn signals to sensor-in interface.

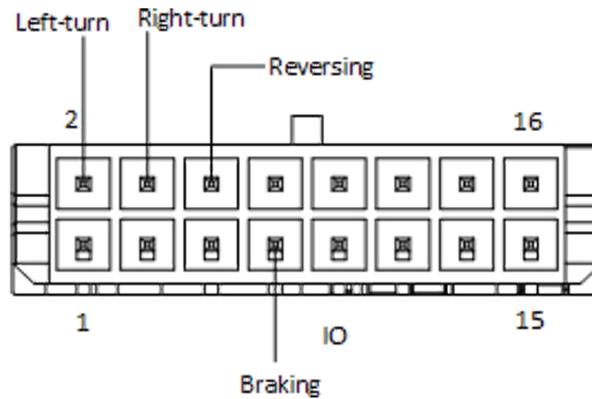

**Figure 2-6 Sensor-In Wiring**

## 2.4 Power on Device

Connect the device to power supply after all the installations above are finished. You can view the indicators to get knowledge of the device status.

---

### Note

The indicator types vary with different models. Here the most comprehensive indicators are introduced.

---

- Power indicator (PWR)
  - Solid green: Device is powered on.
  - Solid red: Device is standby.
- Ready indicator (RDY)
  - Solid green: Device starts up normally.
- Recording indicator (REC)
  - Solid green: Device is recording normally.
- ANT indicator (ANT)
  - Unlit: Dialing module is abnormal.
  - Solid green: Device is dialing.
  - Flashing green: Dialing up succeeded.
- Alarm indicator (ALM)
  - Red: Alarm occurs.

## Chapter 3 Activation

For the first-time access, you need to activate the device by setting an admin password. No operation is allowed before activation. The device supports multiple activation methods. In this section, we introduce activation via web browser.

### 3.1 Default Information

Device default IP address and user name are as follows.

- Default IP address: 192.168.1.64
- Default user name: admin.

### 3.2 Activate via Web Browser

You can activate the device via web browser.

#### Before You Start

Ensure your device and computer are in the same network segment.

#### Steps

1. Visit device IP address via web browser.
2. Enter **Password**.

---

#### Note

We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

---

3. Confirm password.
4. Click **OK**.

## Chapter 4 Basic Operation

### 4.1 Login

You can get access to the device via web browser.

#### Steps

1. Visit the IP address of the device via web browser.
2. Enter the user name and password.
3. Click **Login**.



Follow the installation prompts to install the plug-in before other operations.

---

### 4.2 Dial

Set dialing parameters.

#### Before You Start

Install 3G/4G SIM card and connect 3G/4G antenna to your recorder.

#### Steps

1. Go to **Configuration** → **Network** → **Basic Settings** → **3G/4G**.
2. Check **Enable**.
3. Click **Dial Parameters**.
4. Select **Network Mode**.
  - Automatic: The recorder will automatically switch to the strongest network.
  - Auto-Search and Auto-Switch: Network priority: 4G > 3G > 2G. The recorder will automatically connect the network of high priority.
  - 3G: The recorder only connects 3G network.
  - 4G: The recorder only connects 4G network.
5. Optional: To connect private network, enter **Access Number**, **User Name**, **Password**, and **APN**.
6. Click **Save**.
7. Optional: Click **Wireless Dial-up Status** to view dialing status.

## 4.3 Connect to EHome Platform

EHome is a platform access protocol. The device can be remotely accessed via EHome platform.

### Before You Start

Create the device ID on EHome platform.

### Steps

1. Go to **Configuration** → **Network** → **Advanced Settings** → **Platform Access**.
2. Check **Enable**.
3. Select **Platform Access Mode** as **EHome Platform**.
4. Select **Server Address Type**. **IP Address** and **Domain Name** are selectable.
5. Enter **Server Address**, **Server Port**, and **Device ID**.

#### Server Address

Enter the static IP address of EHome platform.

#### Server Port

The default value is 7660.

#### Device ID

The ID of the device registered on the EHome platform. If you leave it empty, device logs in to the platform with serial No.

6. Click **Save**.

## 4.4 Manage IP Camera

---



### Note

The section is only available for device supporting IP camera.

---

### 4.4.1 Activate IP Camera

Before adding an IP camera, activate it by setting a password.

#### Steps

1. Go to **Configuration** → **System** → **Camera Management**.
2. Select an inactive IP camera.

### **Note**

We highly recommend you to create a strong password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

---

3. Click **Activation**.
4. Enter **New Password**.
5. Confirm password.
6. Click **OK**.

### 4.4.2 Add IP Camera

You can add the activated IP cameras.

#### **Before You Start**

Make sure the device and camera to add are in the same network segment.

#### **Steps**

1. Go to **Configuration** → **System** → **Camera Management**.
2. Optional: If the device and the camera are in different network segment, modify IP camera address.
  - 1) Check the IP camera and click **Modify**.
  - 2) Enter **IP Address** and **Password**.
  - 3) Click **OK**.
3. Select a camera and click **Add**.

---

### **Note**

If the passwords of the device and camera are same, click **Quick Add** to add the camera.

---

4. Enter IP camera information.
5. Click **OK**.

### 4.4.3 Edit IP Camera

You can visit, delete, and modify the added IP cameras.

#### **Before You Start**

If the device contains only one network card, you can visit IP camera via the device directly. If the device contains dual network cards, you need to enable virtual host function before visiting IP camera. Go to **Configuration** → **Network** → **Advanced Settings** → **Other** and check **Enable Virtual Host**.

### Steps

1. Go to **Configuration** → **System** → **Camera Management**.
2. Optional: Click address of IP camera to visit.
3. Optional: Check IP camera(s) and click **Delete** to delete the added IP camera(s).

## Chapter 5 FAQ

### 5.1 Why does my device fail to start up after connecting the power?

#### Question

Why does my device fail to start up after connecting the power?

#### Answer

- Check power supply specification.
- If PWR indicator is unlit, check power supply and fuse installation.
- If PWR indicator is red, lock the dummy HDD.
- The manual controller is disabled. Unlock the manual controller with key.

### 5.2 Why does my device fail to dial?

#### Question

Why does my device fail to dial?

#### Answer

- Check 3G/4G antenna connection.
- Place 3G/4G antenna away from metal objects.
- Check your SIM card balance.
- Ensure 3G/4G dial parameters are correct.

### 5.3 Why does my device make a beeping sound after startup?

#### Question

Why does my device make a beeping sound after startup?

#### Answer

- Install at least one HDD and format it after installation.
- Go to HDD management interface to check HDD status. Replace it with a good one when it is error.
- Go to exception settings interface to cancel the beeping sound and use the device without HDD.



See Far, Go Further